




Multiplex Communication System – BEAN

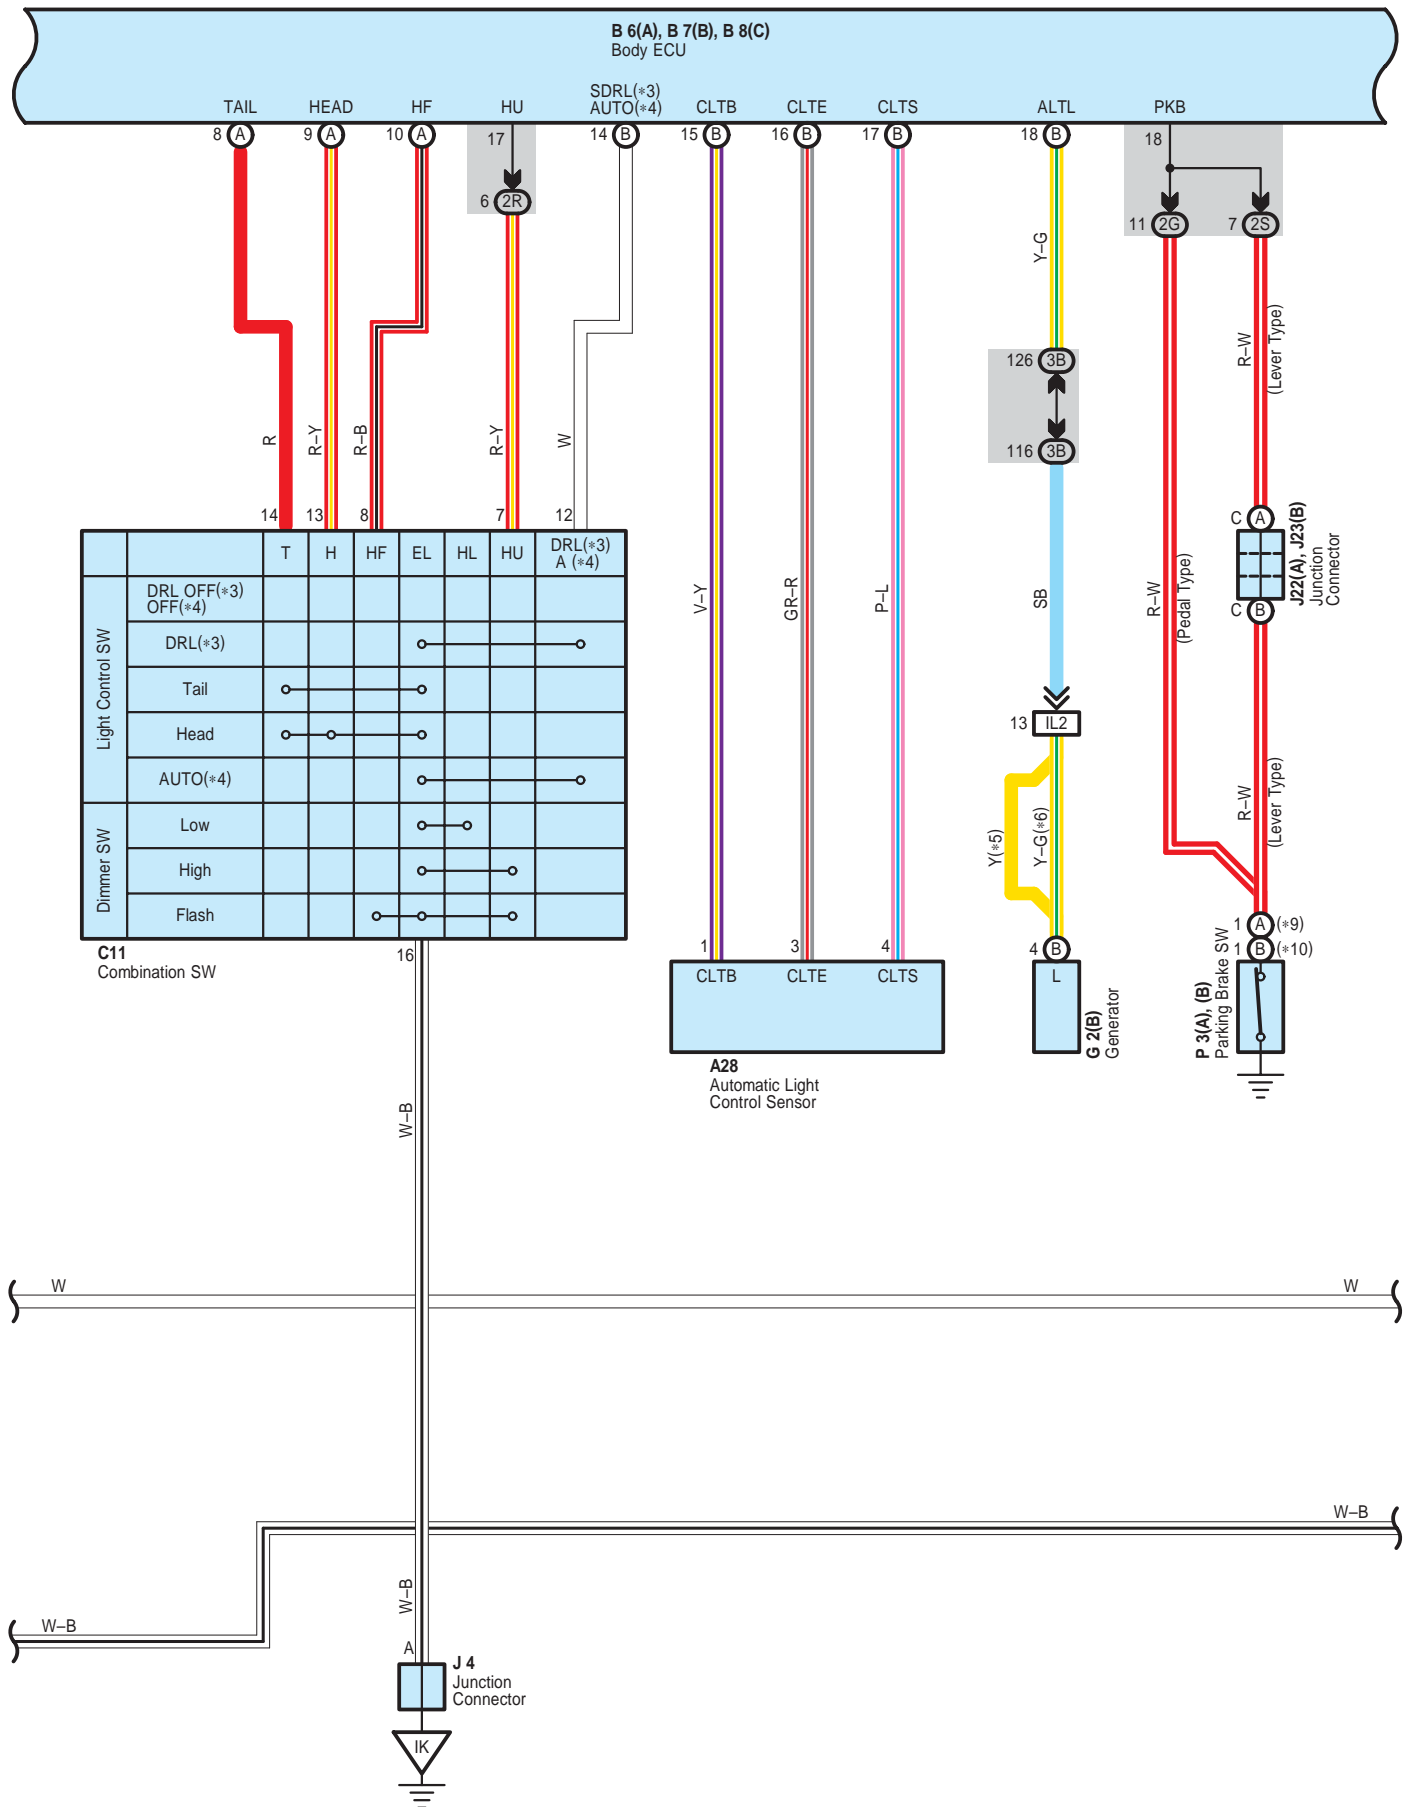


B 6(A), B 7(B), B 8(C)
Body ECU

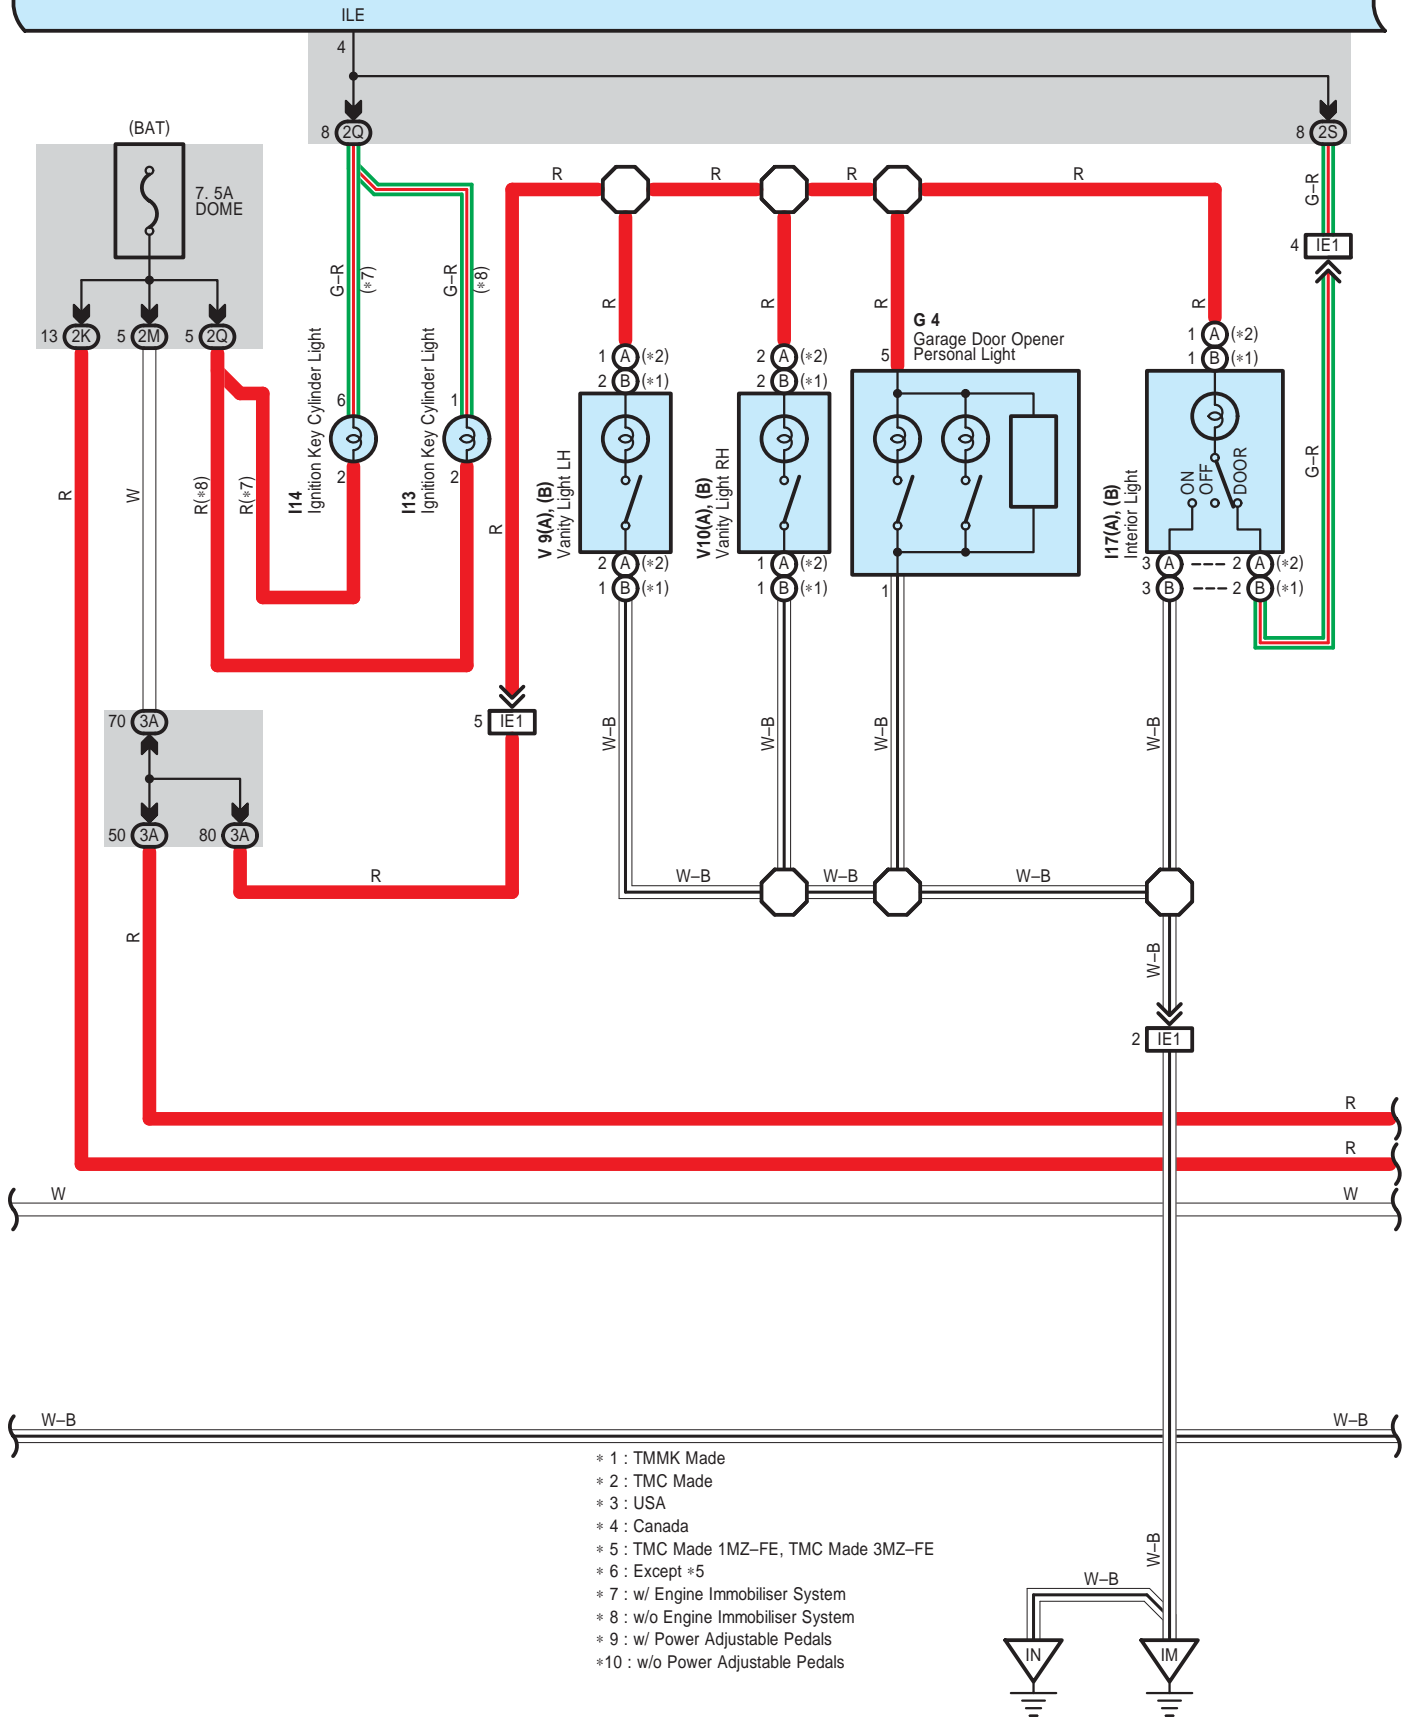



Multiplex Communication System – BEAN

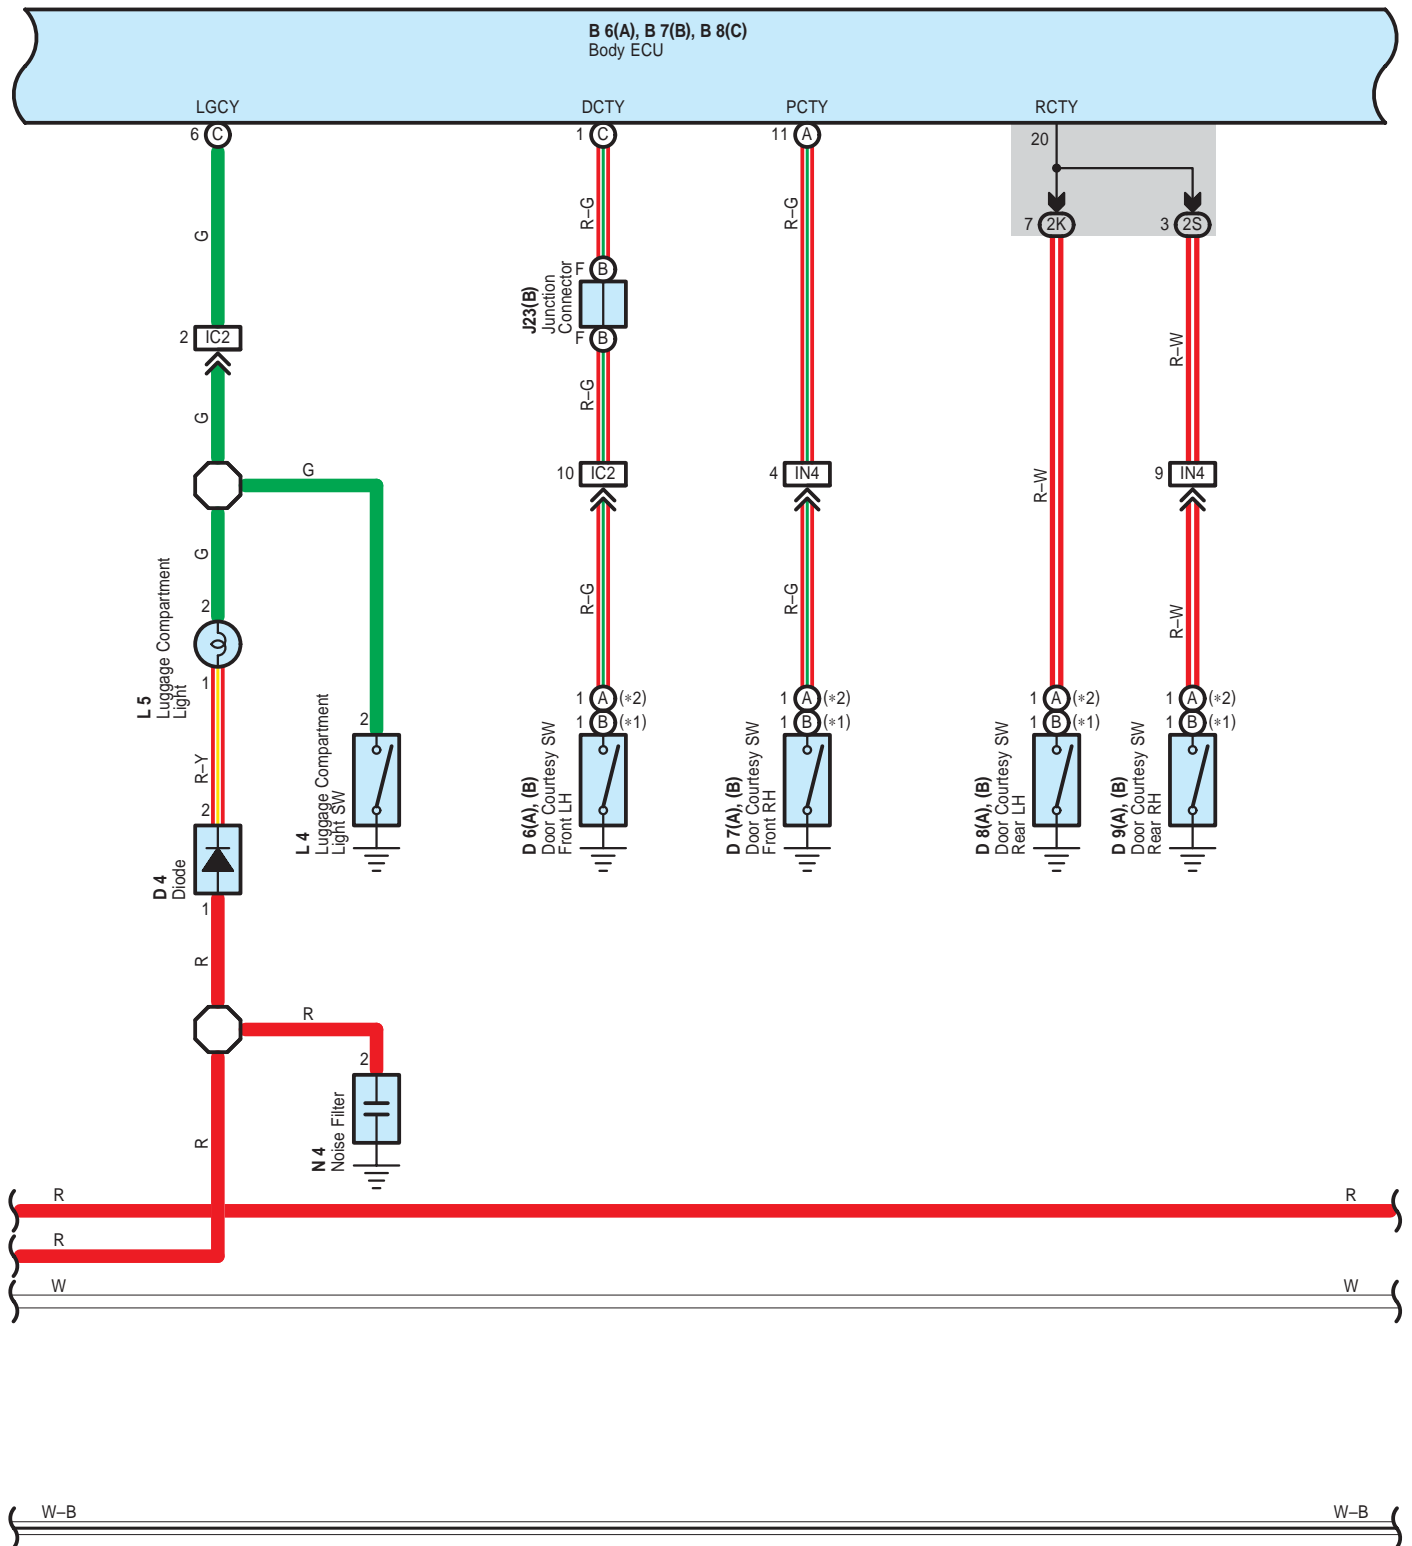

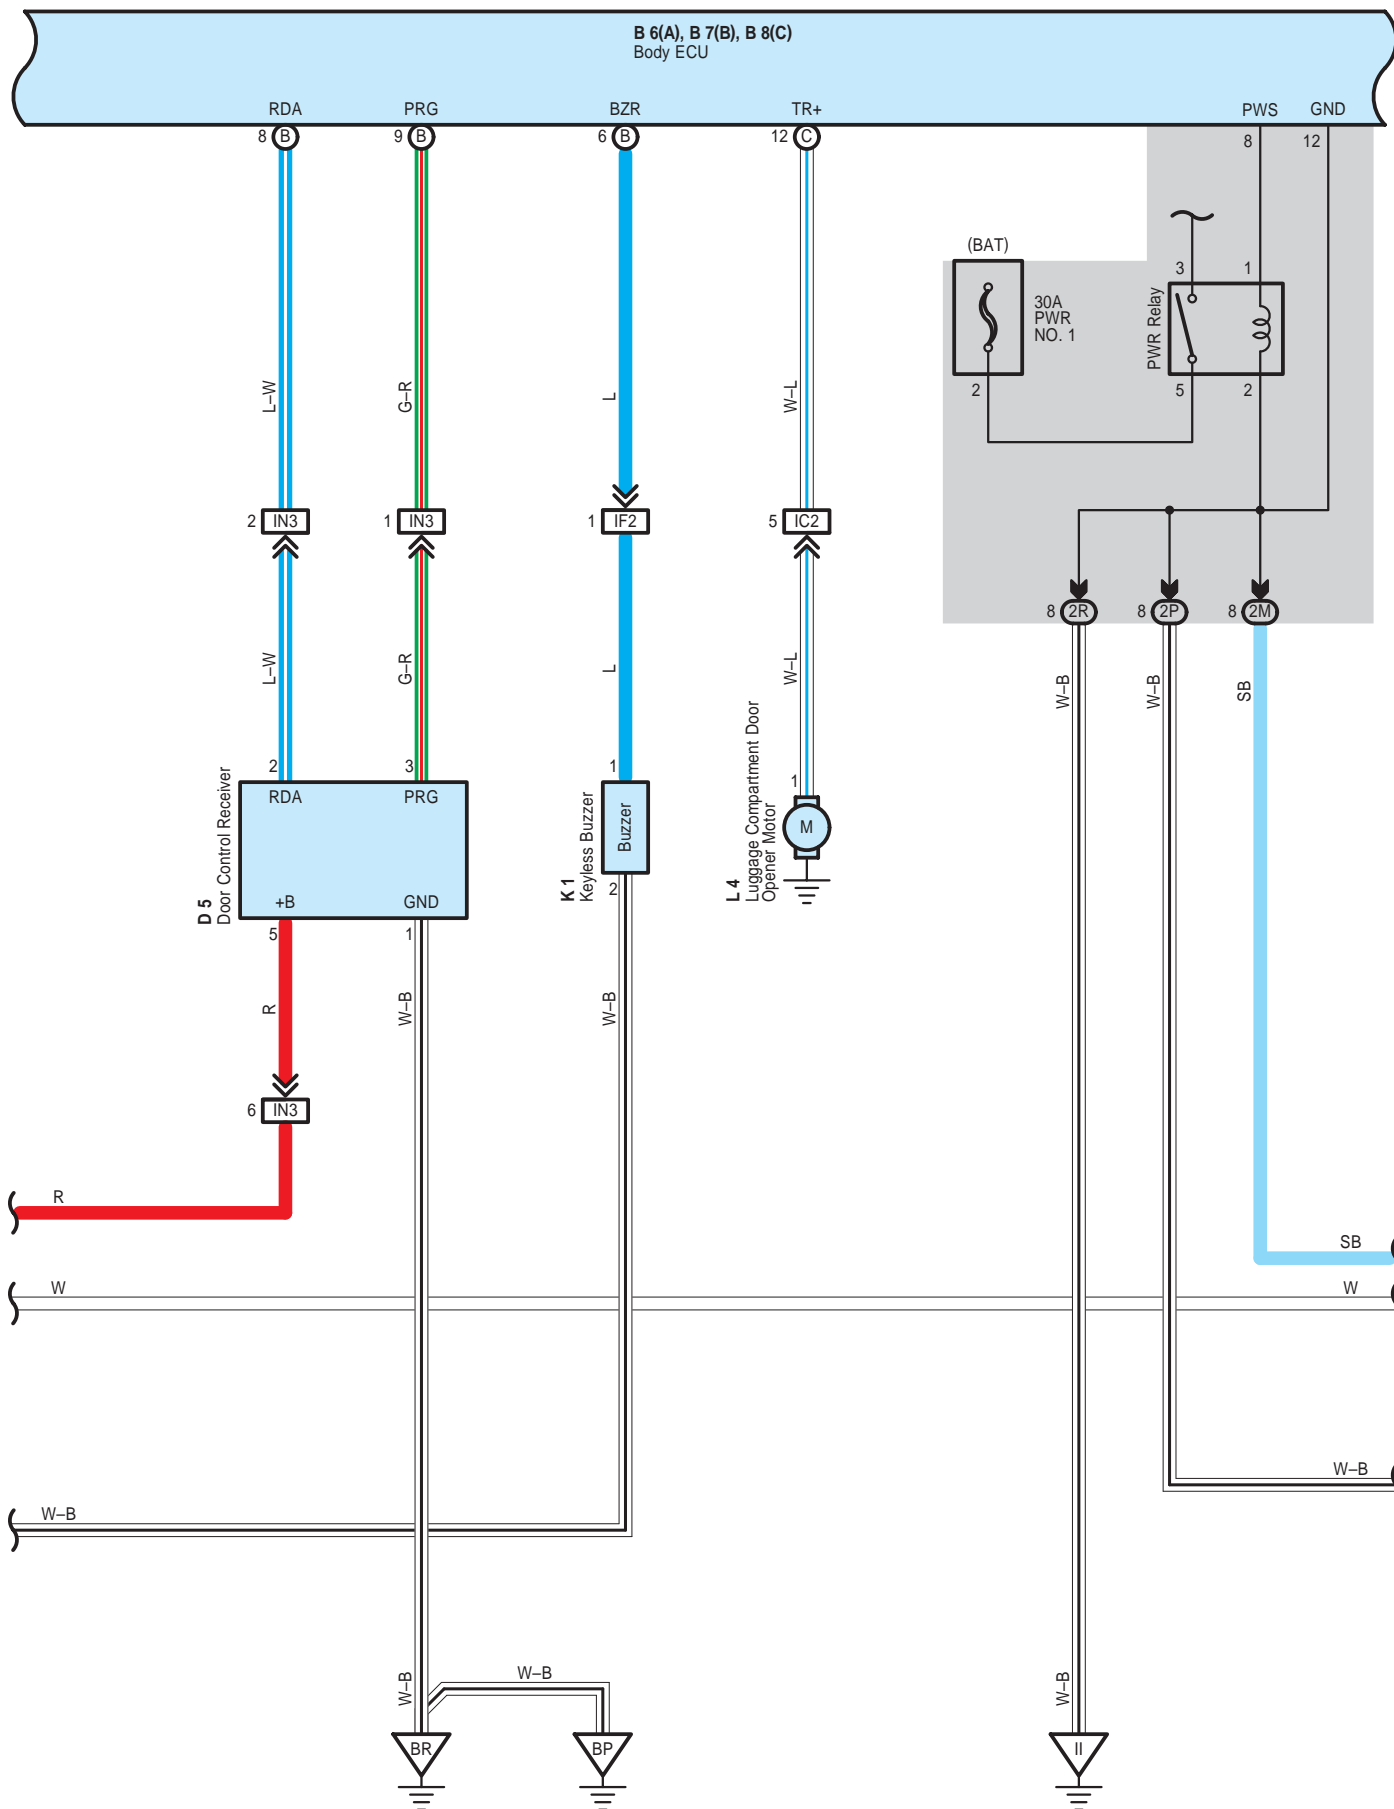



Multiplex Communication System – BEAN

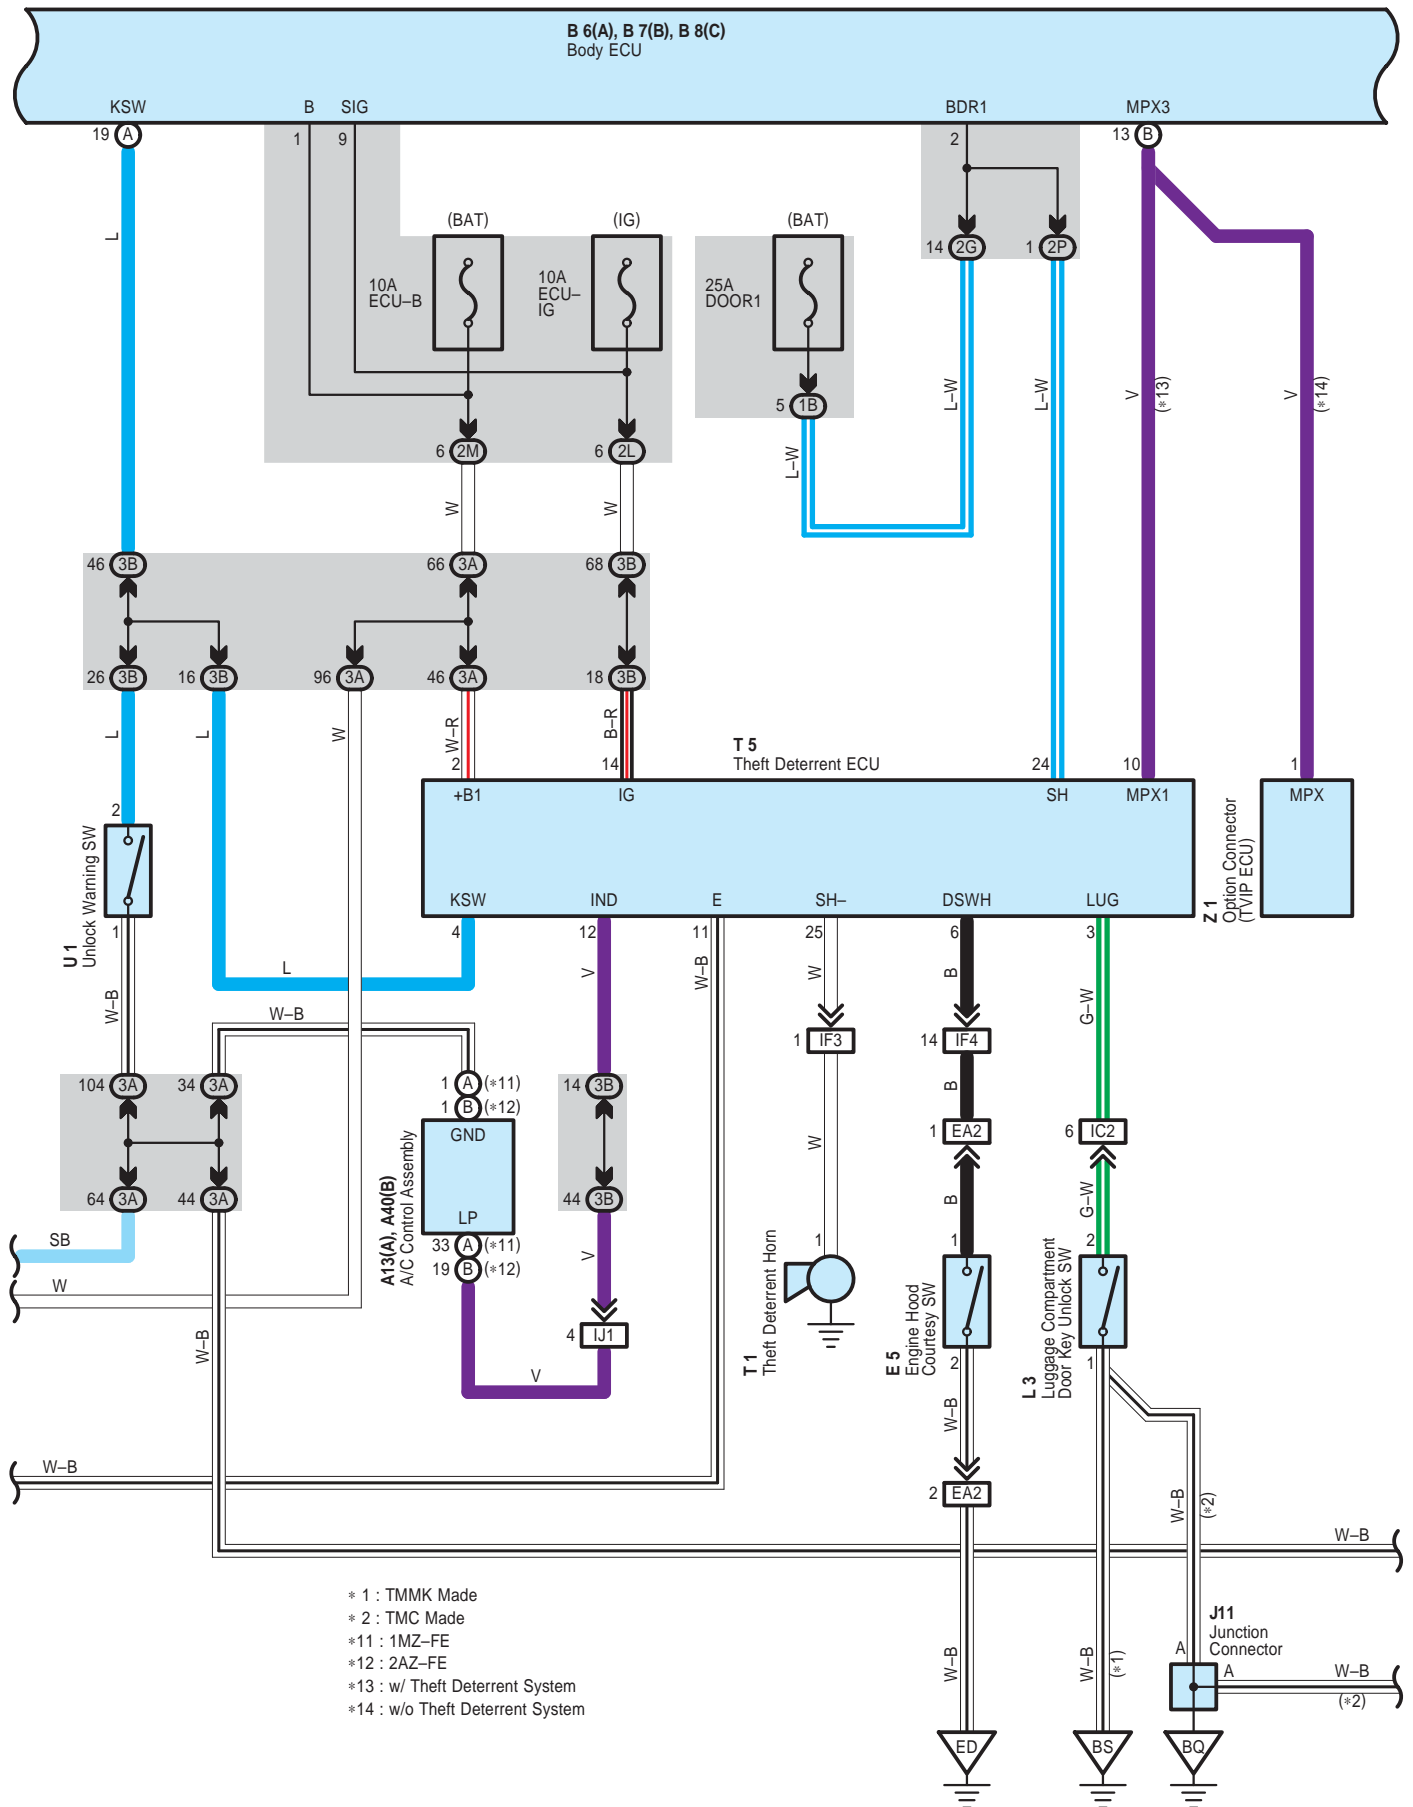

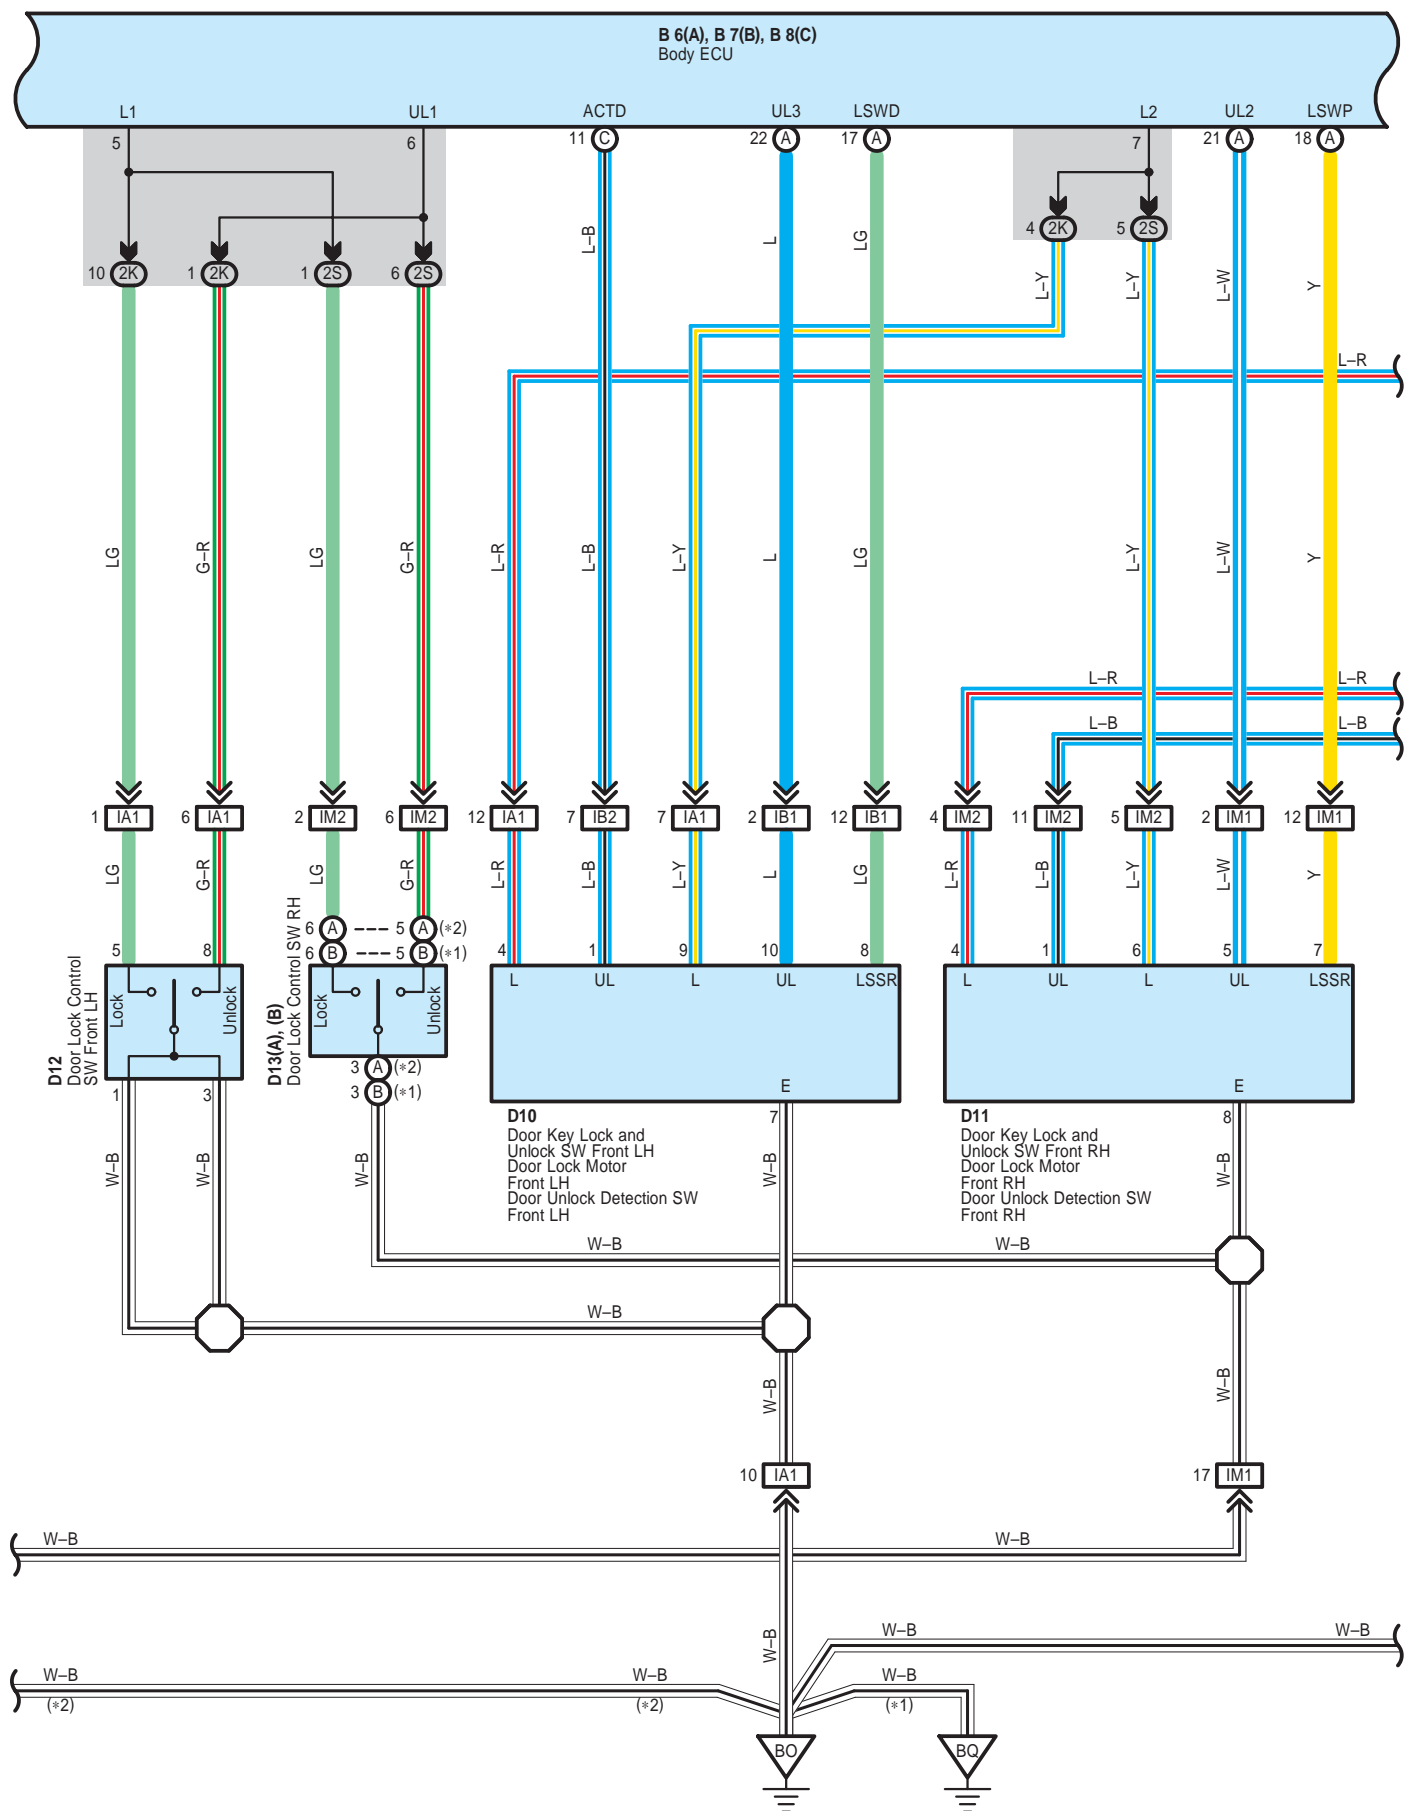

- * 1 : TMMK Made
- * 2 : TMC Made

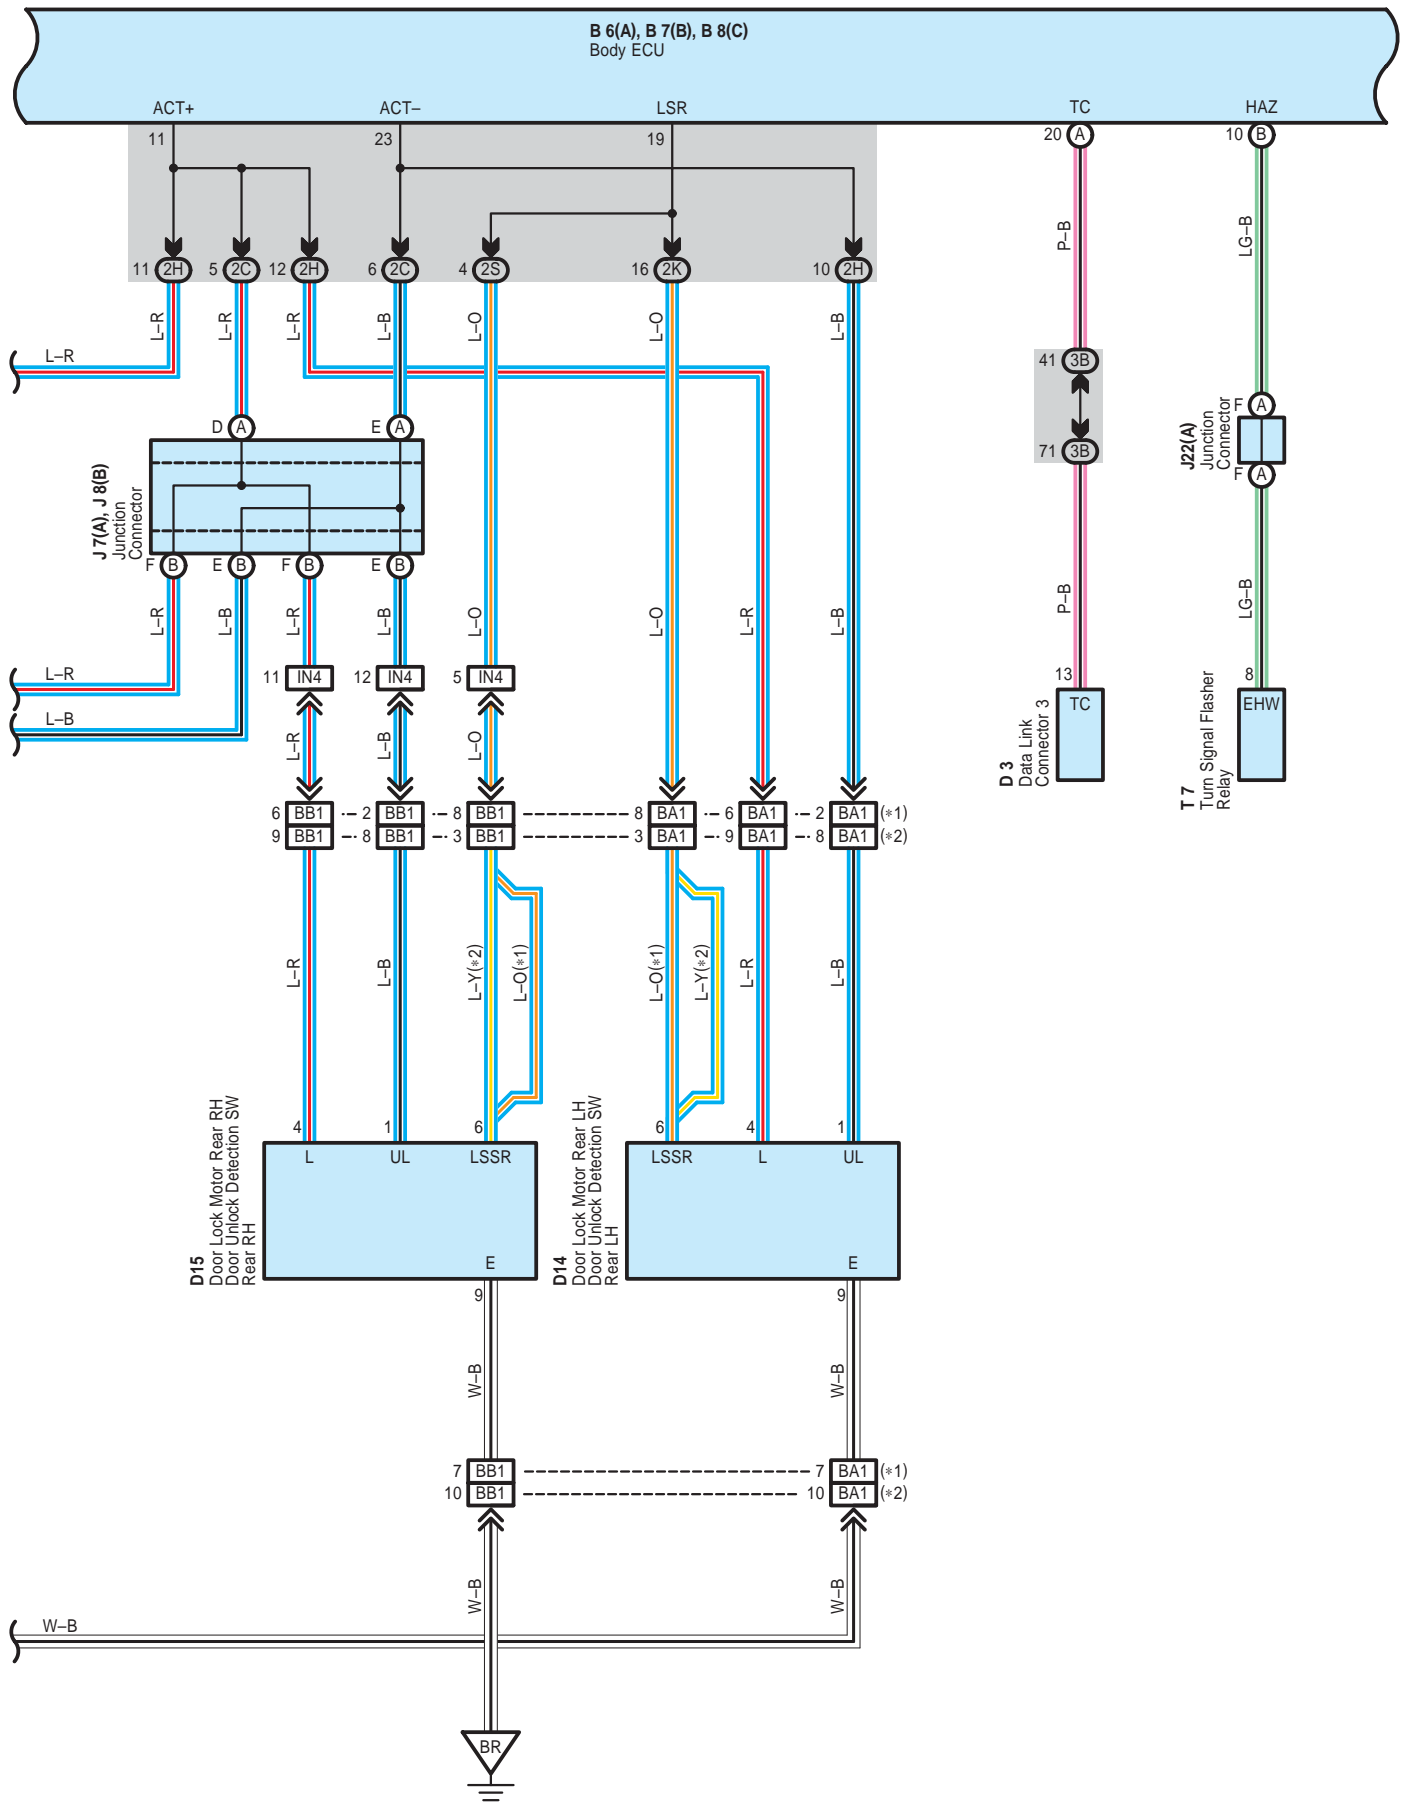

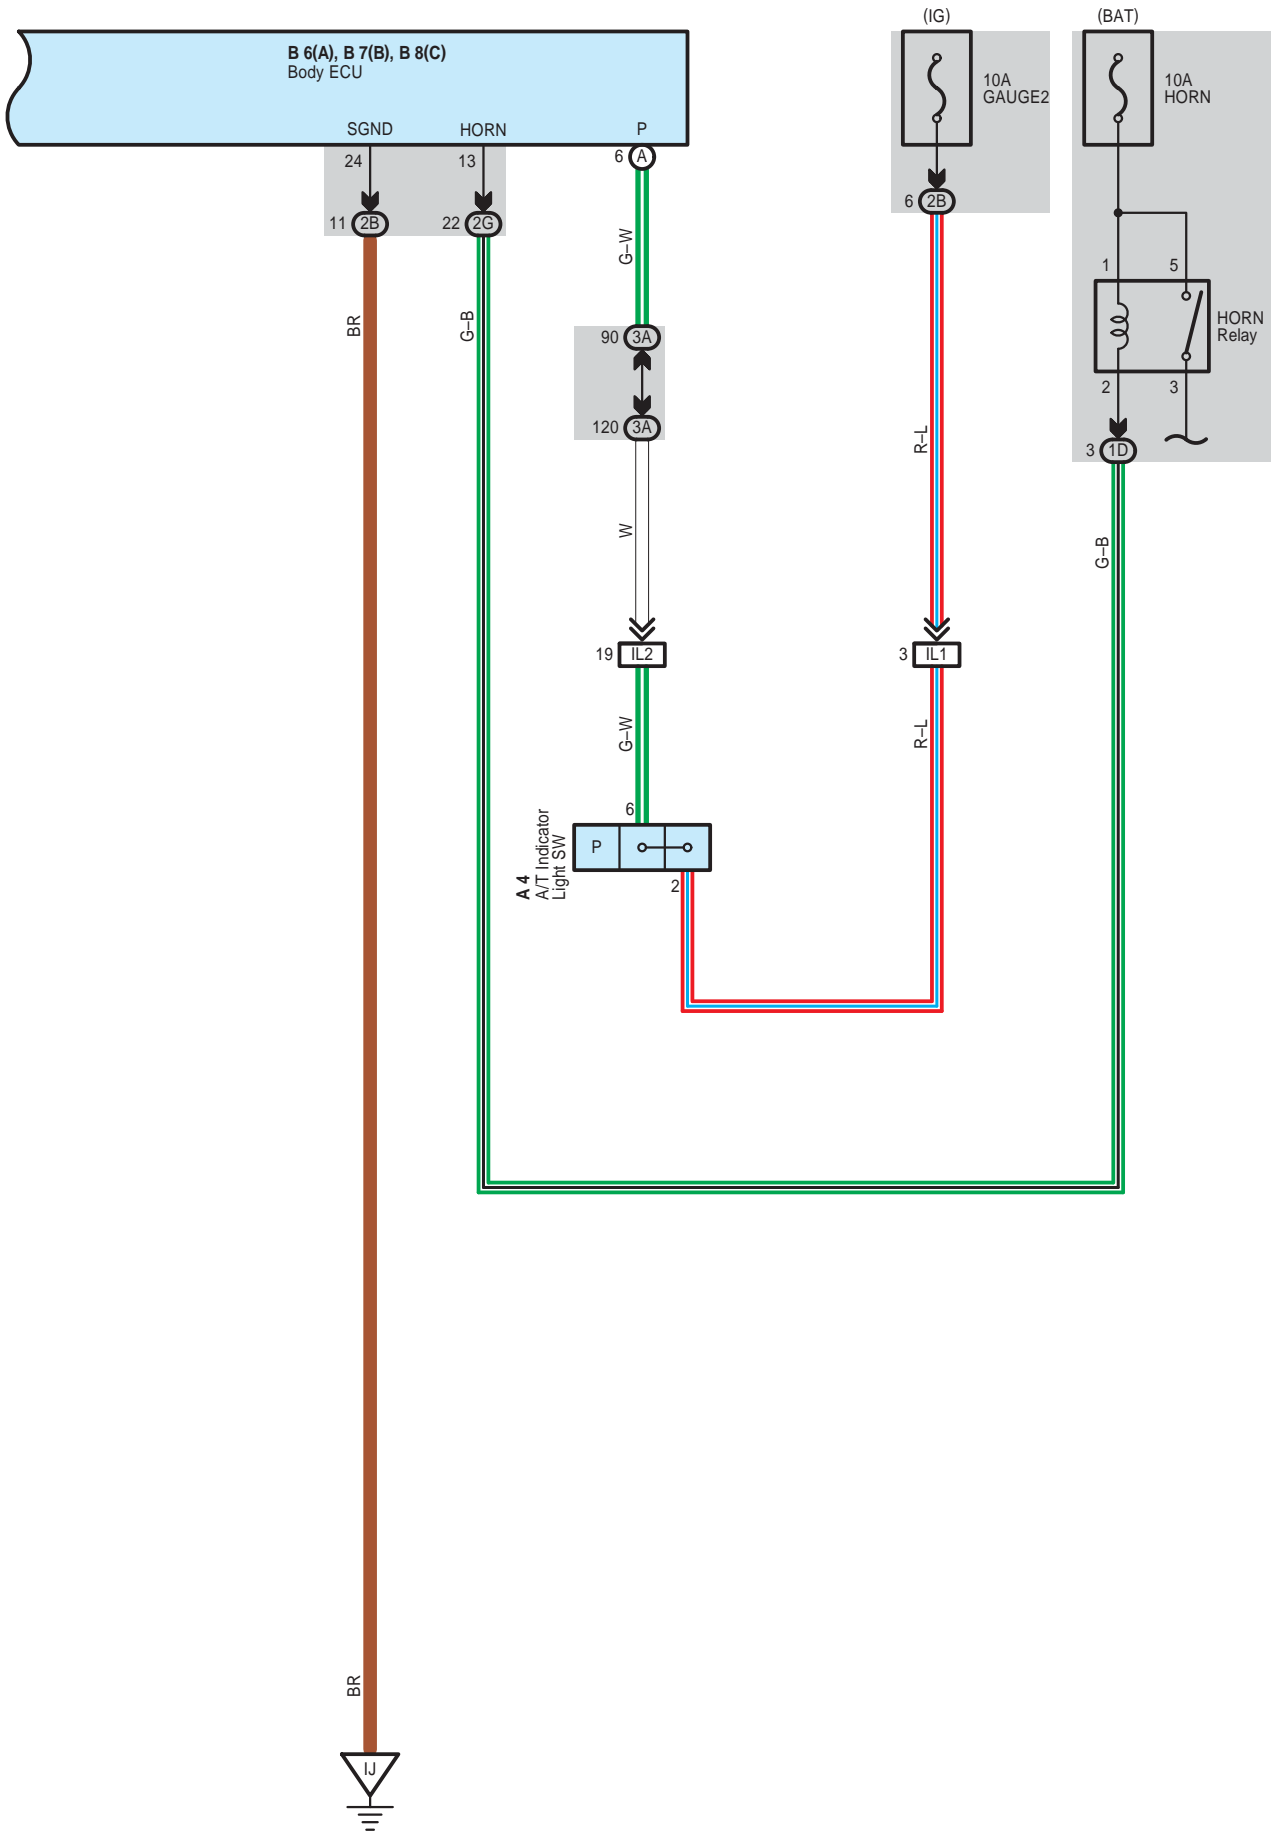

Multiplex Communication System – BEAN

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A4	38 (*1)	D13	A 44	J7	A 43
	40 (*2)		B 44	J8	B 43
A13	A 42	D14	44	J11	44
A28	42	D15	44	J22	A 43
A40	B 42	D16	38 (*1)	J23	B 43
B6	A 42		40 (*2)	K1	39 (*1)
B7	B 42	E5	38 (*1)		41 (*2)
B8	C 42		40 (*2)	L3	45
C7	A 42	G2	B 38 (*1)	L4	45
C8	B 42		40 (*2)	L5	45
C11	42	G4	44	N4	45
D3	42	H1	38 (*1)	P3	A 43
D4	44		40 (*2)		B 43
D5	44	H2	38 (*1)	T1	39 (*1)
D6	A 44		40 (*2)		41 (*2)
	B 44	H3	38 (*1)	T5	43
D7	A 44		40 (*2)	T7	43
	B 44	H4	38 (*1)	U1	43
D8	A 44		40 (*2)		43
	B 44	I13	43	V9	A 45
D9	A 44	I14	43	V10	A 45
	B 44		43		B 45
D10	44	I17	A 44	Z1	43
D11	44		B 44		43
D12	44	J2	43		
		J4	43		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

* 1 : 1MZ-FE, 3MZ-FE * 2 : 2AZ-FE * 3 : w/ Power Seat * 4 : w/o Power Seat



: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1C		
1D		
1E		
1F		
1G		
1H		
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2C		
2E	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2F		
2G		
2H	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
2K		
2L	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2M		
2P		
2Q		
2R		
2S		
3A	34	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
3B		



: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	48 (*1)	Engine Room Main Wire and Engine Room No.2 Wire (Radiator Side Support LH)
	49 (*2)	
IA1	50	Front Door LH Wire and Floor Wire (Left Kick Panel)
IB1	50	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IB2		
IC2	50	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE1	50	Instrument Panel Wire and Roof Wire (Inside of Front Left Pillar)
IF2	50	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IF3		
IF4		
IJ1	51	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
IL1	51	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IL2		
IM1	51	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM2		
IN3	51	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IN4		
BA1	52	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	52	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)

* 1 : 1MZ-FE, 3MZ-FE * 2 : 2AZ-FE * 3 : w/ Power Seat * 4 : w/o Power Seat

Multiplex Communication System – BEAN



: Ground Points

Code	See Page	Ground Points Location
EB	48 (*1)	Right Fender
	49 (*2)	
EC	48 (*1)	Left Fender
	49 (*2)	
ED	48 (*1)	
	49 (*2)	
II	50	Cowl Side Panel LH
IJ	50	Instrument Panel Brace LH
IK		
IM	50	Instrument Panel Reinforcement RH
IN		
BO	52	Under the Driver's Seat
BP	52	Under the Front Passenger's Seat
BQ	52	Front Side of Rear Quarter Wheel House LH
BR	52	Front Side of Rear Quarter Wheel House RH
BS	52	Lower Back Panel Center

* 1 : 1MZ-FE, 3MZ-FE * 2 : 2AZ-FE * 3 : w/ Power Seat * 4 : w/o Power Seat

