


INSPECTION

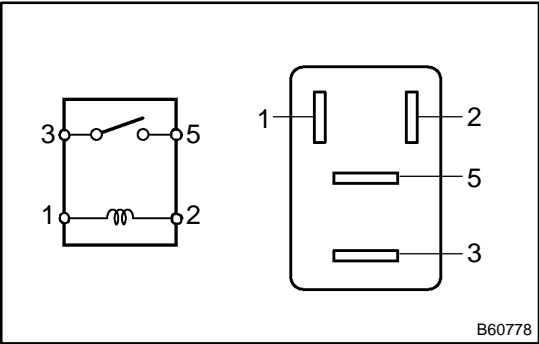

1. INSPECT RELAY (HORN)

- (a) Remove the HORN relay from the engine room R/B.
- (b) Check the HORN relay resistance.

Standard:

Tester Connection	Specified Condition
3 – 5	1 k Ω or higher
3 – 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.