


REAR SPEAKER ASSY REPLACEMENT

6709G-01


HINT:

COMPONENTS: [See page 67-1](#)

1. ☐ REMOVE REAR SEAT CUSHION ASSY ([See page 72-21](#))
2. ☐ REMOVE REAR SEAT BACK ASSY RH ([See page 72-21](#))
3. REMOVE REAR SEAT BACK ASSY LH
4. REMOVE REAR SIDE SEAT BACK ASSY RH
([See page 72-21](#))
5. REMOVE REAR SIDE SEAT BACK ASSY LH
6. REMOVE ROOF SIDE GARNISH INNER RH(W/O CURTAIN SHIELD AIR BAG)
([See page 76-21](#))
7. REMOVE ROOF SIDE GARNISH INNER LH(W/O CURTAIN SHIELD AIR BAG)
8. REMOVE ROOF SIDE GARNISH INNER RH(W/ CURTAIN SHIELD AIR BAG)
([See page 76-21](#))
9. REMOVE ROOF SIDE GARNISH INNER LH(W/ CURTAIN SHIELD AIR BAG)
10. REMOVE REAR SEAT SHOULDER BELT COVER RH
([See page 61-13](#))
11. REMOVE PACKAGE TRAY TRIM PANEL ASSY
 - (a) Pull the package tray trim panel assy upward to disengage 2 clips.
 - (b) Put the bezel and anchor part of the seat belt through the slit part.
 - (c) Pull it as shown in the illustration to disengage 5 claws.
 - (d) Disconnect the connector and remove the package tray trim panel assy.

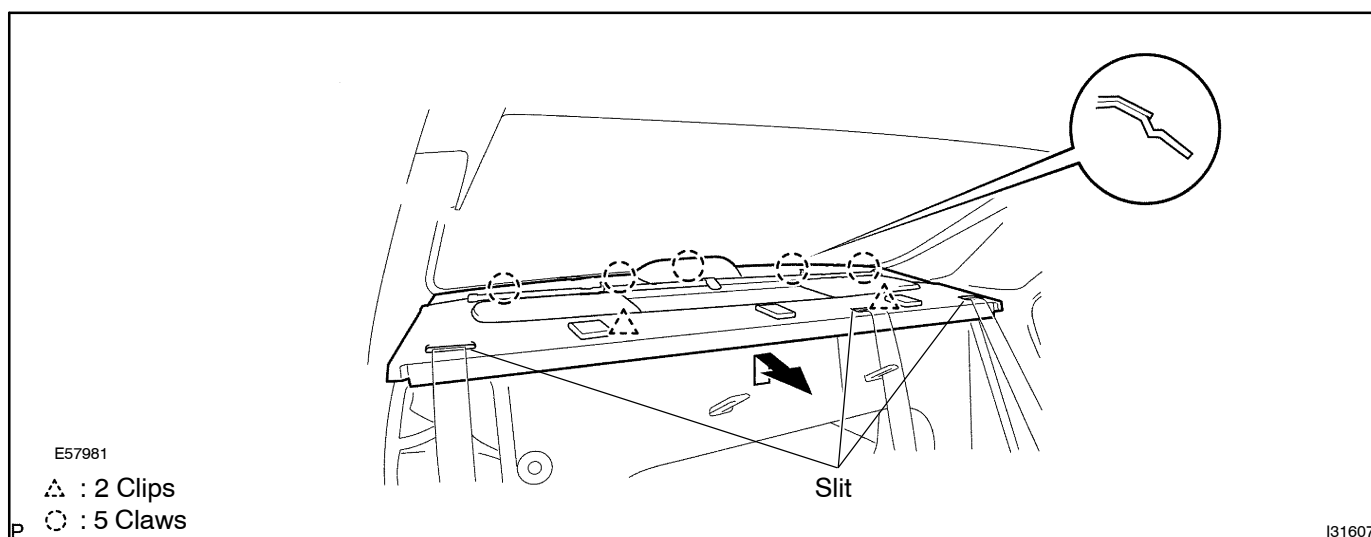


12. REMOVE REAR SEAT 3 POINT TYPE BELT ASSY OUTER
(See page 61-13)
13. REMOVE REAR SEAT INNER W/CENTER BELT ASSY RH
(See page 61-13)
14. REMOVE REAR SEAT INNER W/CENTER BELT ASSY LH
(See page 61-13)

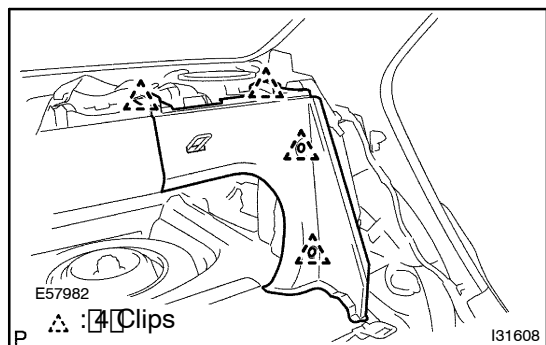


15. REMOVE ROOM PARTITION BOARD LH

- (a) Disengage 4 clips and remove the room partition board LH.

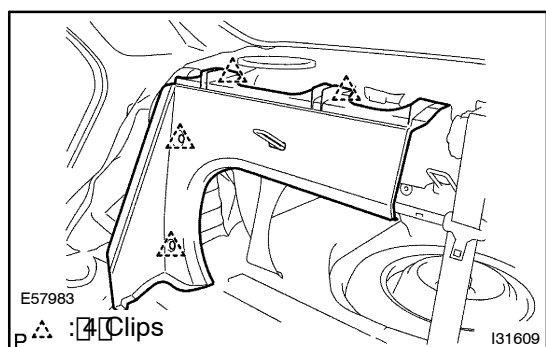


16. REMOVE ROOM PARTITION BOARD RH

- (a) Disengage 4 clips and remove the room partition board RH.

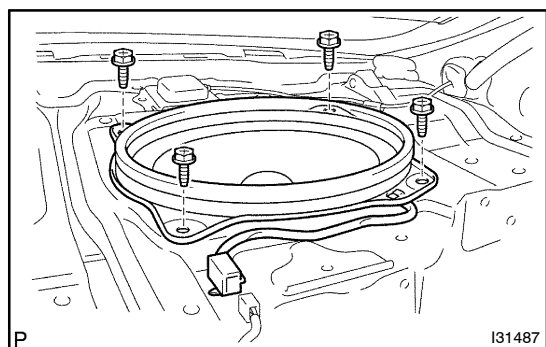

17. REMOVE REAR SPEAKER ASSY

- (a) Disconnect the connector.
- (b) Remove the 4 screws and rear speaker assy.

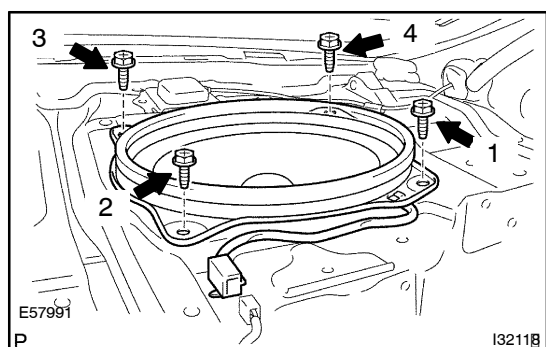

18. INSTALL REAR SPEAKER ASSY

- (a) Install the rear speaker assy with the 4 screws.
NOTICE:
Install them in the order shown in the illustration.
- (b) Connect the connector.

19. INSTALL REAR SEAT INNER W/CENTER BELT ASSY LH
(See page 61-13)
20. INSTALL REAR SEAT 3 POINT TYPE BELT ASSY OUTER
(See page 61-13)
21. INSTALL REAR SEAT INNER W/CENTER BELT ASSY RH
(See page 61-13)
22. INSTALL REAR SIDE SEAT BACK ASSY LH
(See page 72-21)
23. INSTALL REAR SIDE SEAT BACK ASSY RH
(See page 72-21)
24. INSTALL REAR SEAT BACK ASSY RH (See page 72-21)
25. INSTALL REAR SEAT BACK ASSY LH