


## REPLACEMENT

HINT:


COMPONENTS: [See page 60-55](#)

1. **PRECAUTION** ([See page 60-1](#))
2. **SEPARATE BATTERY NEGATIVE TERMINAL** ([See page 60-1](#))
3. **REMOVE ENGINE UNDER COVER LH**

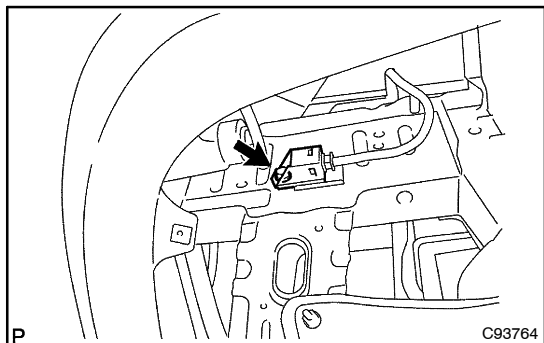

### 4. REMOVE AIR BAG SENSOR FRONT LH

- (a) Remove the bolt and airbag sensor front LH.

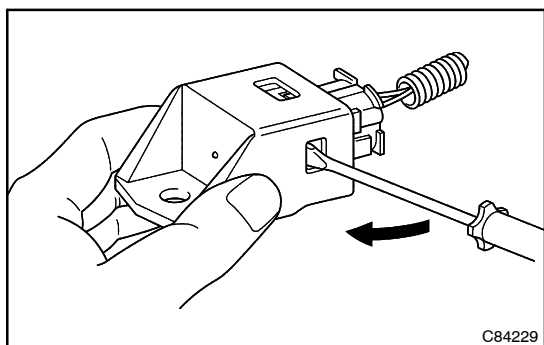

- (b) Disconnect the connector from the airbag sensor front LH.

HINT:

Insert a screwdriver in any of the three opening sections of the sensor and slide the sensor to disconnect it from the connector.

### 5. INSPECT AIR BAG SENSOR FRONT LH

([See page 60-9](#))

### 6. INSTALL AIR BAG SENSOR FRONT LH

- (a) Check that the ignition switch is OFF.  
 (b) Check that the battery negative (-) terminal is disconnected.

**NOTICE:**

**Do not start the operation for 90 seconds after removing the terminal.**

- (c) Install the airbag sensor front LH with the bolt.

**Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)**

- (d) Connect the connector to the airbag sensor front LH.  
 (e) Check that no play is identified.

### 7. INSPECT SRS WARNING LIGHT ([See page 05-758](#))