
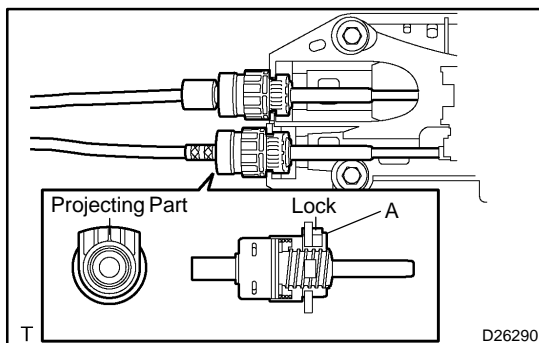
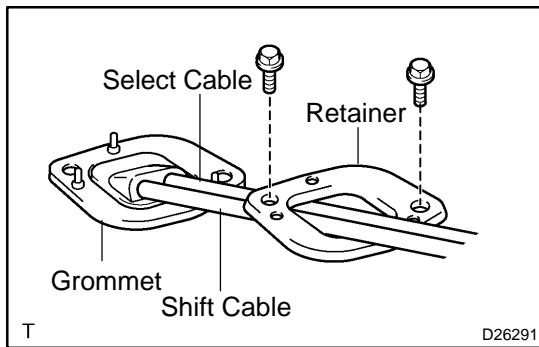


FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT REPLACEMENT

4104W-05

1. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY (SEE PAGE 71-16)
2. REMOVE AIR CONDITIONING RADIATOR ASSY (SEE PAGE 55-34)
3. REMOVE AIR BAG SENSOR ASSY CENTER (SEE PAGE 60-59)

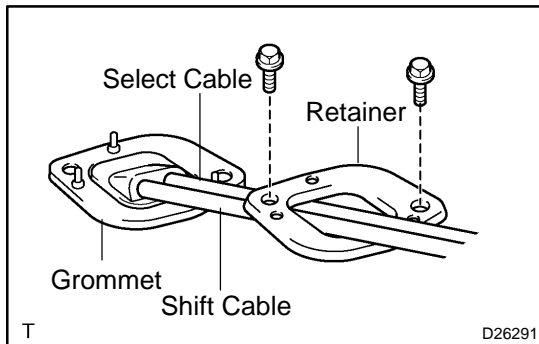

4. REMOVE FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT

- (a) Remove the clip and washer and separate the top of the select cable from the transaxle.
- (b) Remove the clip and select cable from the control cable bracket.
- (c) Turn the lock and separate the select cable from the shift lever retainer.
- (d) Remove the clip and separate the top of the select cable from the shift lever assy.
- (e) Remove the 2 retainer set bolts from the floor.
- (f) Separate the retainer from the grommet.
- (g) Remove the select cable from the grommet.
- (h) Remove the select cable through the floor hole and re-tainer.

5. INSTALL FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT

- (a) Put the select cable through the floor hole and retainer.
- (b) Install the select cable to the grommet.
- (c) Install the retainer to the grommet.

NOTICE:

Fit 3 projections of the grommet into 3 holes of the retainer.


- (d) Install the 2 retainer set bolts.

Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)

- (e) Connect the select cable to the shift lever retainer.

NOTICE:

- The projecting part of the cable outer should face upward when the select cable is installed.
- Make sure that after installation the cable outer lock is projecting from A shown in the illustration.

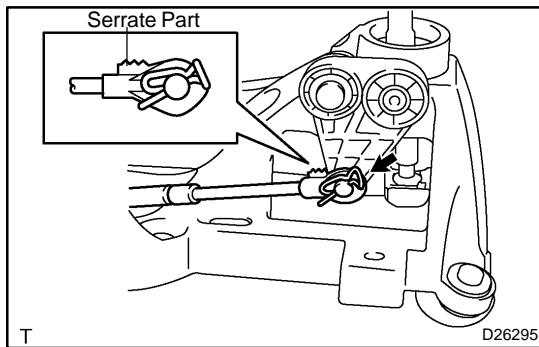

- (f) Connect the top of the select cable to the shift lever assy and install the clip.

NOTICE:

- The serrate part of the select cable point should face upward when the select cable point is connected.
 - the clip should be inserted to the direction shown in the illustration.
- (g) Connect the top of the select cable to the shift lever assy and install the clip.
- (h) Connect the select cable to the control cable bracket and install a new clip.
- (i) Connect the select cable to the transaxle and install the washer and clip.

6. INSTALL AIR BAG SENSOR ASSY CENTER (SEE PAGE 60-59)
7. INSTALL AIR CONDITIONING RADIATOR ASSY (SEE PAGE 55-34)
8. INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY (SEE PAGE 71-16)
9. INSPECT SRS WARNING LIGHT (SEE PAGE 05-1452)