


FRONT AXLE LH HUB BOLT REPLACEMENT

3006N-01


HINT:

- COMPONENTS: [See page 30-4](#)
 - Replace the RH side by the same procedures with LH side.
1. REMOVE FRONT WHEEL
 2. DISCONNECT FRONT DISC BRAKE CALIPER ASSY LH ([See page 30-19](#))
 3. REMOVE FRONT DISC

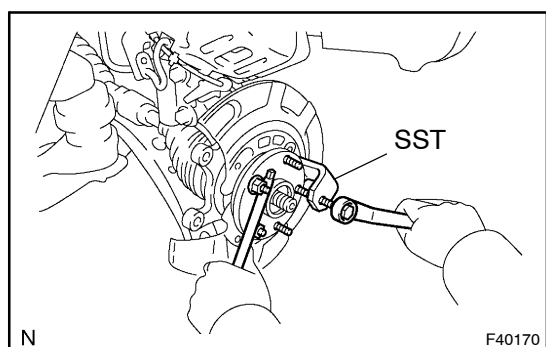

4. REMOVE FRONT AXLE LH HUB BOLT

- (a) Using SST and a screwdriver or an equivalent to hold, remove the front axle LH hub bolt.
SST 09628-10011

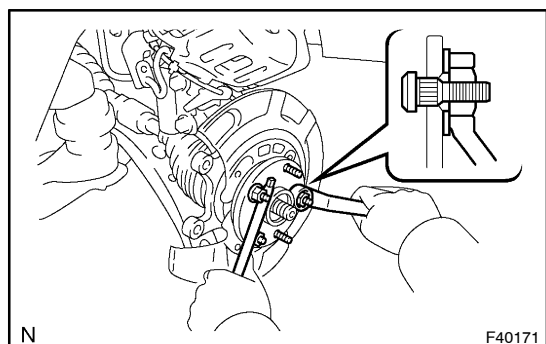

5. INSTALL FRONT AXLE LH HUB BOLT

- (a) Install a washer and nut to a new front axle LH hub bolt as shown in the illustration.
- (b) Using a screwdriver to hold, install the hub bolt by torquing the nut.

6. INSTALL FRONT DISC

7. INSTALL FRONT DISC BRAKE CALIPER ASSY LH ([See page 30-19](#))

8. INSTALL FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)