

LUGGAGE COMPARTMENT DOOR GARNISH SUB-ASSY OUTSIDE

760BS-06


REPLACEMENT

HINT:

- The installation procedures are the removal procedures in reverse order.
- A bolt without torque specification is a standard bolt (see page 03-2).

1. REMOVE LUGGAGE COMPARTMENT DOOR COVER

- (a) Remove the 15 screws and cover.

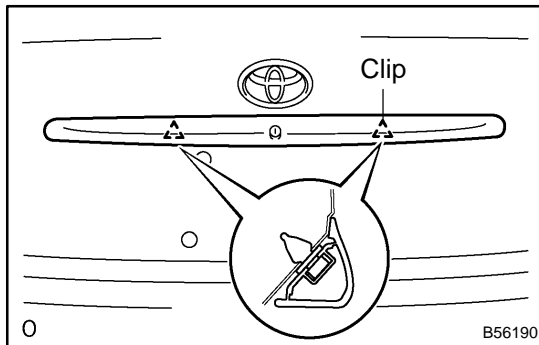

2. REMOVE LUGGAGE COMPARTMENT DOOR GARNISH SUB-ASSY OUTSIDE

- (a) Remove the 4 screws.
(b) Using a screwdriver, pry out the garnish.

HINT:

Tape the screwdriver tip before use.