


LICENSE PLATE LAMP ASSY REPLACEMENT

650CA-01

1. REMOVE LUGGAGE COMPARTMENT DOOR COVER
(See [page 76-17](#))
2. REMOVE LUGGAGE COMPARTMENT DOOR GARNISH SUB-ASSY OUTSIDE
(See [page 76-17](#))

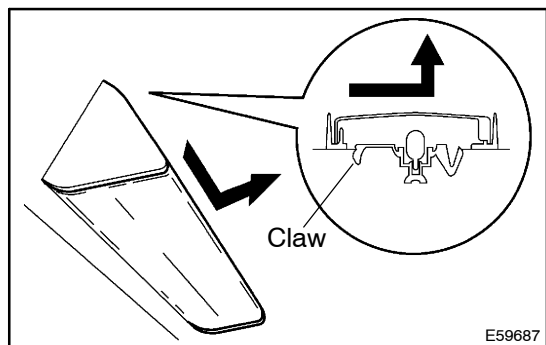

3. REMOVE LICENSE PLATE LAMP ASSY
 - (a) Pull the license plate light assy to the side of vehicle as shown in the illustration and release the claw, then disconnect the connector.