


## TC TERMINAL CIRCUIT

### CIRCUIT DESCRIPTION


Connecting terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

### WIRING DIAGRAM

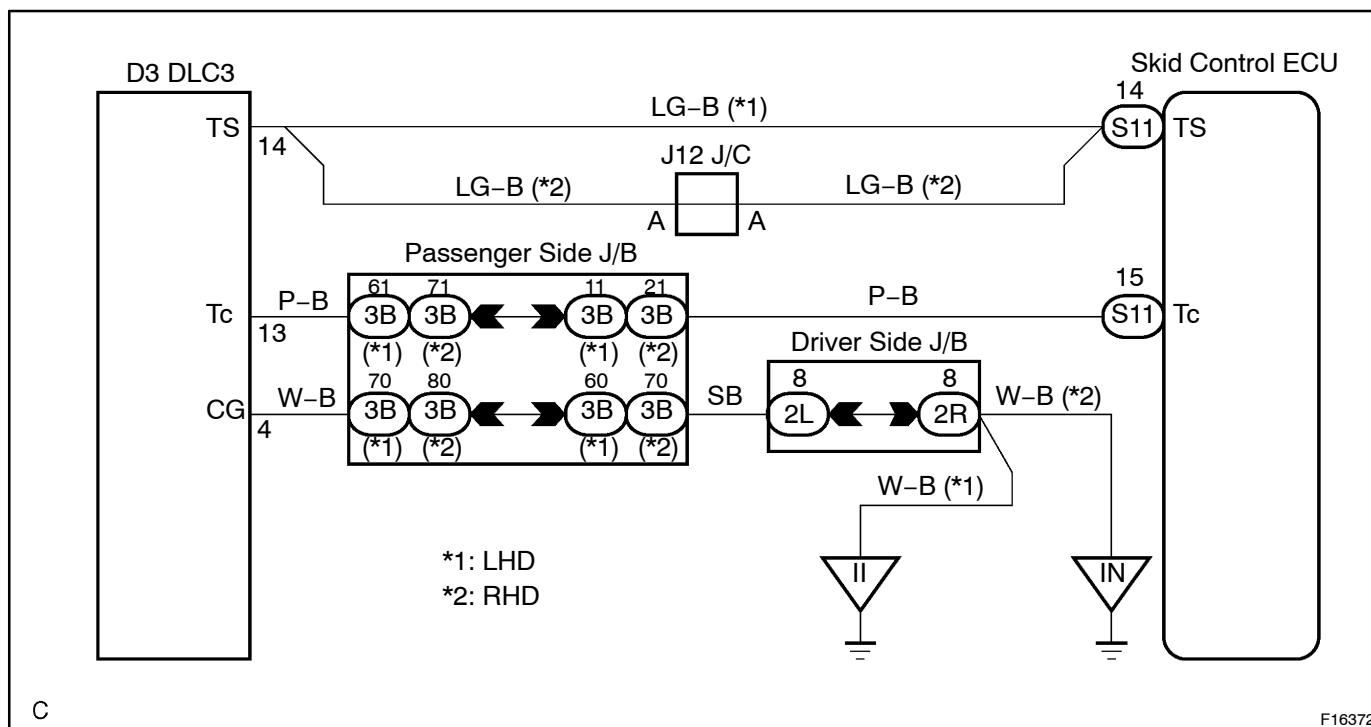

### INSPECTION PROCEDURE

#### 1 INSPECT DLC3(TC TERMINAL VOLTAGE)

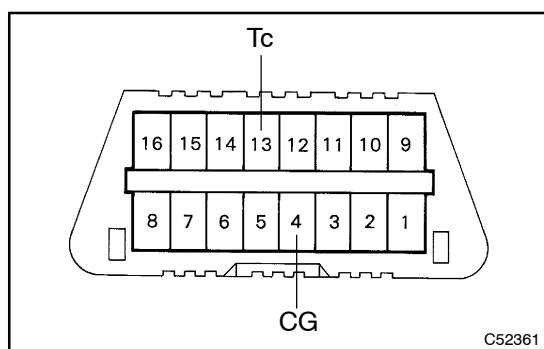

- Turn the ignition switch to ON.
- Measure voltage between terminals Tc and CG of DLC3.  
**OK: 10 - 14 V**

NG

Go to step 3

OK

2 **CHECK HARNESS AND CONNECTOR (DLC3 - SKID CONTROL ECU ASSY, DLC3 - BODY GROUND) (See page 01-31)**

NG


REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY

3 **CHECK ABS WARNING LIGHT**

SST 09843-18040

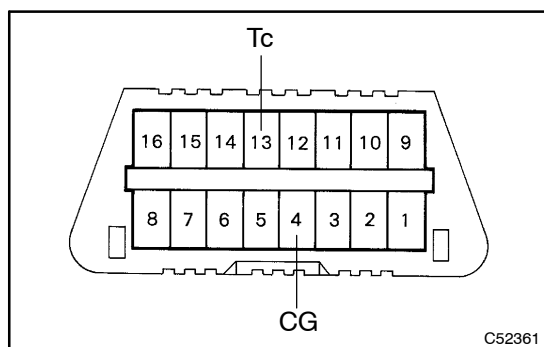

- (a) Using SST, connect the terminals Tc and CG of the DLC3.
- (b) Check the ABS warning light.

**OK: ABS warning light blinking**

OK

END

NG

CHECK AND REPLACE SKID CONTROL ECU ASSY