

REPLACEMENT

HINT:


Installation is in the reverse order of removal.

1. **PRECAUTION** (SEE PAGE 60-1)
2. **DISCONNECT BATTERY NEGATIVE TERMINAL**

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

3. **REMOVE SHIFT LEVER KNOB SUB-ASSY (MANUAL TRANSAXLE)** (SEE PAGE 71-7)
4. **REMOVE CONSOLE PANEL UPPER REAR** (SEE PAGE 71-7)
5. **REMOVE CONSOLE BOX CARPET** (SEE PAGE 71-7)
6. **REMOVE RR CONSOLE BOX** (SEE PAGE 71-7)
7. **REMOVE CONSOLE PANEL SUB-ASSY** (SEE PAGE 71-7)
8. **REMOVE CONSOLE BOX FRONT** (SEE PAGE 71-7)
9. **REMOVE AIR DUCT REAR NO.1** (SEE PUB. NO. RM915E, PAGE 55-21)
10. **REMOVE AIR DUCT REAR NO.2** (SEE PUB. NO. RM915E, PAGE 55-21)
11. **REMOVE CONSOLE BOX DUCT NO.1 (A/T TRANSAXLE)** (SEE PUB. NO. RM915E, PAGE 55-21)

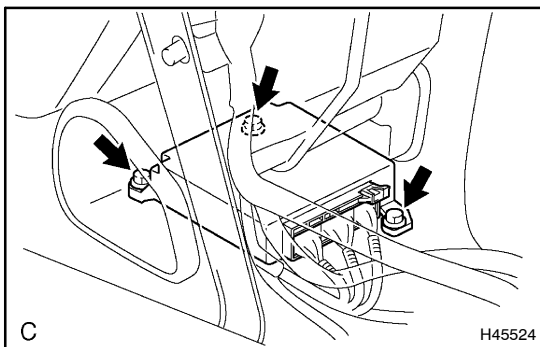

12. **REMOVE AIR BAG SENSOR ASSY CENTER**

- (a) Disconnect the holder (with connectors) from the air bag sensor assy center.
- (b) Remove the 3 bolts and the air bag sensor assy center.

13. **INSPECT AIR BAG SENSOR ASSY CENTER** (SEE PAGE 60-13)

14. **INSTALL AIR BAG SENSOR ASSY CENTER**

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (-) terminal is disconnected.

CAUTION:

After removing the terminal, wait for at least 90 seconds before starting the operation.

- (c) Temporarily install the air bag sensor assy center with the 3 bolts.

NOTICE:

- If the air bag sensor assy center has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.
 - When installing the air bag sensor assy center, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.
- (d) Tighten the 3 bolts to the specified torque.
Torque: 17.5 N·m (179 kgf·cm, 13 ft·lbf)
 - (e) Check that there is no looseness in the installation parts of the air bag sensor assy center.
 - (f) Connect the holder (with connectors) to the air bag sensor assy center.
 - (g) Check that the water-proof sheet is properly set.

15. **CONNECT BATTERY NEGATIVE TERMINAL**

16. **INSPECT SRS WARNING LIGHT** (SEE PAGE 05-10)