


REAR COMBINATION LAMP ASSY LH

OVERHAUL

651AY-01


HINT:

- Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - Installation is in the reverse order of removal.
- 1. REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1 (SEE PUB. NO. RM915E, PAGE 76-5)**
 - 2. REMOVE REAR FLOOR FINISH PLATE (SEE PUB. NO. RM915E, PAGE 76-5)**

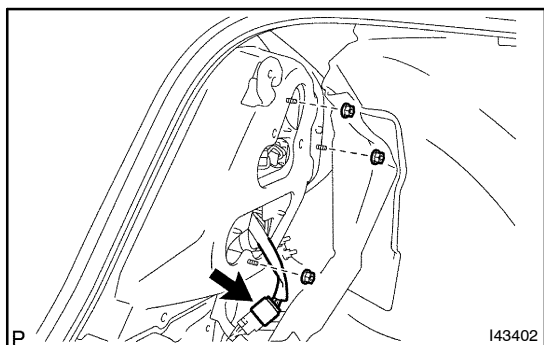


3. REMOVE REAR COMBINATION LAMP ASSY LH

- (a) Disconnect the connector.
- (b) Remove the 3 nuts and the rear combination lamp assy LH.

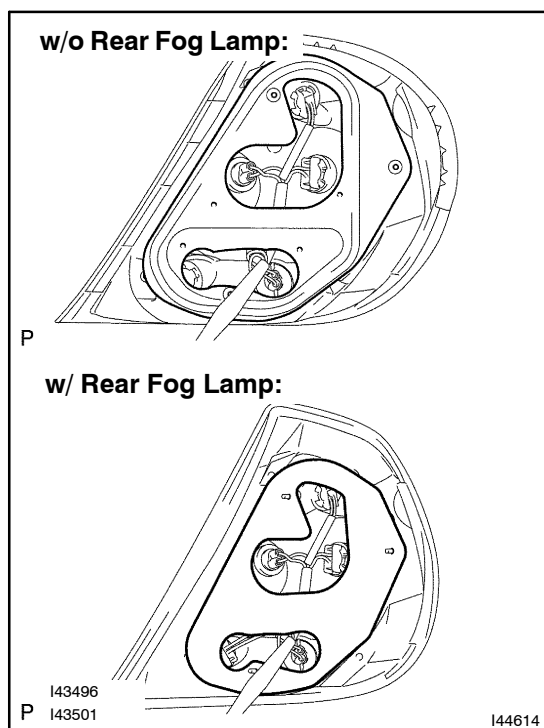


4. REMOVE REAR COMBINATION LAMP GASKET RH

- (a) Remove the rear combination lamp gasket RH.

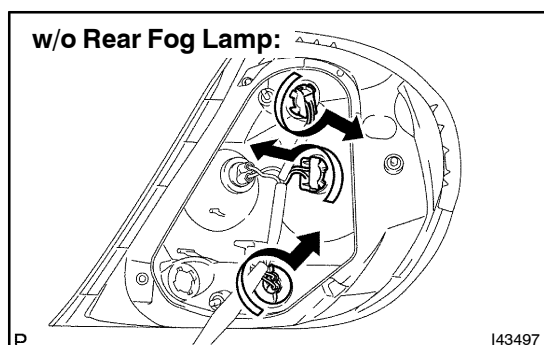


5. REMOVE REAR COMBINATION LAMP BULB

- (a) Turn in the direction indicated by the arrow and remove the 3 rear combination lamp socket & wires and the 3 rear combination lamp bulbs as a unit.
- (b) Remove the 3 rear combination lamp bulbs from the 3 rear combination lamp socket & wires.

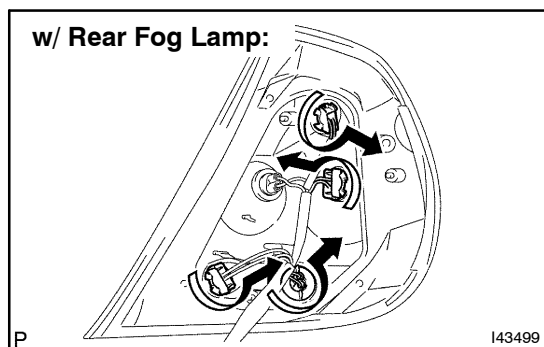


- (c) Turn in the direction indicated by the arrow and remove the 4 rear combination lamp socket & wires and the 4 rear combination lamp bulbs as a unit.
- (d) Remove the 4 rear combination lamp bulbs from the 4 rear combination lamp socket & wires.

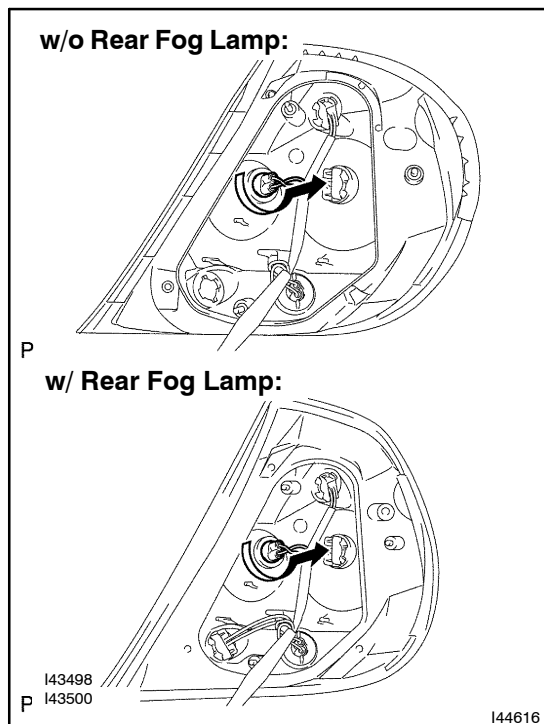

6. REMOVE REAR COMBINATION LAMP BULB

- (a) Turn in the direction indicated by the arrow and remove the rear combination lamp socket & wire and the rear combination lamp bulb as a unit.
- (b) Remove the rear combination lamp bulb from the rear combination lamp socket & wire.

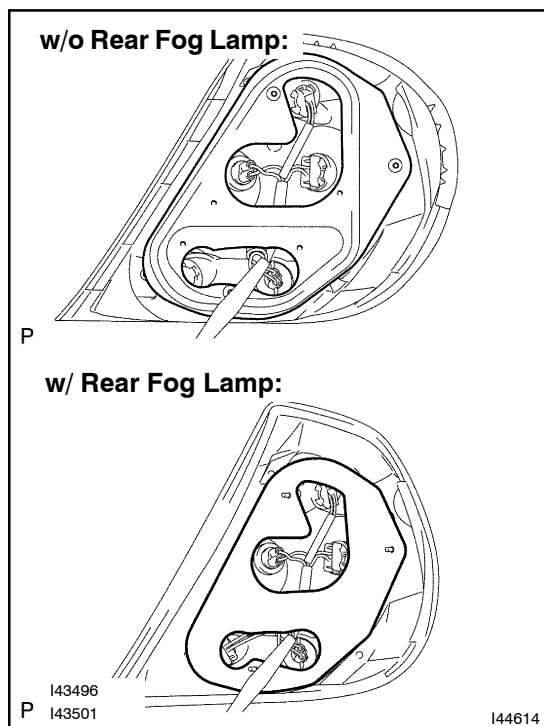

7. INSTALL REAR COMBINATION LAMP GASKET RH

- (a) Install a new rear combination lamp gasket RH to the rear combination lamp assy LH.