


REAR SPEAKER ASSY REPLACEMENT

HINT:


COMPONENTS: See page 67-1

1. REMOVE REAR SEAT CUSHION ASSY (See page 72-32)
2. REMOVE REAR SEAT BACK ASSY RH (See page 72-32)
3. REMOVE REAR SEAT BACK ASSY LH (See page 72-32)
4. REMOVE REAR SIDE SEAT BACK ASSY RH (See page 72-32)
5. REMOVE REAR SIDE SEAT BACK ASSY LH (See page 72-32)
6. REMOVE ROOF SIDE GARNISH INNER RH (W/O CURTAIN SHIELD AIR BAG)
(See page 76-22)
7. REMOVE ROOF SIDE GARNISH INNER LH (W/O CURTAIN SHIELD AIR BAG)
(See page 76-22)
8. REMOVE ROOF SIDE GARNISH INNER RH (W/ CURTAIN SHIELD AIR BAG)
(See page 76-22)
9. REMOVE ROOF SIDE GARNISH INNER LH (W/ CURTAIN SHIELD AIR BAG)
(See page 76-22)
10. REMOVE CENTER STOP LAMP ASSY (See page 65-22)
11. REMOVE REAR SEAT SHOULDER BELT COVER RH (See page 61-13 or 61-16)
12. REMOVE ROOM PARTITION BOARD ASSY (TMMK MADE) (See page 61-16)
13. REMOVE PACKAGE TRAY TRIM PANEL ASSY (TMC MADE) (See page 61-13)
14. REMOVE PACKAGE TRAY TRIM PANEL ASSY (TMMK MADE) (See page 61-16)

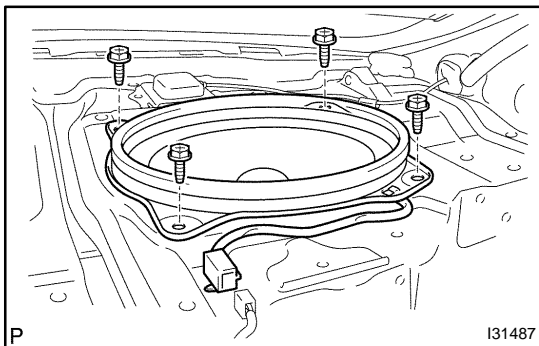

15. REMOVE SPEAKER ASSY, RADIO

- (a) Disconnect the connector.
- (b) Remove the 4 screws and rear speaker assy.

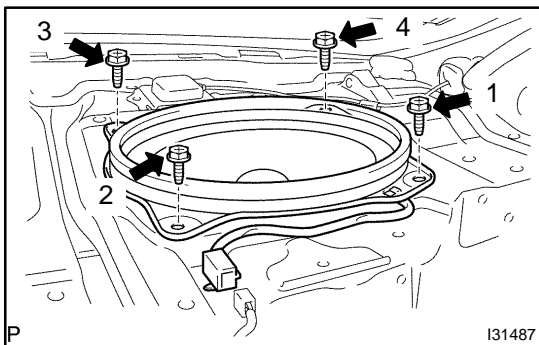

16. INSTALL SPEAKER ASSY, RADIO

- (a) Install the rear speaker assy with the 4 screws.

NOTICE:

Install them in the order shown in the illustration.

- (b) Connect the connector.

17. INSTALL REAR SIDE SEAT BACK ASSY LH (See page [72-32](#))
18. INSTALL REAR SIDE SEAT BACK ASSY RH (See page [72-32](#))
19. INSTALL REAR SEAT BACK ASSY RH (See page [72-32](#))
20. INSTALL REAR SEAT BACK ASSY LH (See page [72-32](#))