



## RADIATOR SUPPORT (ASSY) REPLACEMENT

### 1. REMOVE RADIATOR SUPPORT

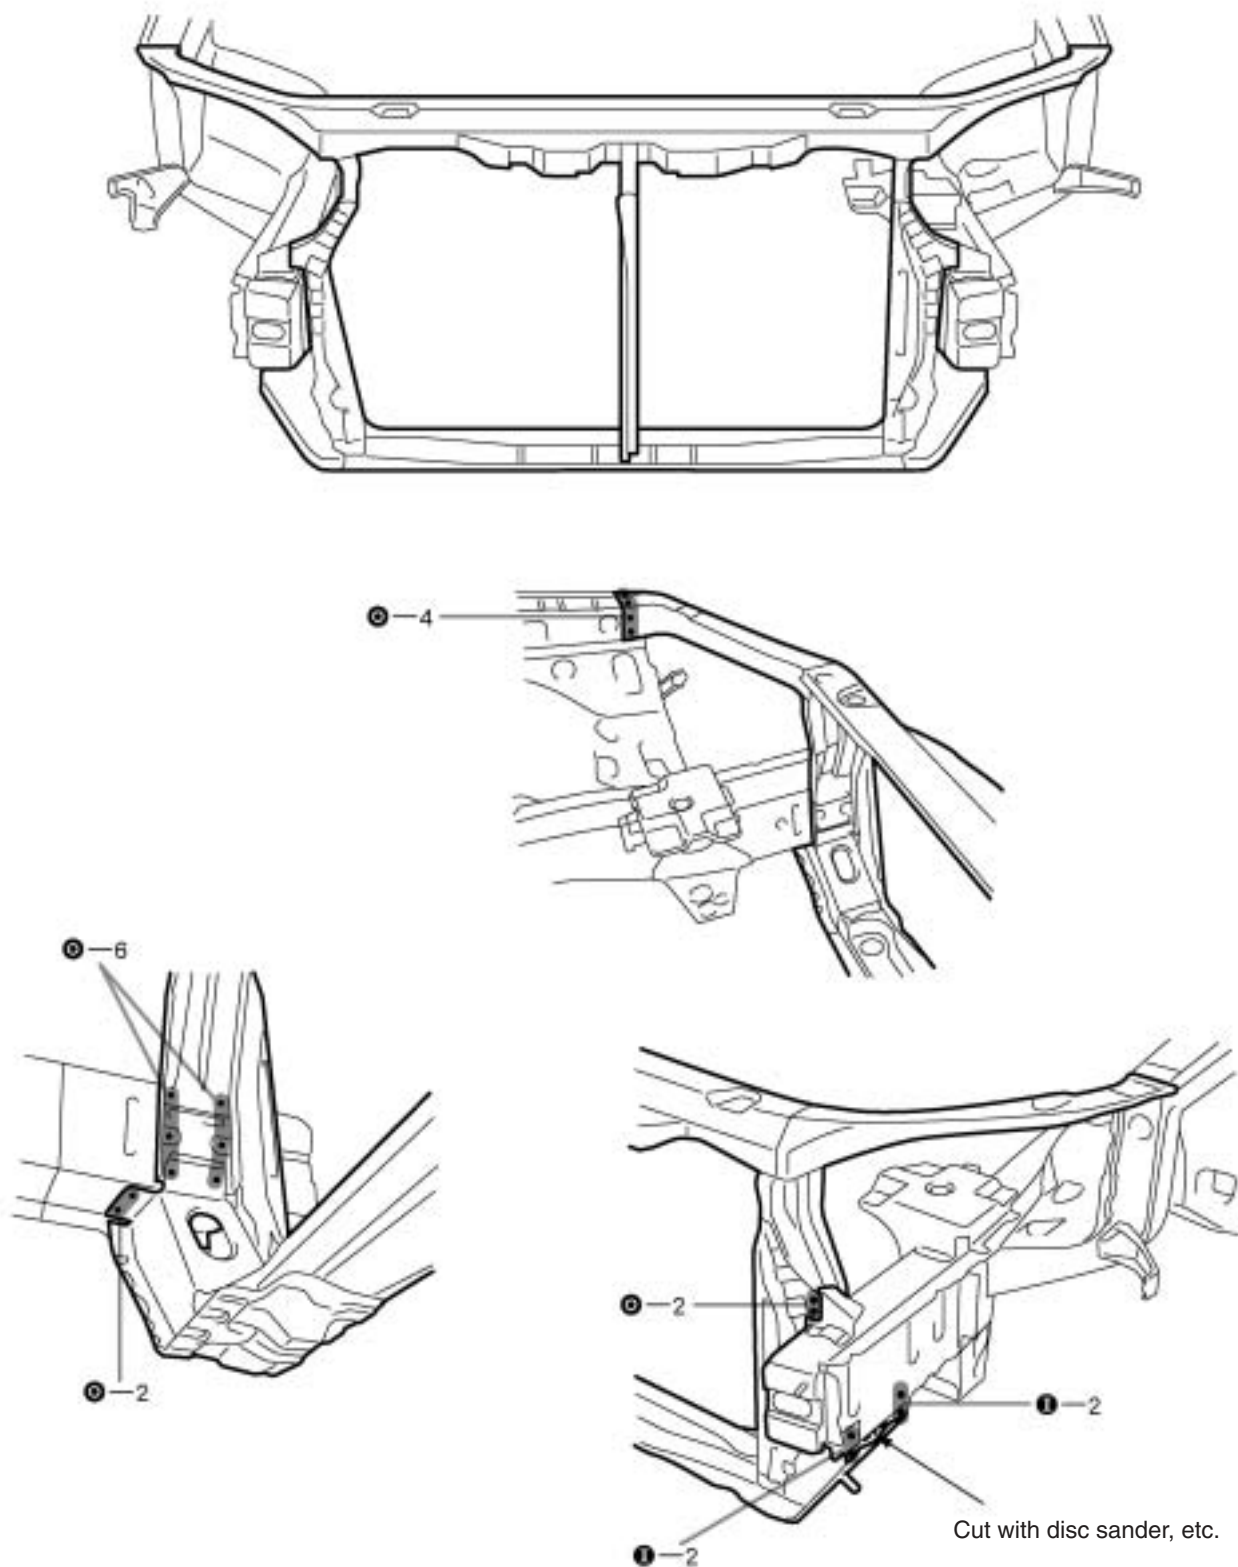

**2. INSTALL RADIATOR SUPPORT**

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

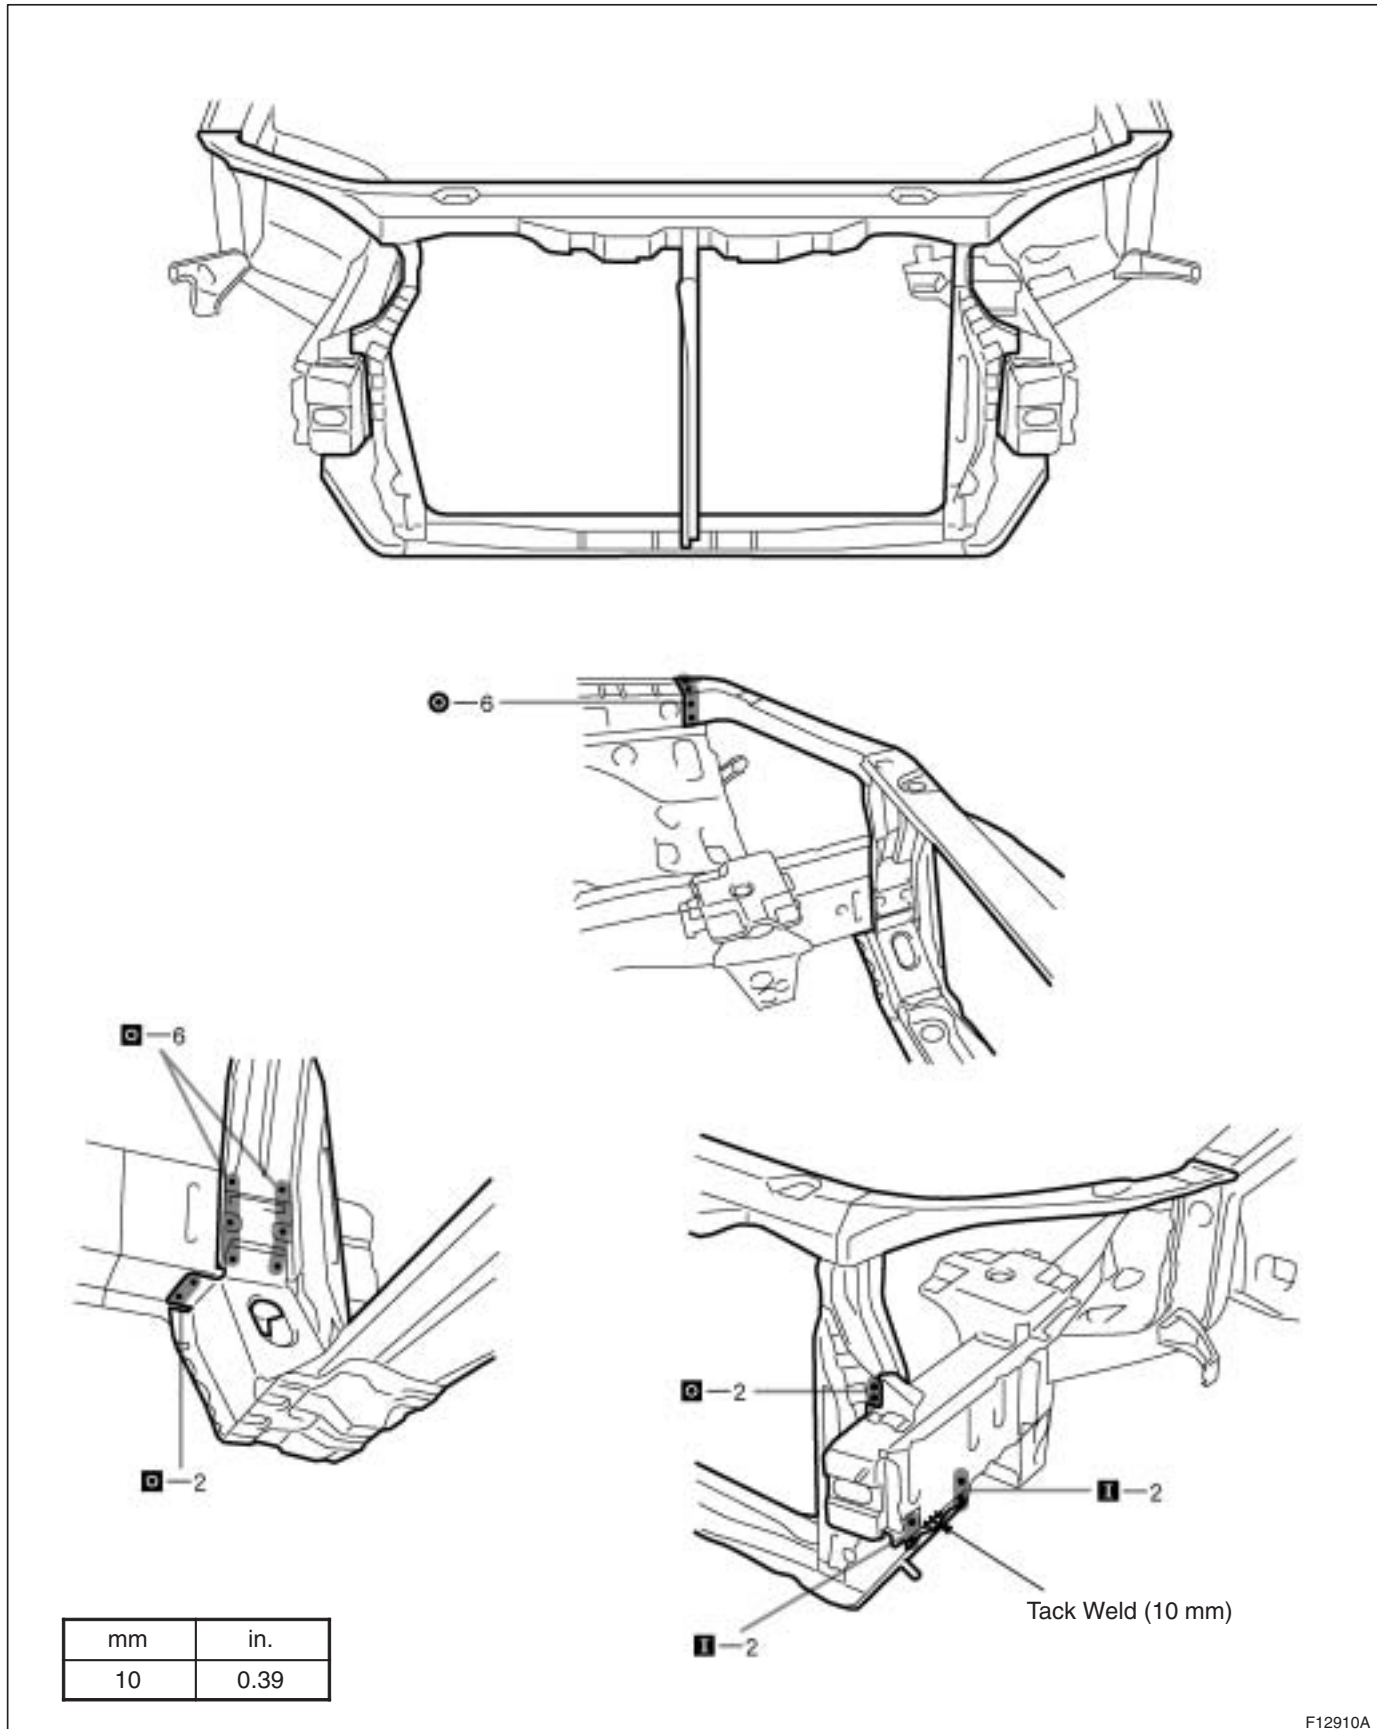

3. MEASURING THE ENGINE COMPARTMENT DIMENSIONS ([See page BP-100](#))
4. MEASURING THE UNDER BODY DIMENSIONS ([See page BP-98](#))
5. APPLYING SEALER TO THE ENGINE COMPARTMENT ([See page PC-1](#))
6. APPLYING ANTI-RUST AGENT
  - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.