


INSPECTION

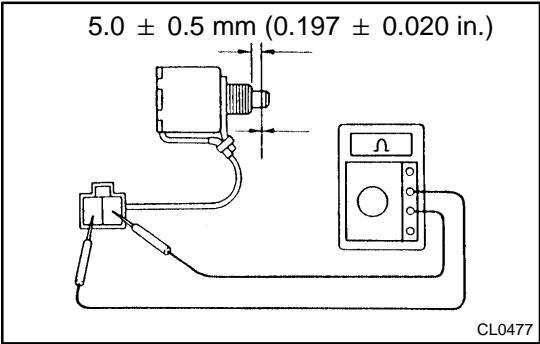

1. INSPECT CLUTCH START SWITCH ASSY

- (a) Check the continuity between terminals when the switch is ON and OFF.

| Switch position | Condition     |
|-----------------|---------------|
| ON (pushed)     | Continuity    |
| OFF (free)      | No continuity |