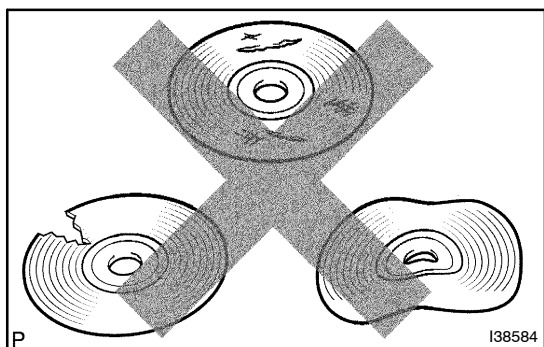


MAP DISC CANNOT BE EJECTED**INSPECTION PROCEDURE****1 CHECK RADIO AND NAVIGATION ASSY**

- (a) Turn the ignition switch to the ACC position.
- (b) Keep pressing the "MAP" eject switch for 5 seconds and check if the disc is ejected by forced ejection.
- Standard: The disc is ejected.**

NG

**PROCEED TO NEXT CIRCUIT INSPECTION
SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-46)**

OK**2 CHECK THE MAP DISC**

- (a) Check that the map disc is not deformed or cracked.
- Standard: No deformations or cracks appear on the map disc.**

NG**REPLACE THE MAP DISC****OK****NORMAL OPERATION**