


# OVERHAUL

HINT:


COMPONENTS: See page 55-28

1. REMOVE AIR CONDITIONER CONTROL ASSEMBLY (See page 71-9)

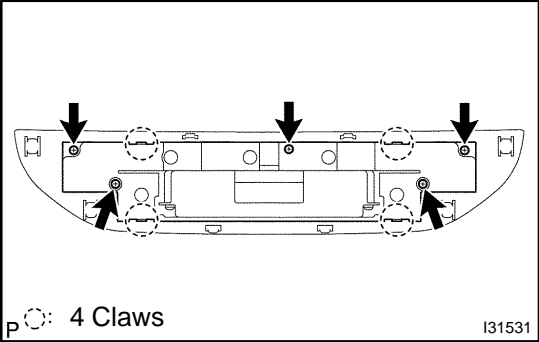

2. REMOVE HEATER CONTROL HOUSING SUB-ASSY


(a) Release the 4 fitting claws, remove the 5 screws.

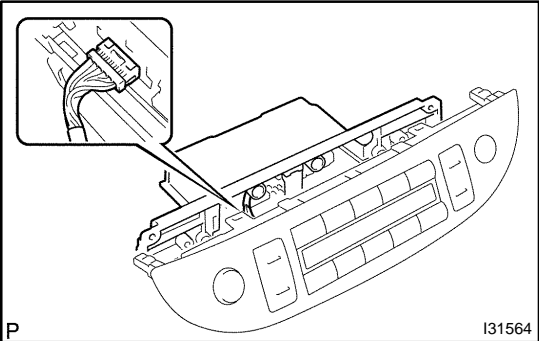

(b) Disconnect the connector, remove the heater control housing sub-assy.


3. REMOVE AIR CONDITIONING CONTROL BULB

(a) Remove the air conditioning control bulb from the heater control base sub-assy.

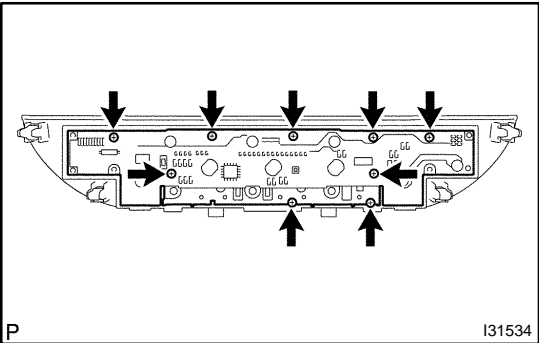

4. REMOVE HEATER CONTROL BASE SUB-ASSY

(a) Remove the 9 screws and heater control base sub-assy.

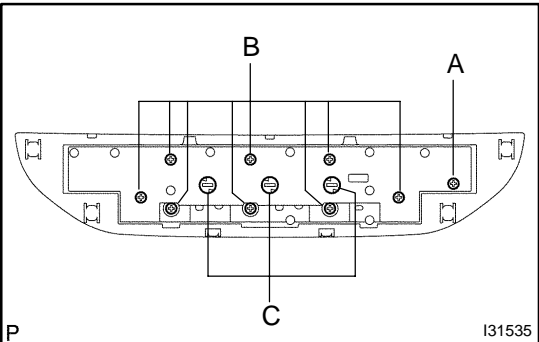

5. INSTALL AIR CONDITIONING CONTROL BULB

(a) Install the air conditioning control bulb to the heater control base sub-assy.

Bulb position:

Position	Part No.
A	90010 – 03054
B	90010 – 03055
C	90010 – 03056