


PARKING BRAKE LEVER SUB-ASSY (From August, 2002) REPLACEMENT

3304U-05

HINT:


COMPONENTS: See page 33-3 and 71-9

1. REMOVE CONSOLE PANEL UPPER(See page 71-16)
2. REMOVE AIR DUCT REAR NO.1(See page 71-16)
3. REMOVE PARKING BRAKE LEVER SUB-ASSY
 - (a) Disconnect the parking brake switch connector.
 - (b) Remove the lock nut and adjusting nut.

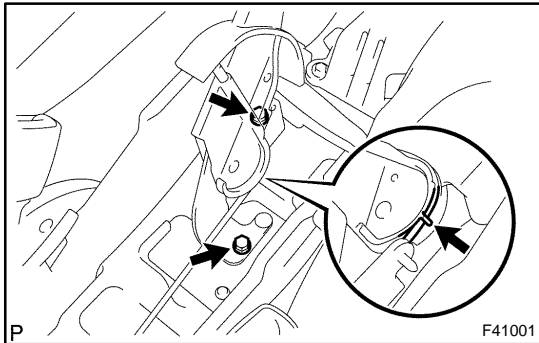

- (c) Remove the 2 bolts.
- (d) Using a screwdriver, disconnect the parking brake cable No. 1 and remove the parking brake lever sub-assy.

4. REMOVE PARKING BRAKE SWITCH ASSY
 - (a) Remove the screw and parking brake switch assy.
5. INSTALL PARKING BRAKE SWITCH ASSY
 - (a) Install the parking brake switch assy with the screw.

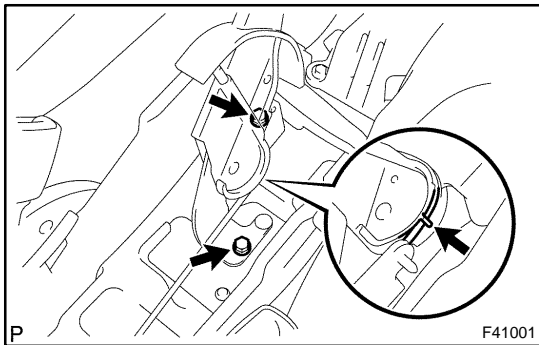

6. INSTALL PARKING BRAKE LEVER SUB-ASSY
 - (a) Connect the parking brake cable to the lever and install the adjusting nut and lock nut.
 - (b) Install the parking brake lever sub-assy with the 2 bolts.
Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)
 - (c) Connect the parking brake switch connector.

7. INSTALL AIR DUCT REAR NO.1(See page 71-16)
8. INSTALL CONSOLE PANEL UPPER(See page 71-16)
9. CHECK PARKING BRAKE LEVER TRAVEL(See page 33-2)
10. ADJUST PARKING BRAKE LEVER TRAVEL(See page 33-2)