


# INSPECTION

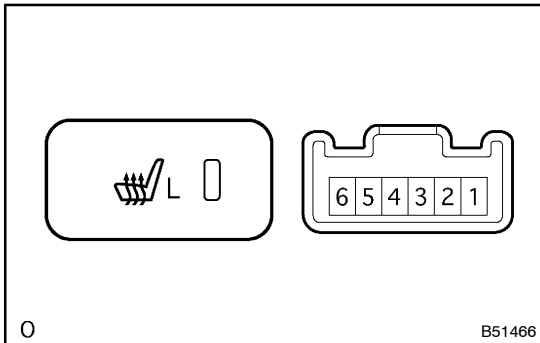

## 1. INSPECT SEAT HEATER SWITCH

- (a) Inspect the seat heater switch LH continuity.

### Standard:

Terminal No.	Condition	Specified condition
4 ⇔ 5	OFF	Continuity
3 ⇔ 4 ⇔ 5 3 ⇔ 6	ON	Continuity
1 ⇔ 2	Illumination	Continuity (always)



If the continuity is not as specified, replace the seat heater switch.

- (b) Inspect the seat heater switch RH continuity.

### Standard:

Terminal No.	Condition	Specified condition
4 ⇔ 5	OFF	Continuity
3 ⇔ 4 ⇔ 5 3 ⇔ 6	ON	Continuity
1 ⇔ 2	Illumination	Continuity (always)

If the continuity is not as specified, replace the seat heater switch.

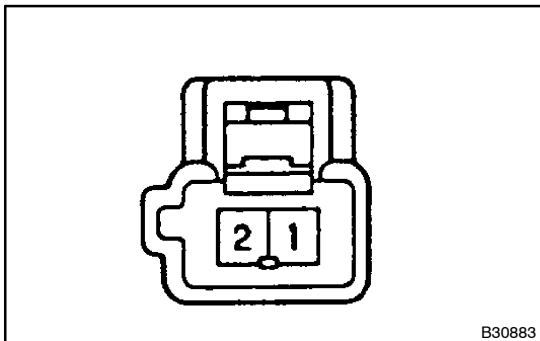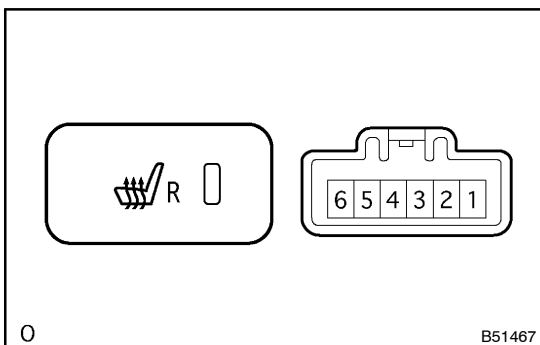


## 2. INSPECT FRONT SEAT CUSHION HEATER ASSY LH

- (a) Inspect the seat cushion heater assembly LH continuity.

### Standard:

Terminal No.	Condition	Specified condition
1 ⇔ 2	Constant	Continuity

If the continuity is not as specified, replace the seat heater cushion assembly.

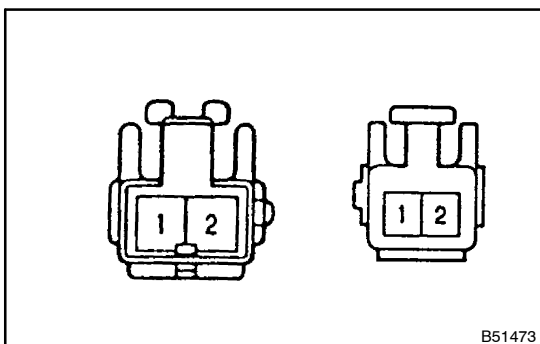


## 3. INSPECT FRONT SEAT BACK HEATER ASSY LH

- (a) Inspect the seat back heater assembly LH continuity.

### Standard:

Terminal No.	Condition	Specified condition
1 ⇔ 2	Constant	Continuity

If the continuity is not as specified, replace the seat heater back assembly.

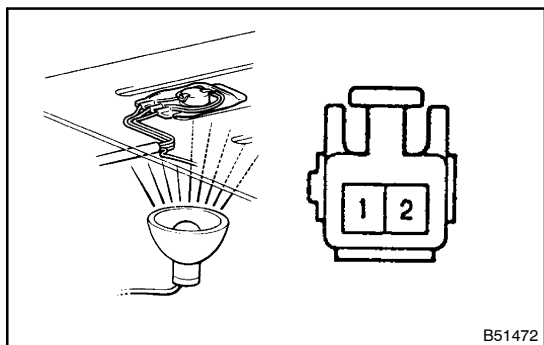

- (b) Inspect the seat cushion thermostat continuity.
- (1) Disconnect the seat back heater from the seat cushion heater.
  - (2) Heat the thermostat with a light.
  - (3) Inspect the seat cushion heater continuity between terminals, as shown.

**Standard:**

Terminal No.	Condition	Specified condition
1 ⇔ 2	Seat heater temp. below 25 – 35°C (77 – 95°F)	Continuity
	Seat heater temp. 25 – 35°C (77 – 95°F)	No continuity

If the continuity is not as specified, replace the seat heater cushion heater assembly.

4. **INSPECT FRONT SEAT CUSHION HEATER ASSY RH**
5. **INSPECT FRONT SEAT BACK HEATER ASSY RH**