


E ELECTRICAL WIRING ROUTING

Position of Parts in Seat

[LHD : w/ Power Seat]

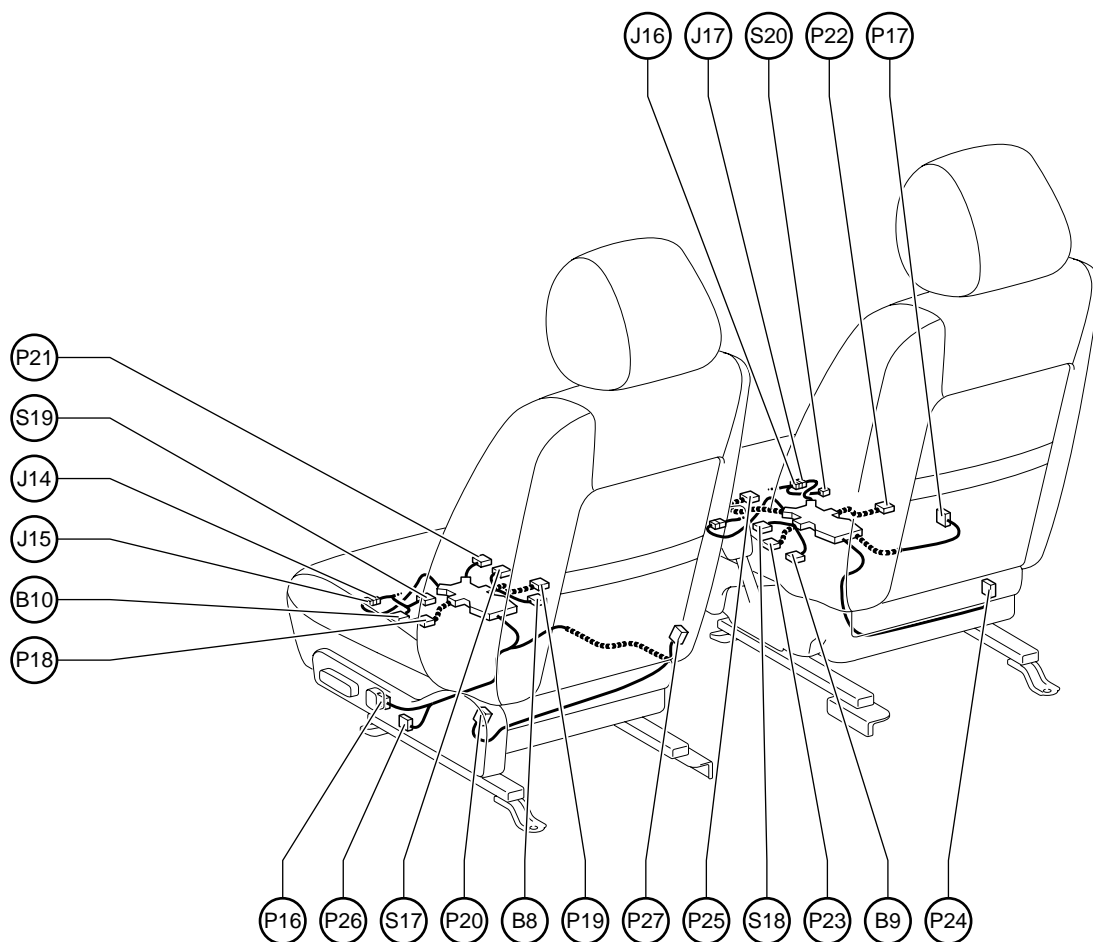

B 8 Buckle SW LH
 B 9 Buckle SW RH
 Occupant Detection Sensor
 B10 Buckle SW LH
 Seat Position Airbag Sensor

S17 Seat Heater LH
 S18 Seat Heater RH
 S19 Side Airbag Squib LH
 S20 Side Airbag Squib RH

J 14 Junction Connector
 J 15 Junction Connector
 J 16 Junction Connector
 J 17 Junction Connector

P16 Power Seat Control SW (Driver's Seat)
 P17 Power Seat Control SW (Front Passenger's Seat)
 P18 Power Seat Motor (Driver's Seat Front Vertical Control)
 P19 Power Seat Motor (Driver's Seat Lifter Control)
 P20 Power Seat Motor (Driver's Seat Reclining Control)
 P21 Power Seat Motor (Driver's Seat Slide Control)
 P22 Power Seat Motor
 (Front Passenger's Seat Front Vertical Control)
 P23 Power Seat Motor
 (Front Passenger's Seat Lifter Control)
 P24 Power Seat Motor
 (Front Passenger's Seat Reclining Control)
 P25 Power Seat Motor
 (Front Passenger's Seat Slide Control)
 P26 Power Seat Control SW
 (Driver's Seat Lumbar Support Control)
 P27 Power Seat Motor
 (Driver's Seat Lumbar Support Control)