

ANTENNA CORD SUB-ASSY REPLACEMENT

HINT:


COMPONENTS: [See page 67-1](#)

1. REMOVE FRONT DOOR SCUFF PLATE LH
([See page 71-10](#))
2. REMOVE FRONT DOOR SCUFF PLATE RH
3. REMOVE COWL SIDE TRIM SUB-ASSY LH
([See page 71-10](#))
4. REMOVE COWL SIDE TRIM SUB-ASSY RH
5. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER
([See page 71-10](#))
6. REMOVE AIR CONDITIONER CONTROL ASSEMBLY ([See page 71-10](#))
7. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSY CENTER
([See page 71-10](#))
8. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.1
([See page 71-10](#))
9. REMOVE GLOVE COMPARTMENT DOOR PAD
([See page 71-10](#))
10. REMOVE INSTRUMENT PANEL SUB-ASSY LOWER
([See page 71-10](#))
11. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB-ASSY (M/T TRANSAXLE)
12. REMOVE CONSOLE PANEL UPPER REAR
([See page 71-10](#))
13. REMOVE CONSOLE BOX CARPET
14. REMOVE RR CONSOLE BOX ([See page 71-10](#))
15. REMOVE INSTRUMENT PANEL ASH RECEPTACLE ASSY
([See page 71-10](#))
16. REMOVE CONSOLE PANEL UPPER
([See page 71-10](#))
17. REMOVE CONSOLE BOX FRONT
([See page 71-10](#))
18. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER
([See page 71-10](#))
19. REMOVE FRONT SEAT TRACK COVER LH REAR OUTER
20. REMOVE FRONT SEAT TRACK COVER RH REAR OUTER
21. REMOVE FRONT SEAT TRACK COVER LH REAR INNER
22. REMOVE FRONT SEAT TRACK COVER RH REAR INNER
23. REMOVE FRONT SEAT ASSY LH (POWER SEAT) ([See page 72-7](#))
24. REMOVE FRONT SEAT ASSY LH (MANUAL SEAT) ([See page 72-14](#))

25. REMOVE FRONT SEAT ASSY RH (POWER SEAT)
26. REMOVE FRONT SEAT ASSY RH (MANUAL SEAT)
27. REMOVE REAR SEAT CUSHION ASSY (See page 72-21)
28. REMOVE REAR SEAT BACK ASSY RH (See page 72-21)
29. REMOVE REAR SEAT BACK ASSY LH
30. REMOVE REAR SIDE SEAT BACK ASSY RH
(See page 72-21)
31. REMOVE REAR SIDE SEAT BACK ASSY LH
32. REMOVE ROOF SIDE GARNISH INNER RH(W/O CURTAIN SHIELD AIR BAG)
(See page 76-21)
33. REMOVE ROOF SIDE GARNISH INNER LH(W/O CURTAIN SHIELD AIR BAG)
34. REMOVE ROOF SIDE GARNISH INNER RH(W/ CURTAIN SHIELD AIR BAG)
(See page 76-21)
35. REMOVE ROOF SIDE GARNISH INNER LH(W/ CURTAIN SHIELD AIR BAG)
36. REMOVE REAR SEAT SHOULDER BELT COVER RH
(See page 61-13)
37. REMOVE PACKAGE TRAY TRIM PANEL ASSY
(See page 67-7)
38. REMOVE REAR SEAT 3 POINT TYPE BELT ASSY OUTER
(See page 61-13)
39. REMOVE REAR SEAT INNER W/CENTER BELT ASSY RH
(See page 61-13)
40. REMOVE REAR SEAT INNER W/CENTER BELT ASSY LH
(See page 61-13)
41. REMOVE ROOM PARTITION BOARD LH
(See page 67-7)
42. REMOVE ROOM PARTITION BOARD RH
(See page 67-7)
43. REMOVE AIR DUCT REAR NO.2
(See page 55-21)
44. REMOVE LUGGAGE COMPARTMENT FLOOR MAT
45. REMOVE SPARE WHEEL COVER ASSY
46. REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB-ASSY RH
47. REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1
(See page 76-5)
48. REMOVE REAR FLOOR FINISH PLATE
(See page 76-5)
49. REMOVE LUGGAGE COMPARTMENT TRIM COVER INNER RH
(See page 76-5)

50. REMOVE ANTENNA CORD SUB-ASSY

- (a) Remove the nut.
- (b) Disconnect the connectors.
- (c) Remove the 13 clamps and antenna cord sub-assy.

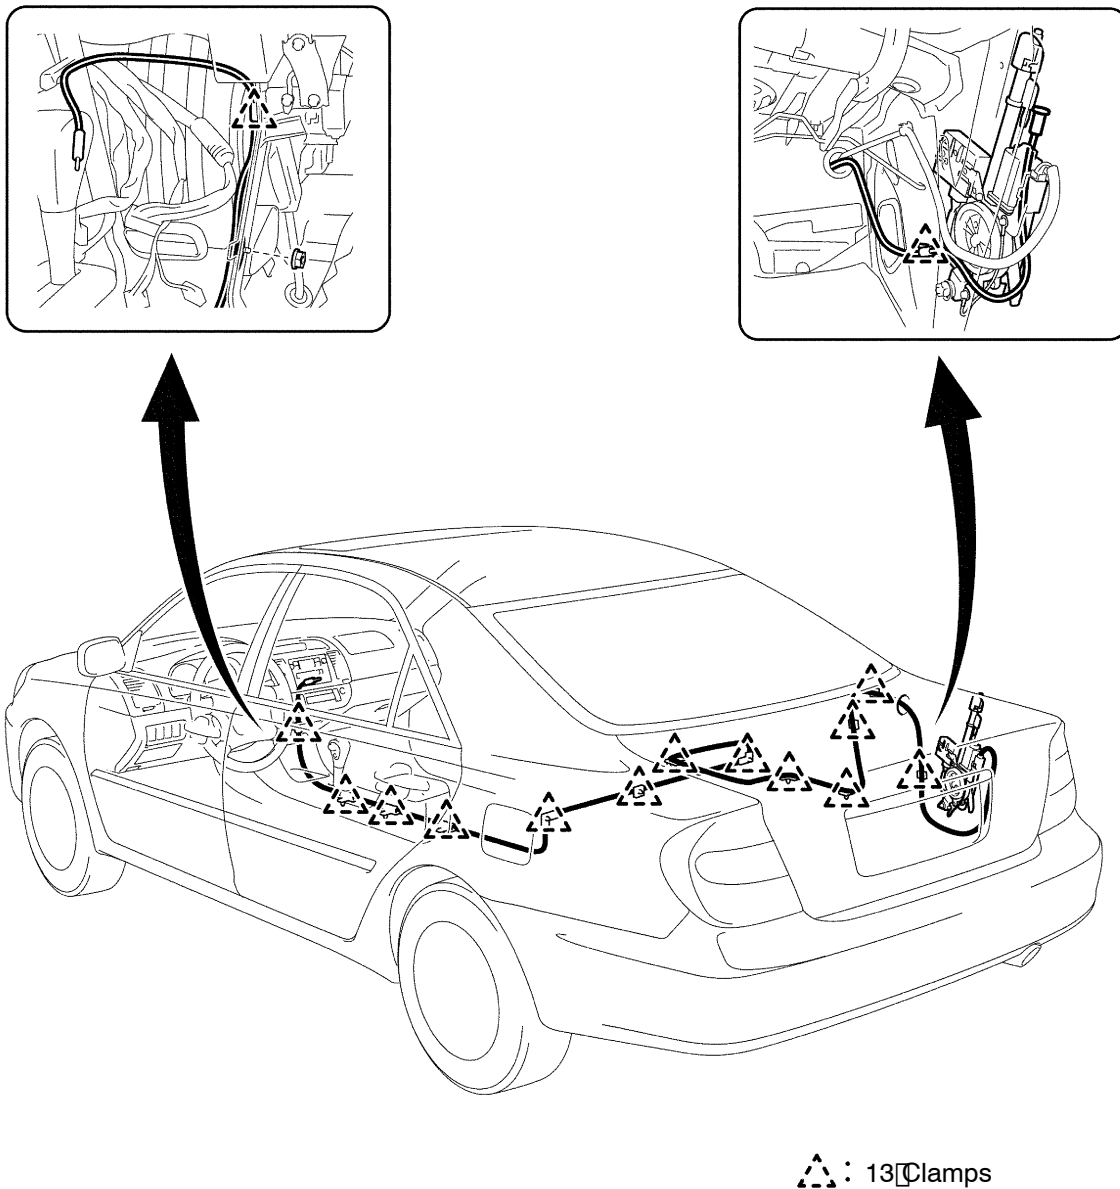

P

I31602

- 51. INSTALL REAR SEAT INNER W/CENTER BELT ASSY LH
(See page 61-13)
- 52. INSTALL REAR SEAT 3 POINT TYPE BELT ASSY OUTER
(See page 61-13)
- 53. INSTALL REAR SEAT INNER W/CENTER BELT ASSY RH
(See page 61-13)
- 54. INSTALL REAR SIDE SEAT BACK ASSY LH
(See page 72-21)
- 55. INSTALL REAR SIDE SEAT BACK ASSY RH
(See page 72-21)

- 56. INSTALL REAR SEAT BACK ASSY RH ([See page 72-21](#))
- 57. INSTALL REAR SEAT BACK ASSY LH
- 58. INSTALL FRONT SEAT ASSY LH (POWER SEAT) ([See page 72-7](#))
- 59. INSTALL FRONT SEAT ASSY LH (MANUAL SEAT) ([See page 72-14](#))
- 60. INSTALL FRONT SEAT ASSY RH (POWER SEAT)
- 61. INSTALL FRONT SEAT ASSY RH (MANUAL SEAT)