

REPAIR


HINT:

- COMPONENTS: SEE PAGE 65-7.
 - Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
 - If the area where the headlamp unit LH is installed is broken, the repairs listed below can be performed inexpensively through the use of a repair use bracket. This may only be done if the headlamp assy LH itself is not damaged.
1. REMOVE FRONT BUMPER ASSY (SEE PAGE 76-2)
 2. REMOVE HEADLAMP ASSY LH (SEE PAGE 65-8)

3. INSTALL HEADLAMP PROTECTOR RETAINER UPPER LH

HINT:


- If the installation area of the headlamp assy LH is damaged, use the supply bracket for low-cost repair.
- Ensure that the headlamp assy LH is not damaged.

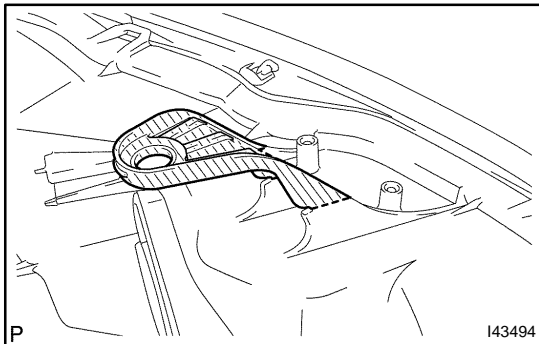

- (a) Cut off the part shaded in the illustration and sand smooth with sandpaper.

NOTICE:

After cutting off the part, place the headlamp protector retainer UPPER LH against the bosses and gradually file away until installation is possible.

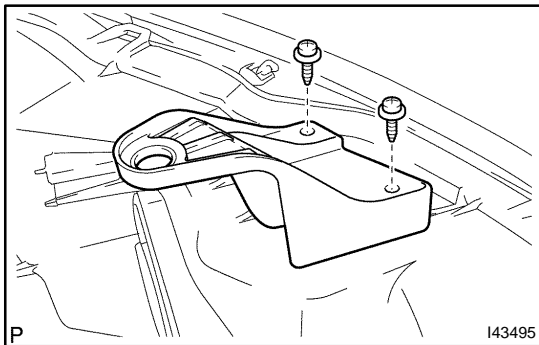

- (b) Install the headlamp protector retainer UPPER LH with the 2 screws.

4. VEHICLE PREPARATION FOR HEADLAMP AIM ADJUSTMENT (SEE PAGE 65-10)
5. PREPARATION FOR HEADLAMP AIMING (Using a screen) (SEE PAGE 65-10)
6. HEADLAMP AIMING INSPECTION (SEE PAGE 65-10)
7. HEADLAMP AIMING ADJUSTMENT (SEE PAGE 65-10)
8. VEHICLE PREPARATION FOR FOG LAMP AIM ADJUSTMENT (SEE PAGE 65-17)

- 9. PREPARATION FOR FOG LAMP AIMING (SEE PAGE [65-17](#))
- 10. FOG LAMP AIMING INSPECTION (SEE PAGE [65-17](#))
- 11. FOG LAMP AIMING ADJUSTMENT (SEE PAGE [65-17](#))