



ADJUSTABLE PEDAL SWITCH INSPECTION

320N2-03

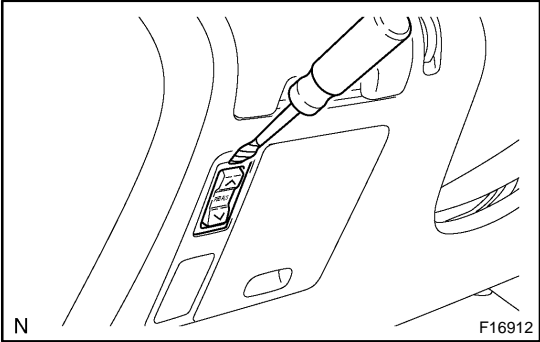

- 1. REMOVE ADJUSTABLE PEDAL SWITCH**
- (a) Using a screwdriver, remove the adjustable pedal switch, then disconnect the connector.

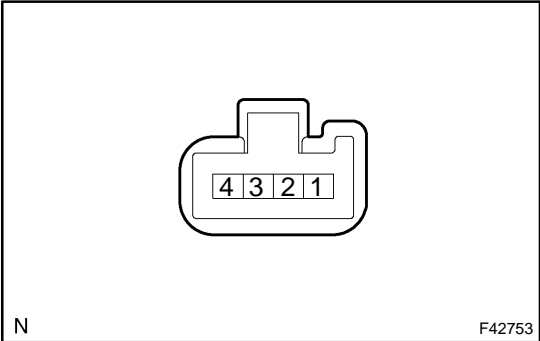

2. INSPECT ADJUSTABLE PEDAL SWITCH

Switch position	Tester connection	Specified condition
OFF	1 – 2 – 3	Continuity
FRONT	1 – 3	Continuity
	2 – 4	
REAR	1 – 2	Continuity
	3 – 4	

3. INSTALL ADJUSTABLE PEDAL SWITCH

- (a) Connect the connector.
- (b) Install the adjustable pedal switch.