

ANTENNA CORD SUB-ASSY

REPLACEMENT

HINT:


COMPONENTS: See page 67-1

1. REMOVE FRONT DOOR SCUFF PLATE LH (See page 71-16)
2. REMOVE FRONT DOOR SCUFF PLATE RH (See page 71-16)
3. REMOVE COWL SIDE TRIM SUB-ASSY LH (See page 71-16)
4. REMOVE COWL SIDE TRIM SUB-ASSY RH (See page 71-16)
5. REMOVE INSTRUMENT PANEL COIN BOX SUB-ASSY (See page 71-16)
6. REMOVE INSTRUMENT PANEL SUB-ASSY UPPER (See page 71-16)
7. REMOVE INSTRUMENT PNL INSERT SUB-ASSY LWR LH (TMMK MADE) (See page 71-16)
8. REMOVE AIR CONDITIONER CONTROL ASSEMBLY (See page 71-16)
9. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSY CENTER (See page 71-16)
10. REMOVE INSTRUMENT PANEL UNDER COVER SUB-ASSY NO.1 (See page 71-16)
11. REMOVE GLOVE COMPARTMENT DOOR PAD (See page 71-16)
12. REMOVE INSTRUMENT PANEL SUB-ASSY LOWER (See page 71-16)
13. REMOVE SHIFT LEVER KNOB SUB-ASSY (M/T TRANSAXLE) (See page 71-16)
14. REMOVE CONSOLE PANEL UPPER REAR (See page 71-16)
15. REMOVE CONSOLE BOX CARPET (See page 71-16)
16. REMOVE RR CONSOLE BOX (See page 71-16)
17. REMOVE INSTRUMENT PANEL CUP HOLDER (W/O ASHTRAY) (See page 71-16)
18. REMOVE FRONT ASH RECEPTACLE ASSY (W/ ASHTRAY) (See page 71-16)
19. REMOVE CONSOLE PANEL SUB-ASSY UPPER (See page 71-16)
20. REMOVE CONSOLE BOX FRONT (See page 71-16)
21. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER (See page 71-16)
22. REMOVE FRONT SEAT TRACK COVER LH REAR OUTER (TMC MADE) (See page 72-15)
23. REMOVE FRONT SEAT TRACK COVER LH REAR INNER (TMC MADE)(See page 72-15)
24. REMOVE FRONT SEAT TRACK COVER RH REAR OUTER (TMC MADE)(See page 72-15)
25. REMOVE FRONT SEAT TRACK COVER RH REAR INNER (TMC MADE)(See page 72-15)
26. REMOVE FRONT SEAT ASSY RH (POWER SEAT) (See page 72-23)
27. REMOVE FRONT SEAT ASSY RH (MANUAL SEAT) (See page 72-15)
28. REMOVE FRONT SEAT ASSY LH (POWER SEAT) (See page 72-23)
29. REMOVE FRONT SEAT ASSY LH (MANUAL SEAT) (See page 72-15)
30. REMOVE REAR SEAT CUSHION ASSY (See page 72-32)
31. REMOVE REAR SEAT BACK ASSY RH (See page 72-32)
32. REMOVE REAR SEAT BACK ASSY LH (See page 72-32)
33. REMOVE REAR SIDE SEAT BACK ASSY RH (TMC MADE) (See page 72-32)
34. REMOVE REAR SIDE SEAT BACK ASSY LH (TMC MADE) (See page 72-32)
35. REMOVE ROOF SIDE GARNISH INNER RH (W/O CURTAIN SHIELD AIR BAG)
(See page 76-22)
36. REMOVE ROOF SIDE GARNISH INNER LH (W/O CURTAIN SHIELD AIR BAG)
(See page 76-22)
37. REMOVE ROOF SIDE GARNISH INNER RH (W/ CURTAIN SHIELD AIR BAG)
(See page 76-22)
38. REMOVE ROOF SIDE GARNISH INNER LH (W/ CURTAIN SHIELD AIR BAG)
(See page 76-22)
39. REMOVE REAR SEAT SHOULDER BELT COVER RH (See page 61-13)
40. REMOVE PACKAGE TRAY TRIM PANEL ASSY (TMC MADE) (See page 67-10)

41. REMOVE REAR SEAT 3 POINT TYPE BELT ASSY OUTER (TMC MADE) (See page 61-13)
42. REMOVE REAR SEAT INNER W/CENTER BELT ASSY RH (TMC MADE) (See page 61-13)
43. REMOVE REAR SEAT INNER W/CENTER BELT ASSY LH (TMC MADE) (See page 61-13)
44. REMOVE ROOM PARTITION BOARD LH (TMC MADE) (See page 67-10)
45. REMOVE ROOM PARTITION BOARD RH (TMC MADE) (See page 67-10)
46. REMOVE AIR DUCT REAR NO.2 (See page 55-34)

47. REMOVE ANTENNA CORD SUB-ASSY

- (a) Remove the nut and 2 bolts.
- (b) Disconnect the connectors.
- (c) Remove the 12 clamps and antenna cord sub-assy.

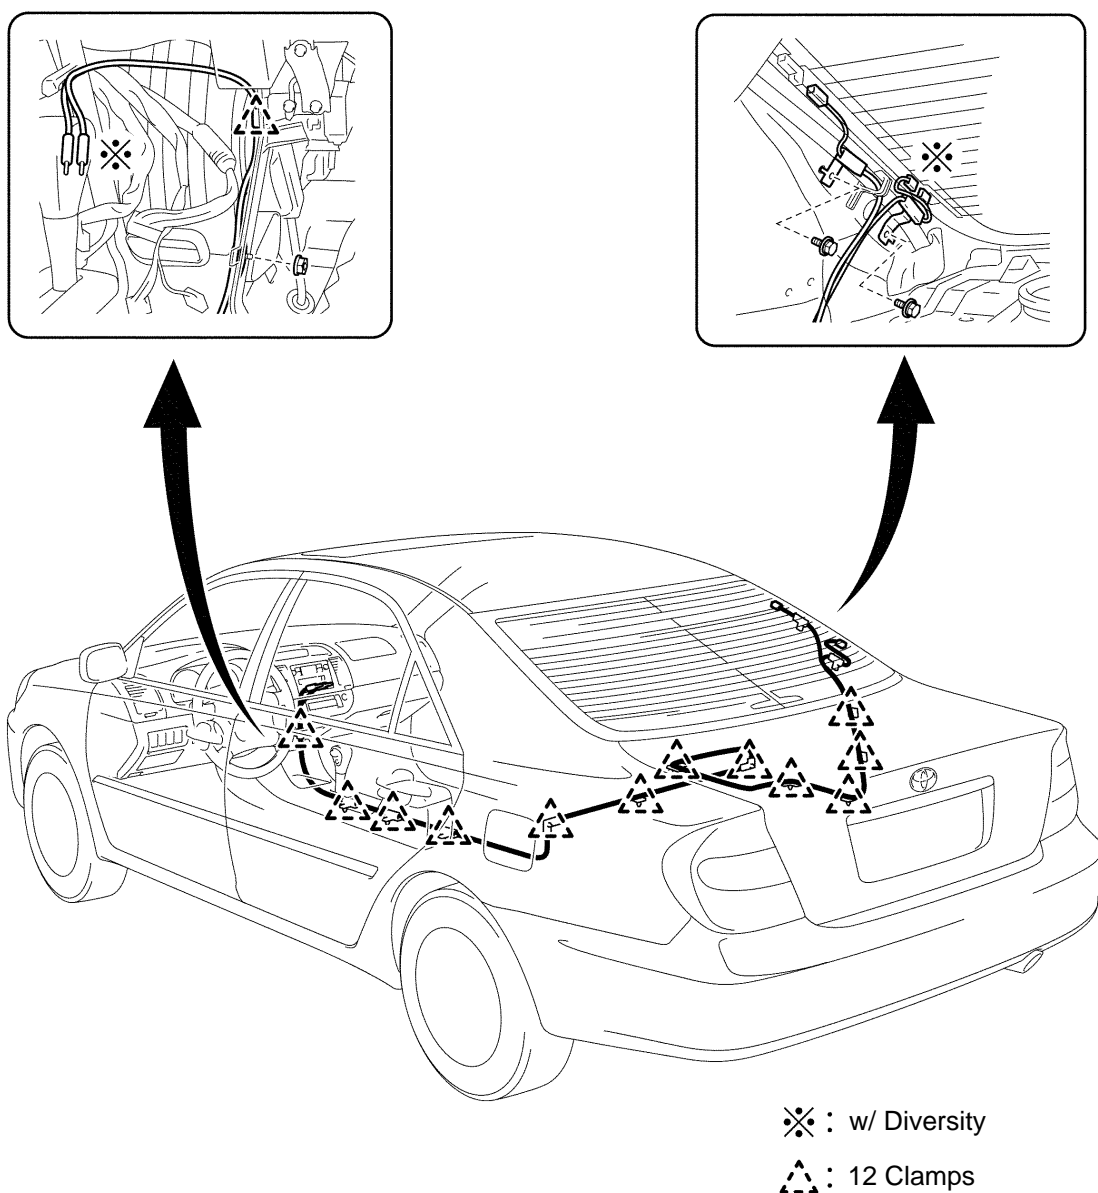

✕ : w/ Diversity

△ : 12 Clamps

- 48. INSTALL REAR SEAT INNER W/CENTER BELT ASSY RH (TMC MADE) (See page [61-13](#))
- 49. INSTALL REAR SEAT 3 POINT TYPE BELT ASSY OUTER (TMC MADE) (See page [61-13](#))
- 50. INSTALL REAR SEAT INNER W/CENTER BELT ASSY LH (TMC MADE) (See page [61-13](#))
- 51. INSTALL REAR SIDE SEAT BACK ASSY LH (TMC MADE) (See page [72-32](#))
- 52. INSTALL REAR SIDE SEAT BACK ASSY RH (TMC MADE) (See page [72-32](#))
- 53. INSTALL REAR SEAT BACK ASSY RH (See page [72-32](#))
- 54. INSTALL REAR SEAT BACK ASSY LH (See page [72-32](#))
- 55. INSTALL FRONT SEAT ASSY LH (POWER SEAT) (See page [72-23](#))
- 56. INSTALL FRONT SEAT ASSY LH (MANUAL SEAT) (See page [72-15](#))
- 57. INSTALL FRONT SEAT ASSY RH (POWER SEAT) (See page [72-23](#))
- 58. INSTALL FRONT SEAT ASSY RH (MANUAL SEAT) (See page [72-15](#))