


# HOOD ADJUSTMENT

75094-02


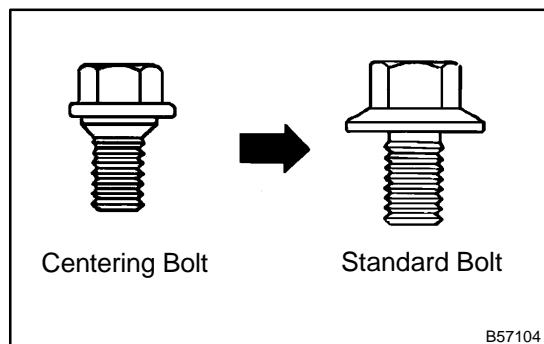


## HINT:

Since the centering bolt is used as a hood hinge and as a hood lock set bolt, the hood and hood lock can not be adjusted with it on. Substitute a bolt with washer for the centering bolt.

## 1. INSPECT HOOD SUB-ASSY


- (a) Check that the clearance is within the standard value.

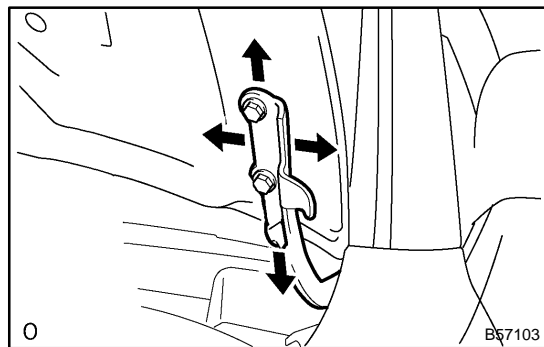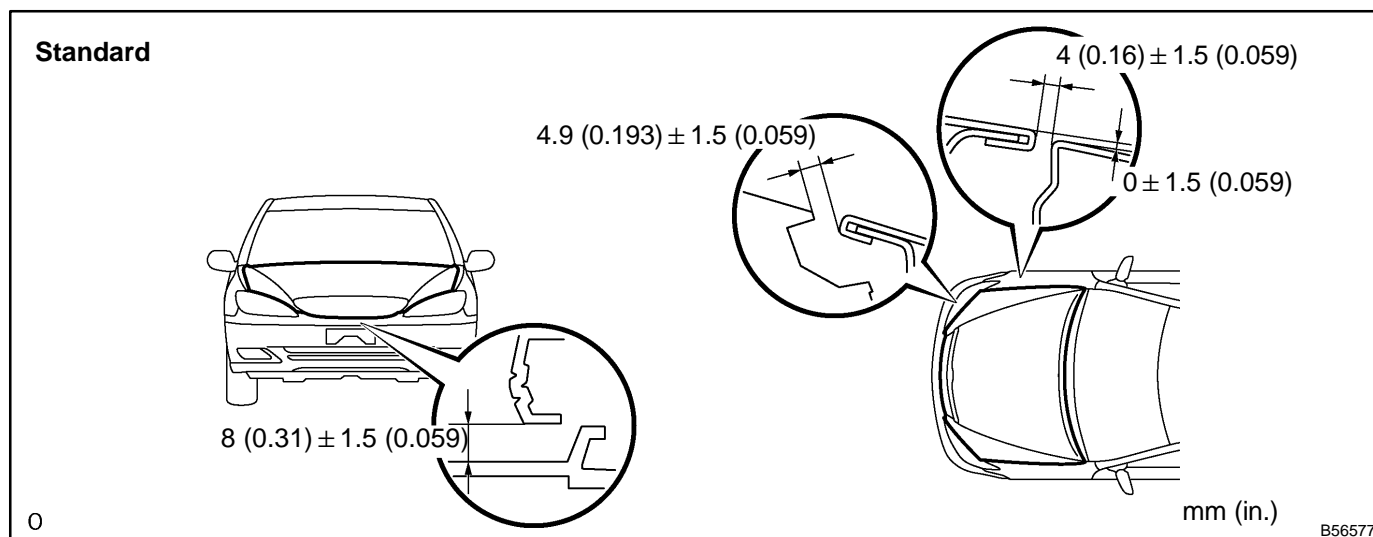

## 2. ADJUST HOOD SUB-ASSY

- Loosen the hood side hinge bolts.
- Adjust the clearance so that it will be in the standard value, by moving the hood.
- Tighten the hood side hinge bolts after adjustment.


**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**

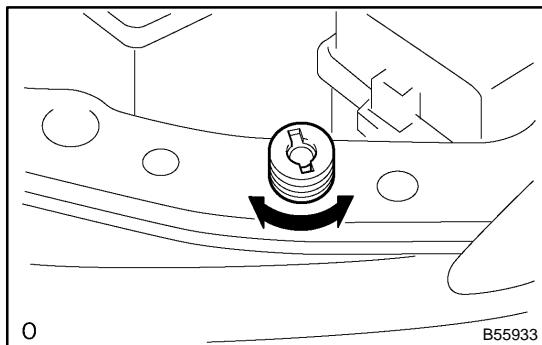

- (d) Adjust the height of the hood front end by the cushion gum.

HINT:

The cushion gum goes up and down by turning it.

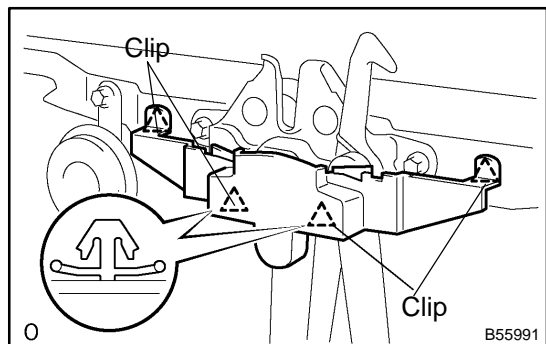


- (e) Using a screwdriver, remove the hood lock release lever cover.

HINT:

Tape the screwdriver tip before use.

**NOTICE:**

**Removing the protector damages the clips inside the protector, and therefore the use of a new protector is necessary on installation.**

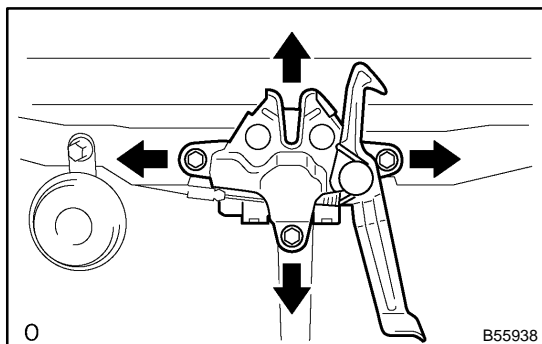

- (f) Adjust the hood lock position so that the striker will come in, by moving the striker.

- (g) Tighten the hood side hinge bolts after adjustment.

**Torque: 8.0 N·m (82 kgf·cm, 71 ft·lbf)**