


LICENSE PLATE LAMP ASSY REPLACEMENT

650BR-02

1. REMOVE LUGGAGE COMPARTMENT DOOR COVER (See Page 76-18)
2. REMOVE LUGGAGE COMPARTMENT DOOR GARNISH SUB-ASSY OUTSIDE
(See Page 76-18)

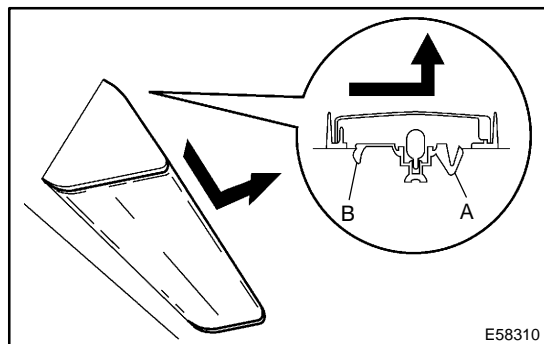

3. REMOVE LICENSE PLATE LAMP ASSY

- (a) Pull the license plate light assy to the side of vehicle as shown in the illustration and release the claw, then disconnect the connector.