


REAR AXLE LH HUB BOLT REPLACEMENT

3006S-01


HINT:

- COMPONENTS: [See page 30-4](#)
 - Replace the RH side by the same procedures with the LH side.
1. REMOVE REAR WHEEL
 2. DISCONNECT REAR DISC BRAKE CALIPER ASSY LH ([See page 30-26](#))
 3. REMOVE REAR DISC

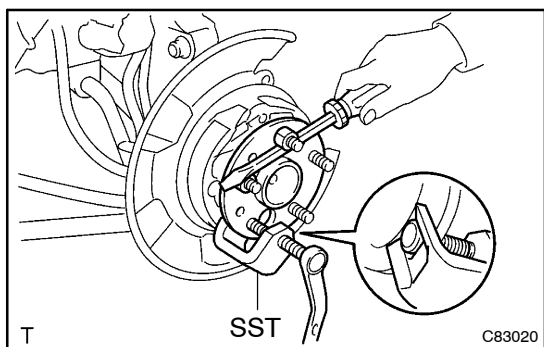

4. REMOVE REAR AXLE LH HUB BOLT

- (a) Using SST and a screwdriver or an equivalent to hold, remove the rear axle LH hub bolt.
SST 09628-10011

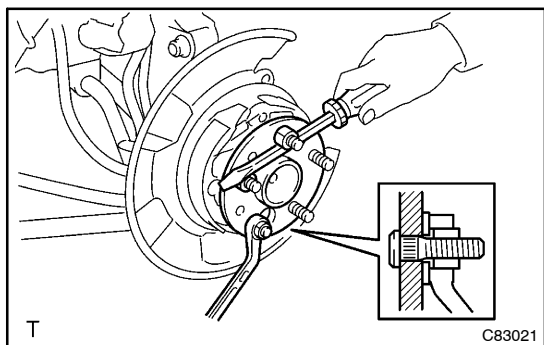

5. INSTALL REAR AXLE LH HUB BOLT

- (a) Install a washer and nut to a new rear axle LH hub bolt as shown in the illustration.
- (b) Using a screwdriver to hold, install the rear axle LH hub bolt by torquing the nut.

6. INSTALL REAR DISC

7. INSTALL REAR DISC BRAKE CALIPER ASSY LH ([See page 30-26](#))
8. INSTALL REAR WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)