


TRANSMISSION CONTROL CABLE ASSY (ATM)

401EL-01


REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL
2. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY (SEE PAGE 71-16)
3. REMOVE AIR CONDITIONING RADIATOR ASSY (SEE PAGE 55-34)
4. REMOVE AIR BAG ECU ASSY (SEE PAGE 60-59)
5. REMOVE AIR CLEANER ASSY (SEE PAGE 14-29) or (SEE PAGE 14-164)
6. REMOVE INTAKE AIR CONNECTOR SUB-ASSY (SEE PAGE 14-29) or (SEE PAGE 14-164)
7. REMOVE EXHAUST PIPE ASSY (SEE PAGE 15-3)

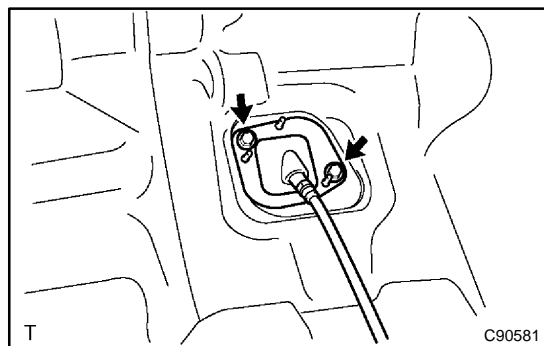


8. REMOVE TRANSMISSION CONTROL CABLE ASSY


- (a) Remove the 2 bolts and disconnect shift cable grommet retainer No.2.

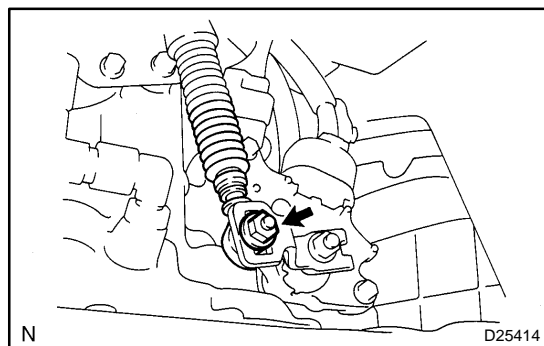


- (b) Remove the nut from the control shaft lever.
- (c) Disconnect the control cable from the control shaft lever.

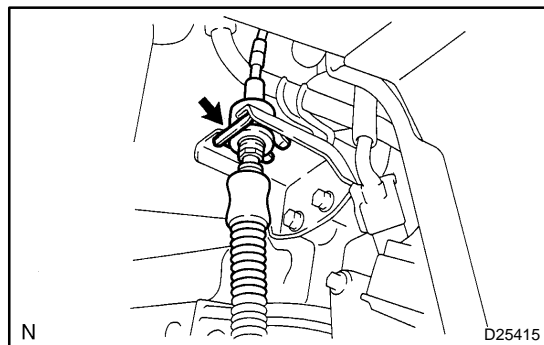


- (d) Remove the clip and disconnect the control cable from the control cable bracket.

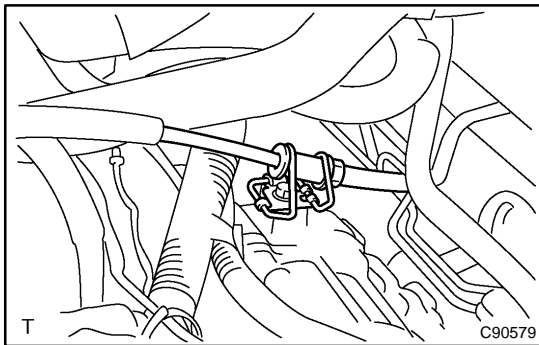

- (e) Disconnect the control cable from the control cable clamp.

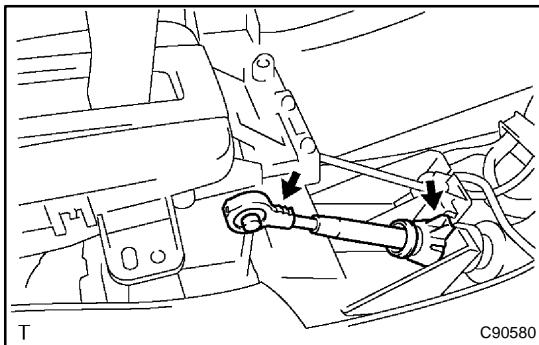

- (f) Disconnect the floor shift cable from the transmission floor shift assy.
 (g) Pull out the control cable from the body.
 (h) Remove the shift cable grommet retainer No. 2.

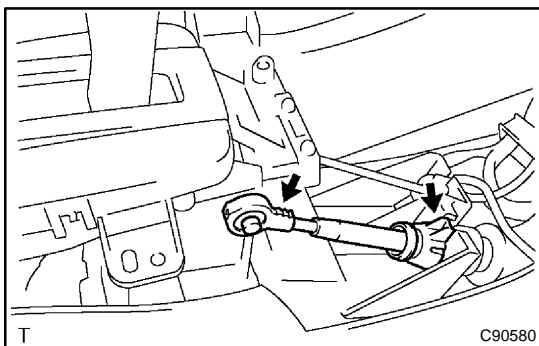


9. INSTALL TRANSMISSION CONTROL CABLE ASSY


- (a) Put in the control cable to the body.
 (b) Install the shift cable grommet retainer No.2 to the floor shift cable.
 (c) Install the floor shift cable as shown in the illustration.

HINT:


- Install it with the uneven surface facing to up.
- Fit the claws securely.

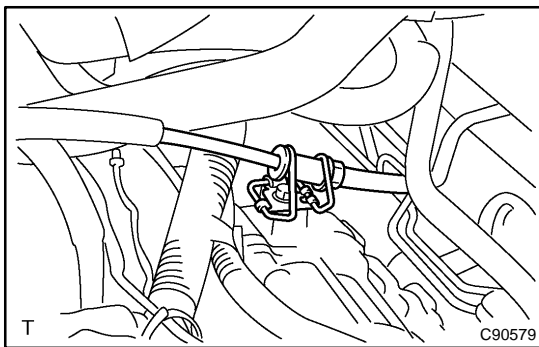


- (d) Connect the control cable to the control cable clamp.

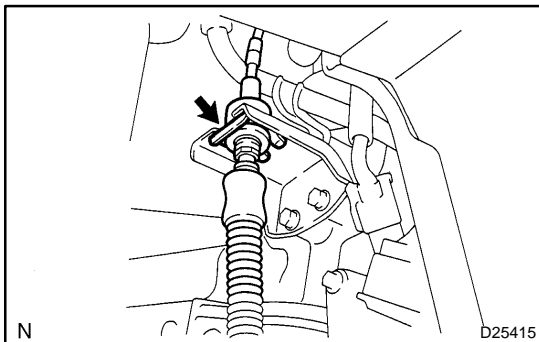

- (e) Install the control cable and a new clip to the bracket.

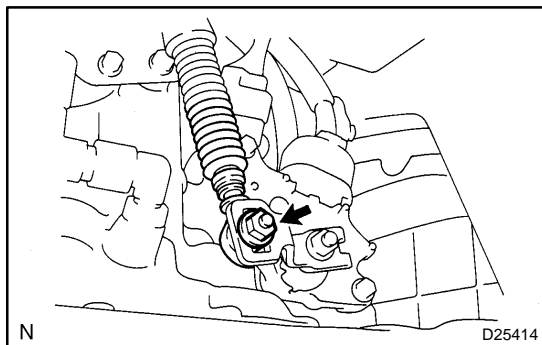

- (f) Temporarily install the control cable to the control shaft lever with nuts.

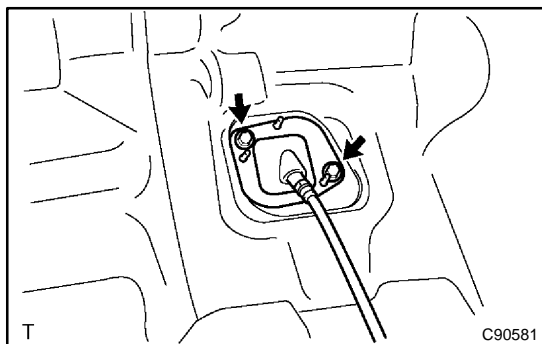

- (g) Install the shift cable grommet retainer No.2 with the 2 bolts.

Torque: 4.9 N·m (50 kgf·cm, 43 in.-lbf)

10. INSTALL EXHAUST PIPE ASSY (SEE PAGE 15-3)
11. INSTALL AIR BAG ECU ASSY (SEE PAGE 60-59)
12. INSTALL AIR CONDITIONING RADIATOR ASSY (SEE PAGE 14-29) or (SEE PAGE 14-164)
13. ADJUST SHIFT LEVER POSITION (SEE PAGE 40-64)
14. INSPECT SHIFT LEVER POSITION (SEE PAGE 40-64)
15. INSTALL INTAKE AIR CONNECTOR SUB-ASSY (SEE PAGE 14-29) or (SEE PAGE 14-164)
16. INSTALL AIR CLEANER ASSY (SEE PAGE 14-29) or (SEE PAGE 14-164)
17. INSTALL BATTERY NEGATIVE TERMINAL