


# OIL PUMP ASSY (2AZ-FE)

## REPLACEMENT

1705T-01

1. REMOVE CHAIN SUB-ASSY  
(See page 14-105)

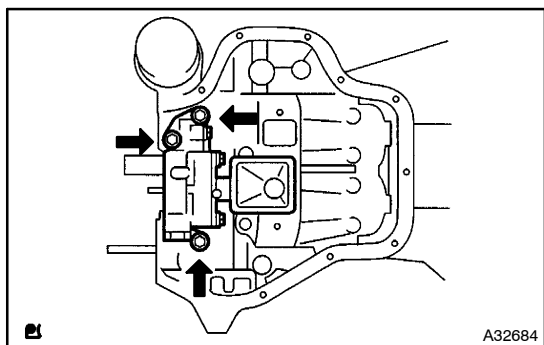

2. REMOVE OIL PUMP ASSY

- (a) Remove 3 bolts and oil pump assembly.

3. INSTALL OIL PUMP ASSY

- (a) Place a new gasket on the cylinder block.
- (b) Install the oil pump assembly with 3 bolts.

**Torque: 19 N·m (194 kgf·cm, 14 ft·lbf)**