

## OVERHAUL

### HINT:

- Installation is the reverse order of the removal. But, the installation is indicated only when it has a point.
- In the RH side, work in the same procedure as in the LH side.

#### 1. DISCONNECT BATTERY NEGATIVE TERMINAL

#### 2. REMOVE FRONT SEAT TRACK COVER LH REAR OUTER

#### 3. REMOVE FRONT SEAT TRACK COVER LH REAR INNER


#### 4. REMOVE FRONT SEAT ASSY LH

- (a) Remove the 4 bolts.
- (b) Disconnect the connectors, and then remove the front seat assembly LH.

#### 5. REMOVE FRONT SEAT HEADREST ASSY

#### 6. REMOVE VERTICAL SEAT ADJUSTER KNOB

- (a) Using a cloth or something, remove the snap rings and the vertical seat adjusting knob.

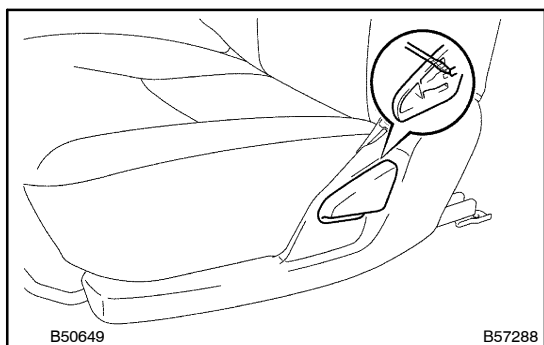


#### 7. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH

- (a) Using a screwdriver, remove the reclining adjuster release handle LH.

### HINT:

Tape the screwdriver tip before use.

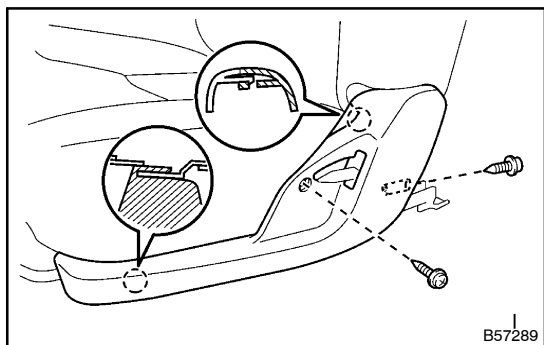


#### 8. REMOVE RECLINING ADJUSTER COVER LH

- (a) Remove the 2 screws.
- (b) Disengage the claws, and then remove the reclining adjuster cover LH.

#### 9. REMOVE FRONT SEAT INNER BELT ASSY LH

- (a) Disconnect the connector.
- (b) Remove the nut and the front seat inner belt assembly LH.

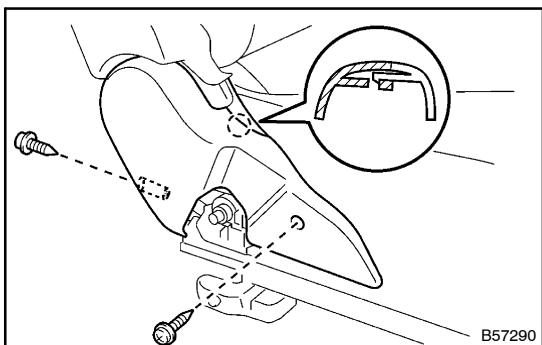**10. REMOVE FRONT SEAT CUSHION SHIELD INNER LH**


- (a) Remove the 2 screws.
- (b) Disengage the claws and the front seat cushion shield inner LH.

**11. REMOVE FRONT SEAT BACK ASSY**

- (a) Remove the hog rings at the lower portion of the seat back cover.
- (b) w/ Side airbag:  
Disconnect the wire harness of the side airbag from the seat cushion.
- (c) Remove the 4 bolts and the front seat back cover assembly LH.

**12. REMOVE RECLINING ADJUSTER KNOB**

- (a) Using a cloth or something, remove the snap rings and the reclining adjuster knob.

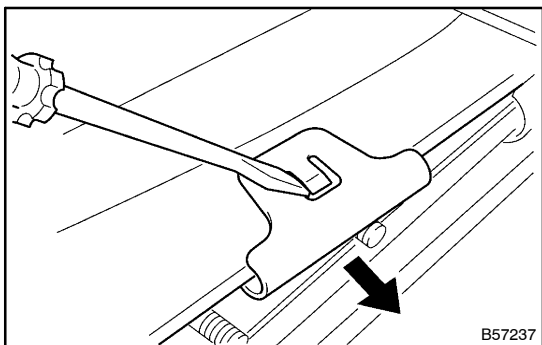**13. REMOVE SEPARATE TYPE FRONT SEAT BACK COVER**

- (a) Turn up the cover.
- (b) w/ Side airbag:  
Using a screwdriver, disengage the seat back cover bracket.
- (c) Disengage the claws to remove the 2 headrest supports, and then take away the front seat cover LH from the pad spring.
- (d) Remove the hog rings, and then take away the cover from the pad.

**14. REMOVE FRONT SEAT BACK HEATER ASSY LH(W/ SEAT HEATER)**

- (a) Cut off the tack pins which fasten the seat heater, and then remove the front seat back heater assembly LH from the cushion cover.

**NOTICE:**

**Be careful not to damage the seat cushion cover.**

**15. REMOVE SEPARATE TYPE FRONT SEAT CUSHION COVER****16. REMOVE FRONT SEAT CUSHION HEATER ASSY LH(W/ SEAT HEATER)**

- (a) Cut off the tack pins which fasten the seat heater, and then remove the seat cushion heater assembly LH from the seat back cover.

**NOTICE:**

**Be careful not to damage the seat back cover.**

**17. REMOVE RECLINING ADJUSTER INSIDE COVER LH**



- (a) Remove the 2 screws and the reclining adjuster inside cover LH.

**18. REMOVE RECLINING ADJUSTER INSIDE COVER RH****19. INSTALL FRONT SEAT CUSHION HEATER ASSY LH(W/ SEAT HEATER)**

- (a) Set the seat heater to the seat cushion cover.  
 (b) Install the front seat cushion heater assembly LH to the seat cushion cover with the 12 tack pins.

**NOTICE:**

**Do not substitute other metal parts for tack pins.**

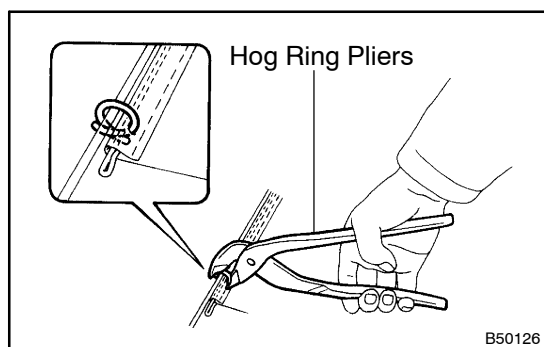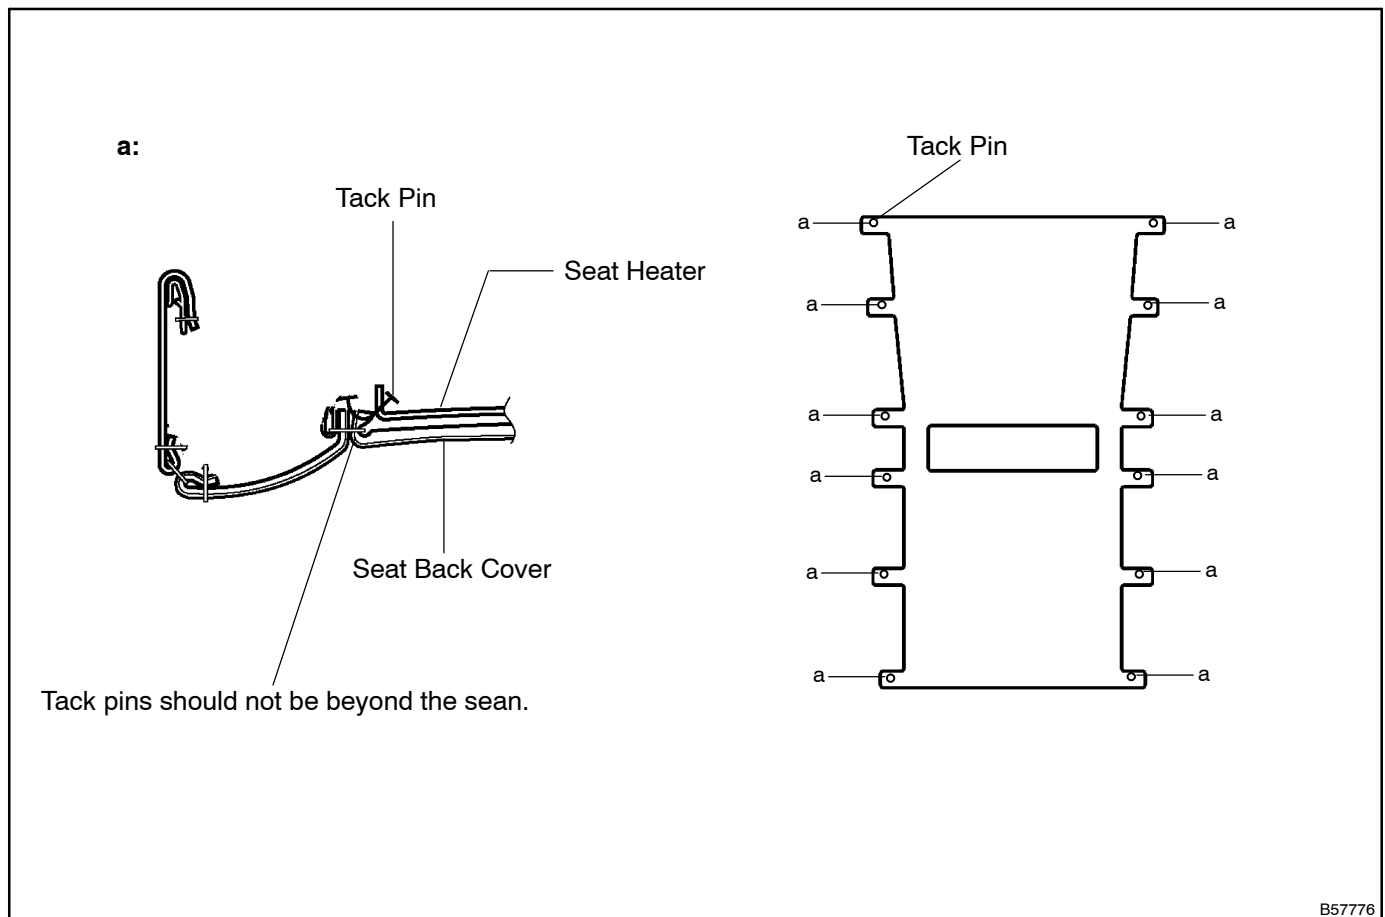**20. INSTALL SEPARATE TYPE FRONT SEAT CUSHION COVER**

- (a) Using hog ring pliers, install new hog rings.

**NOTICE:**


- **Be careful not to damage the cover.**
- **When installing the hog rings, take care to prevent wrinkles as little as possible.**

**21. INSTALL FRONT SEAT BACK HEATER ASSY LH(W/ SEAT HEATER)**


- (a) Set the seat heater to the seat back cover.
- (b) Install the front seat back heater assembly LH to the seat back cover with the 8 tack pins.

**NOTICE:**

- Do not substitute other metal parts for tack pins.

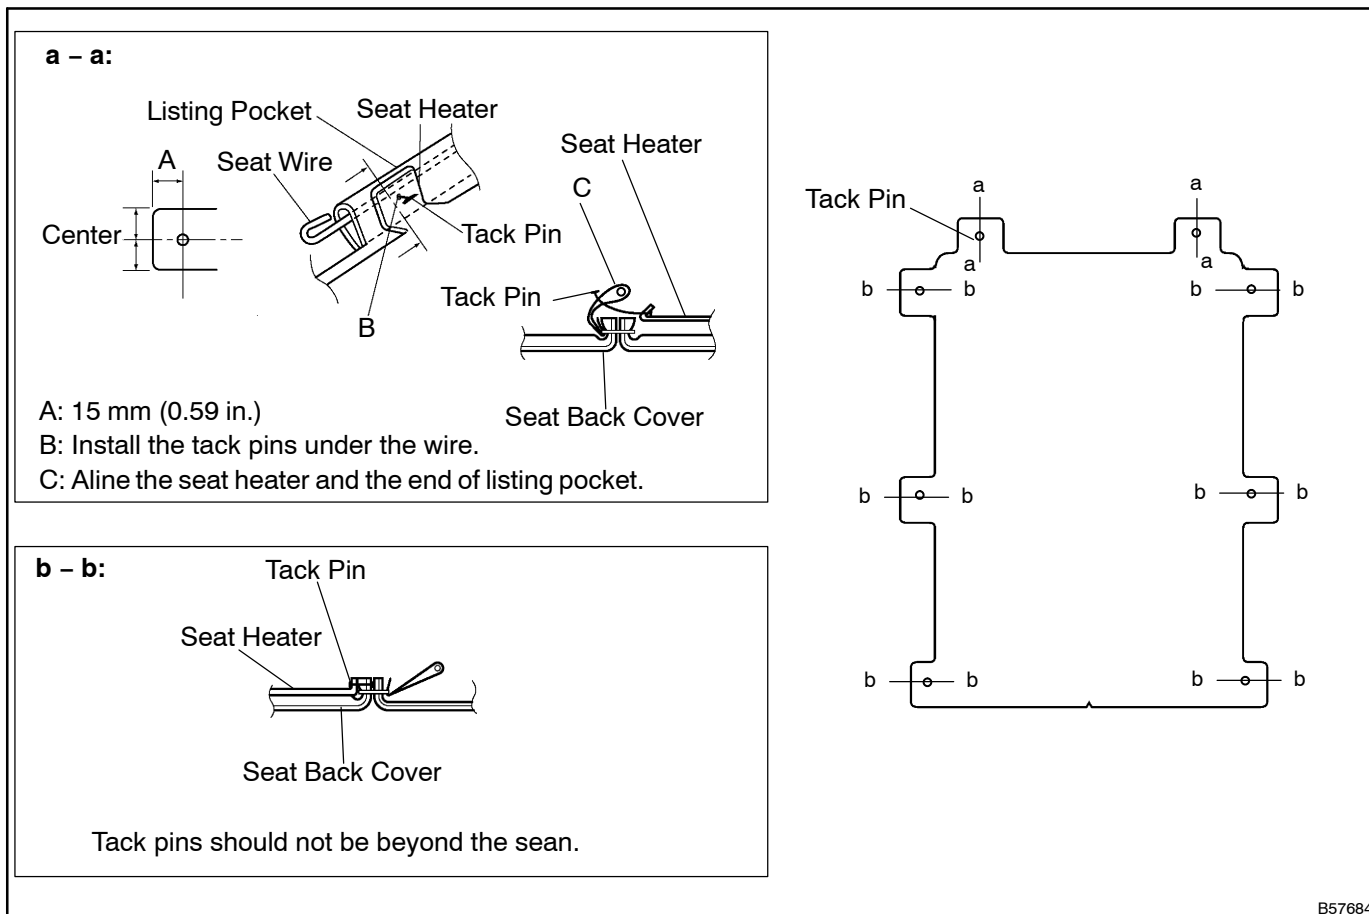**22. INSTALL SEPARATE TYPE FRONT SEAT BACK COVER****NOTICE:**


- For a vehicle with side airbag, if the seat back cover has damage, the side airbag may not activate normally, and therefore it is necessary to replace the seat back cover.
- For a vehicle with side airbag, if the side airbag has damage replace the pad and the frame with new ones.
- For a vehicle with side airbag, the side airbag may not activate normally unless the seat back cover is securely installed, as shown in the following procedures.

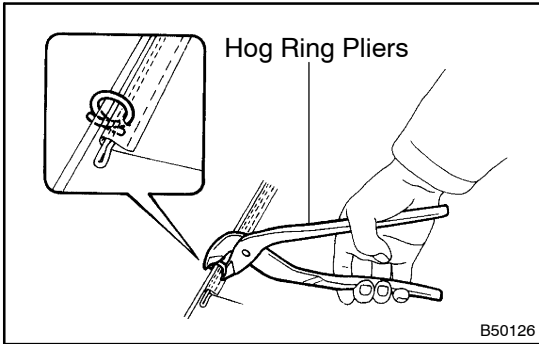

- (a) Using hog ring pliers, install new hog rings.

**NOTICE:**

- **Be careful not to damage the cover.**
- **When installing the hog rings, take care to prevent wrinkles as little as possible.**

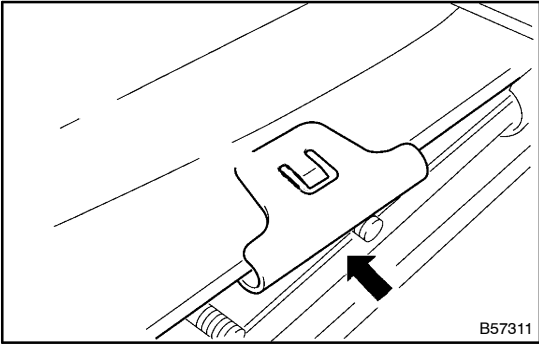

- (b) w/ Side airbag:

Install the seat back cover bracket.


**NOTICE:**

- **For a vehicle with side airbag, the side airbag may not activate normally unless the seat back cover is securely installed.**
- **Check that the strap has no twist after installing the bracket.**


### 23. INSTALL FRONT SEAT BACK ASSY

- (a) Install the front seat back assembly with the 4 bolts.

**Torque: 43.1 N·m (440 kgf·cm, 32 ft·lbf)**

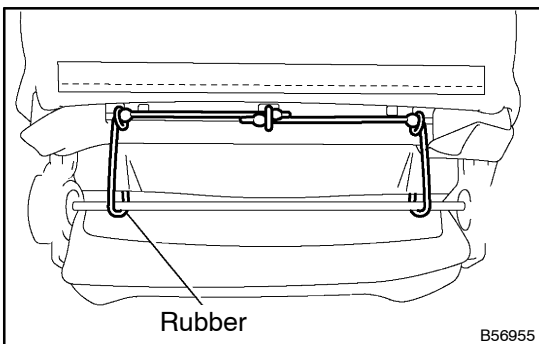

- (b) As shown in the illustration, engage the rubber with a hole of the front seat back frame with new hog rings.

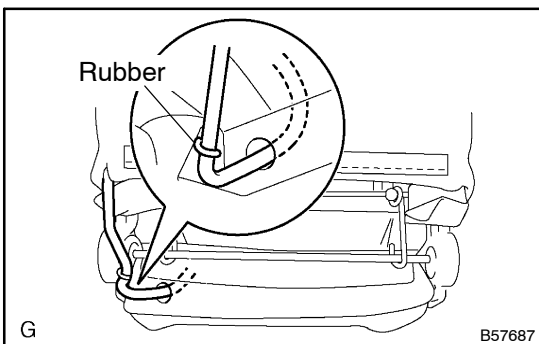

- (c) Install the wire harness and clamps of the side airbag through the seat cushion cover end.

- (d) Using hog ring pliers, install new hog rings.

**NOTICE:**

- **Be careful not to damage the cover.**
- **When installing the hog rings, take care to prevent wrinkles as little as possible.**

**24. INSTALL FRONT SEAT INNER BELT ASSY LH**

- (a) Install the front seat inner belt assembly LH with the bolt.

**Torque: 42 N·m (420 kgf·cm, 31 ft·lbf)**

**NOTICE:**

**Be careful not to damage the cover.**

**25. INSTALL FRONT SEAT ASSY LH**

- (a) Set the front seat assembly LH to the vehicle.  
(b) Install the front seat assembly LH temporarily with the 4 bolts.

**Torque: 36.8 N·m (377 kgf·cm, 27 ft·lbf)**

**NOTICE:**

**Check that the seat adjuster locked.**

- (c) When sliding the seat, check that the both sides of the adjuster will lock simultaneously.