


CURSOR OR MAP ROTATES WHEN VEHICLE IS STOPPED

INSPECTION PROCEDURE

1 CHECK THE CONDITION

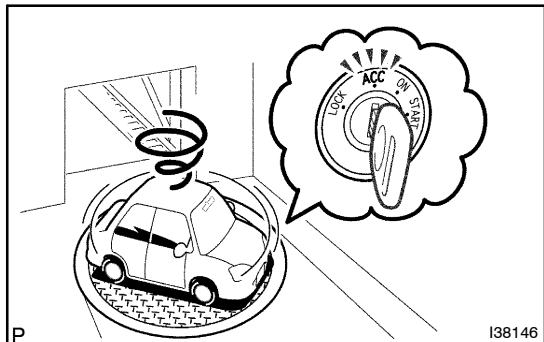

- (a) Check with the customer if the vehicle has been turned by a turn-table at parking.

Standard: The vehicle has not been turned by a turn-table.

HINT:

If the ignition switch is turned to the ACC or ON position while the vehicle is being turned by a turntable, the system may store the angular velocity at this time. For this reason, the vehicle position cursor could deviate.

NG

TURN IGNITION SWITCH TO ON POSITION WHEN VEHICLE IS COMPLETELY STOPPED

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE 05-46)