

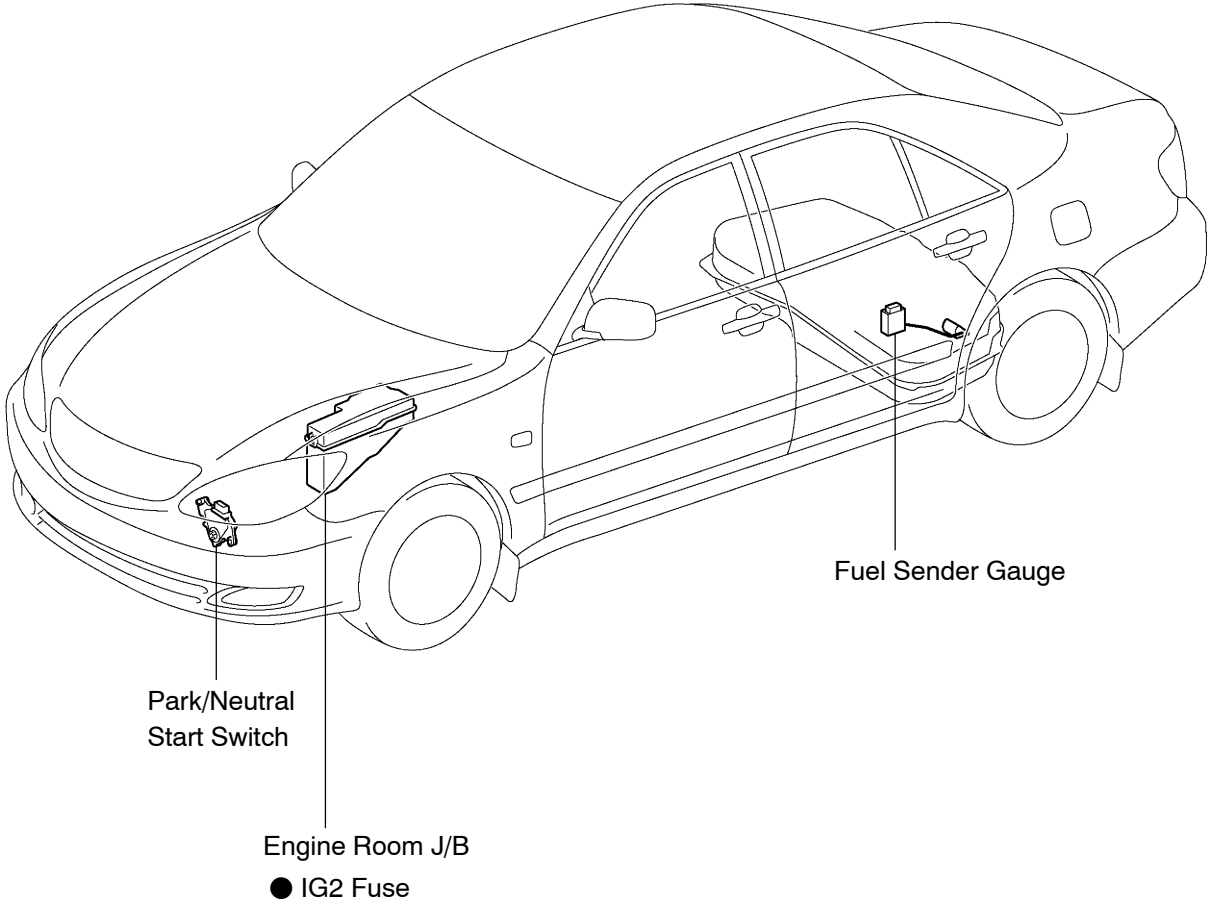
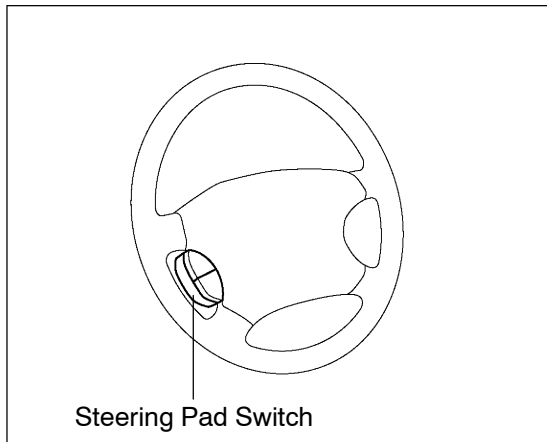
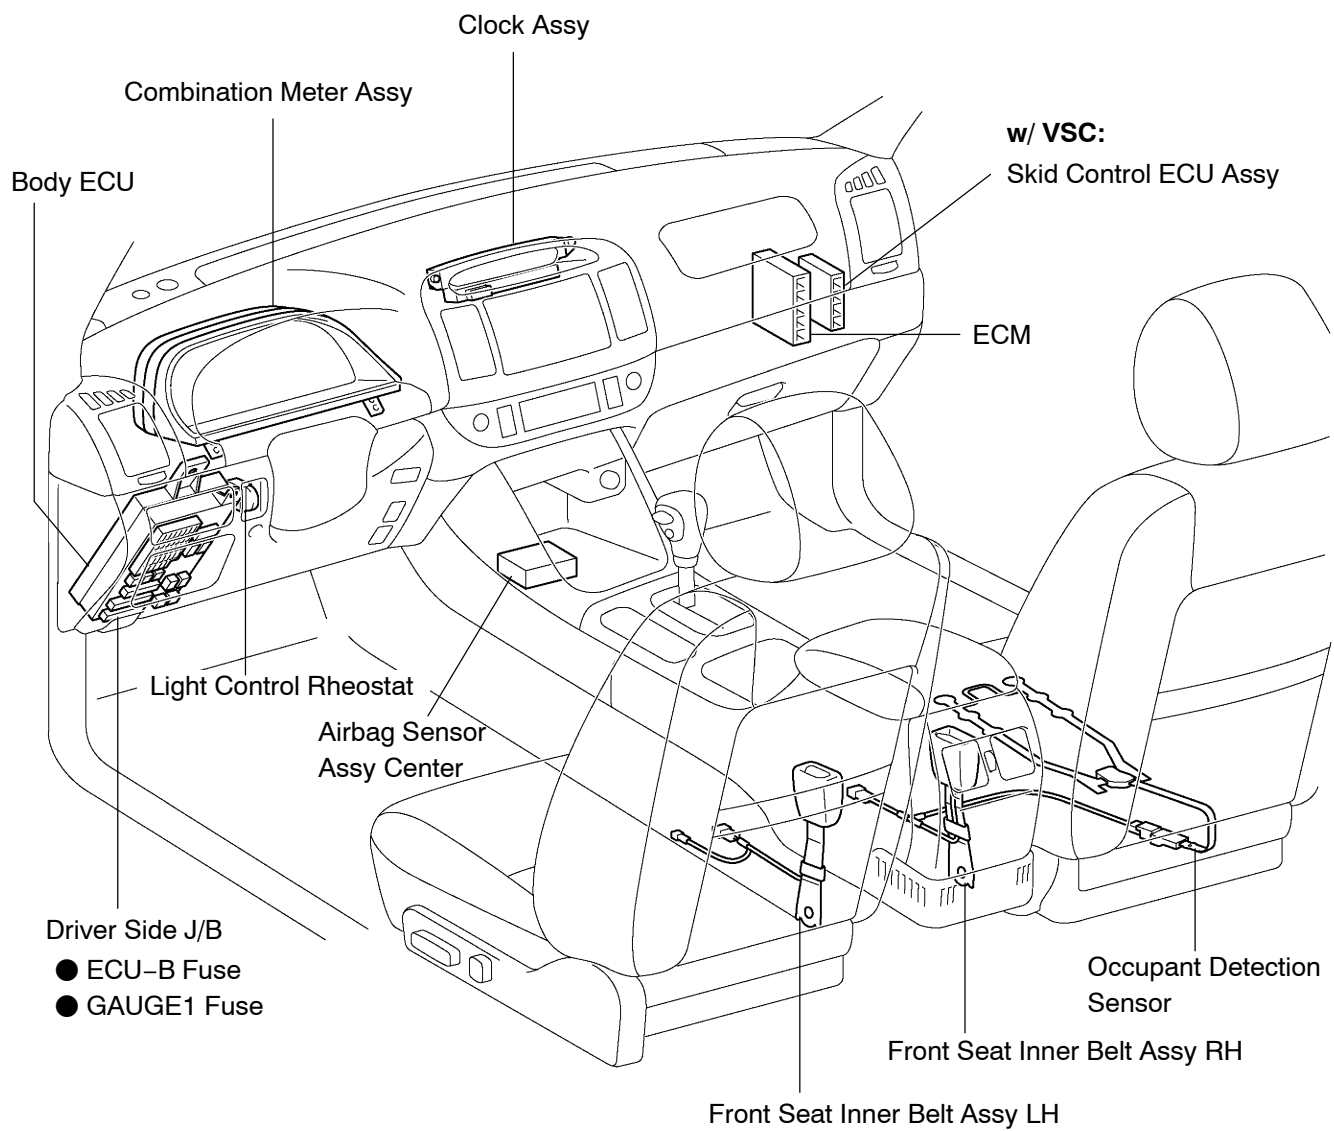
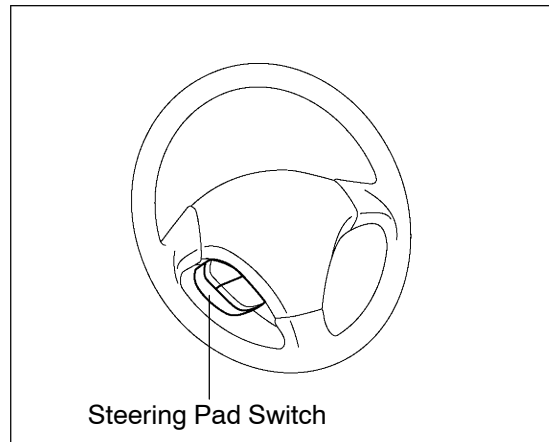
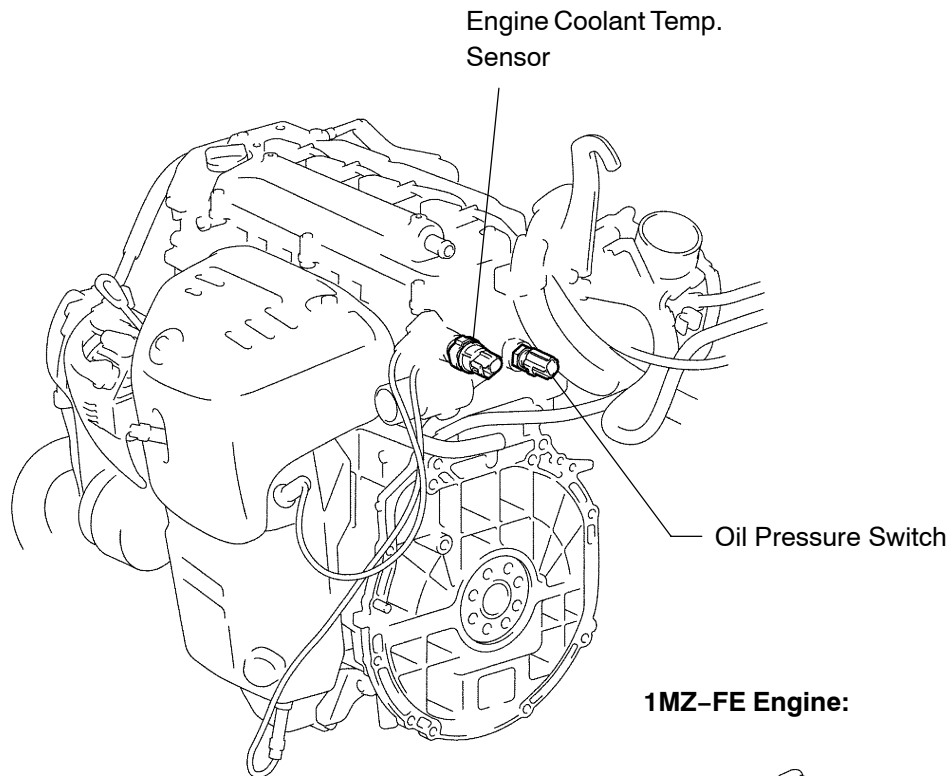



LOCATION

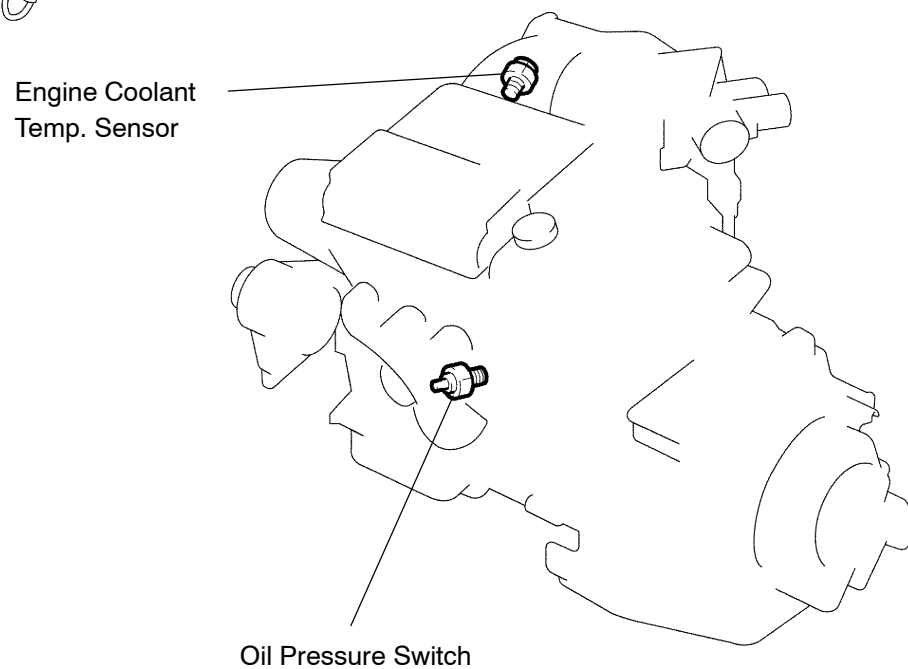

4 Spoke Type:**3 Spoke Type:**

1AZ-FE, 2AZ-FE Engine:**1MZ-FE Engine:**

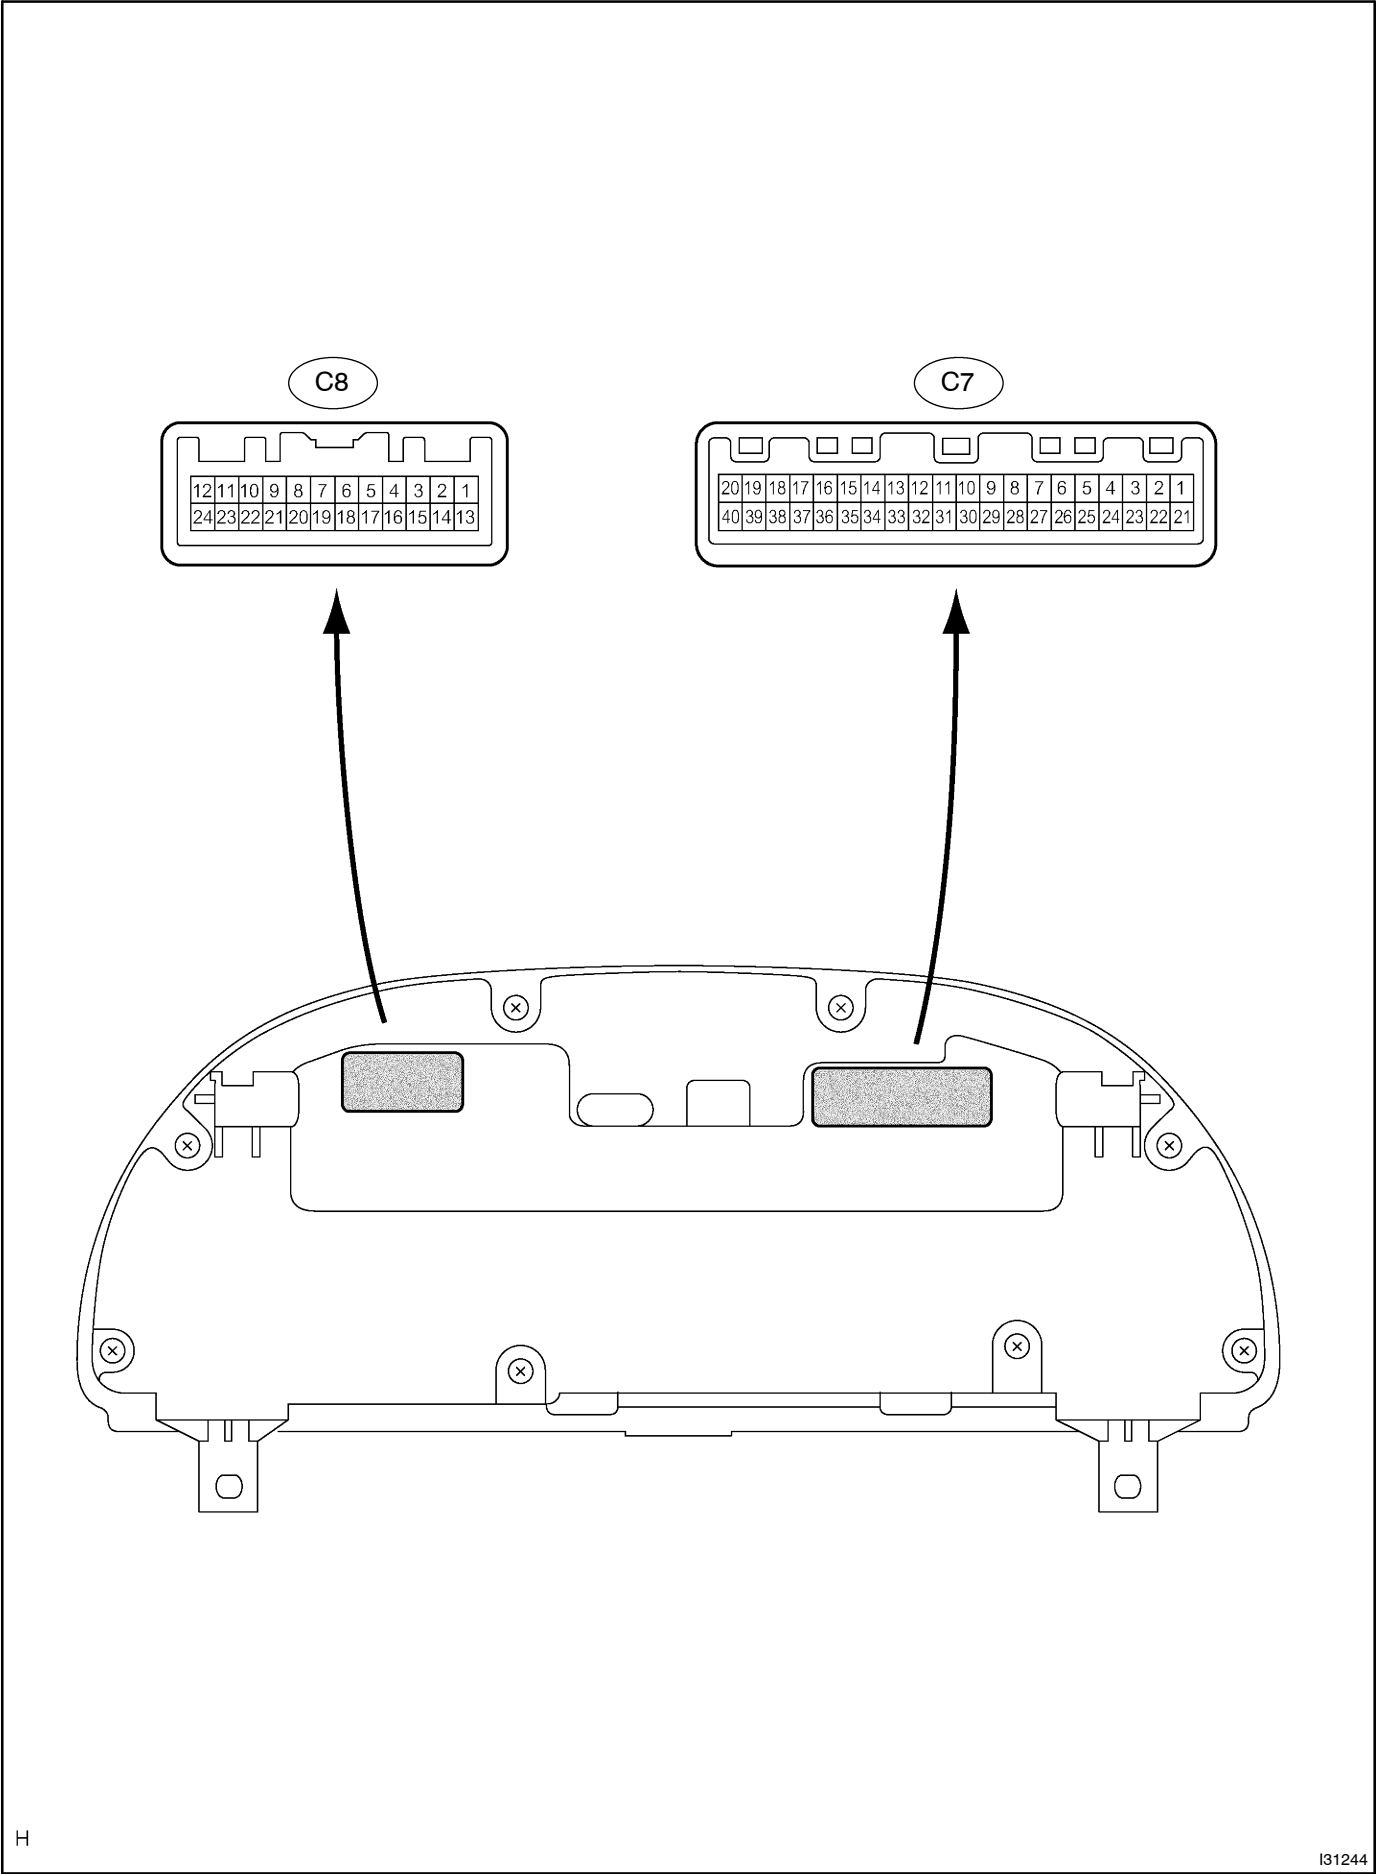

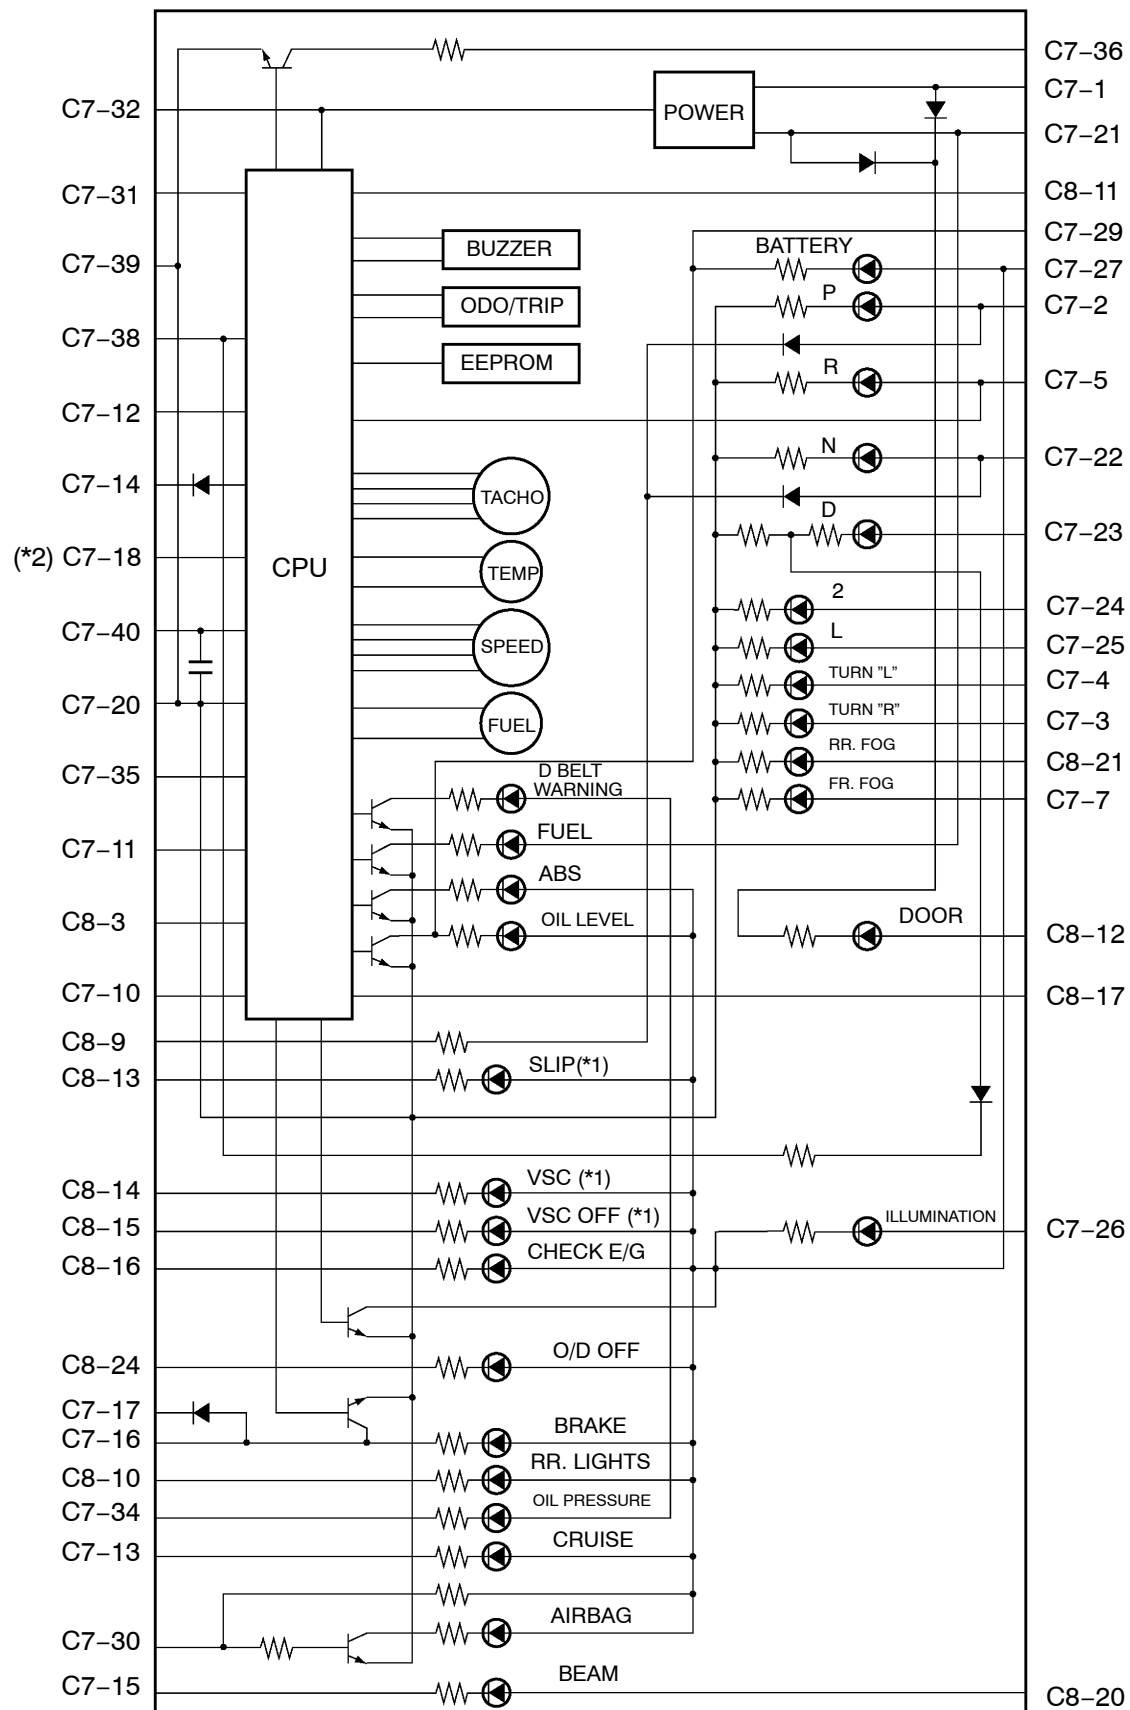

(*1): w/ VSC

(*2): 1MZ-FE, 2AZ-FE Engine

H

I31678

Terminal No.		Wire harness side
C7	1	ECU-B Fuse
	2	A/T Indicator Light Switch (P)
	3	Turn Signal Flasher Relay (R)
	4	Turn Signal Flasher Relay (L)
	5	A/T Indicator Light Switch (R)
	7	Fog Relay
	10	Skid Control ECU Assy
	11	ECM (TACH)
	12	ECM (THWO)
	13	ECM (Cruise Control)
	14	Airbag Sensor Assy Center
	15	Ground
	16	Brake Fluid Level Warning Switch (*1)
	18	Engine Oil Level Sensor (*2)
	20	Ground (Signal Ground)
	21	GAUGE1 Fuse
	22	A/T Indicator Light Switch (N)
	23	A/T Indicator Light Switch (D)
	24	A/T Indicator Light Switch (2)
	25	A/T Indicator Light Switch (L)
	26	TAIL Relay
	27	IG2 Fuse
	29	Generator
	30	Airbag Sensor Assy Center
	31	Fuel Sender Gauge (FR)
	32	Fuel Sender Gauge (FV)
	34	Oil Pressure Switch
	35	Skid Control ECU Assy (SP1)
	36	Clock Assy (4P OUT)
	38	Light Control Rheostat
	39	Fuel Sender Gauge (FE)
	40	Ground (Power Ground)
C8	3	Skid Control ECU Assy
	9	Skid Control ECU Assy (*1)
	11	Body ECU (Key buzzer)
	12	Body ECU (Door open)
	13	Skid Control ECU Assy (SLIP) (*4)
	14	Skid Control ECU Assy (VSC) (*4)
	15	Skid Control ECU Assy (VSC OFF) (*4)
	16	ECM (CHECK E/G)
	17	Clock Assy (Fuel Output)
	20	DIM Relay
	21	Rear Fog Light Switch
	24	ECM (O/D OFF)

*1: w/o VSC *2: 1MZ-FE, 2AZ-FE *3: 1AZ-FE, 2AZ-FE *4: w/ VSC