


## REPLACEMENT

HINT:

COMPONENTS: (See page 60-53)

1. **PRECAUTION** (See page 60-1)
2. **SEPARATE BATTERY NEGATIVE TERMINAL** (See page 60-1)
3. **REMOVE CONSOLE PANEL UPPER REAR**  
(See page 71-10)
4. **REMOVE CONSOLE BOX CARPET**  
(See page 71-10)
5. **REMOVE RR CONSOLE BOX** (See page 71-10)
6. **REMOVE CONSOLE PANEL UPPER**  
(See page 71-10)
7. **REMOVE CONSOLE BOX FRONT**  
(See page 71-10)
8. **REMOVE AIR DUCT REAR NO.1**  
(See page 55-21)
9. **REMOVE AIR DUCT REAR NO.2**  
(See page 55-21)
10. **REMOVE CONSOLE BOX DUCT NO.1 (A/T TRANSAXLE)**  
(See page 55-21)

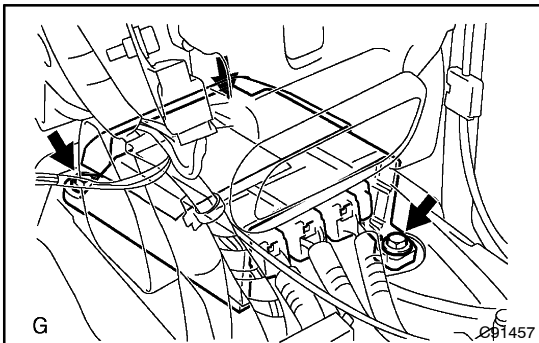

### 11. REMOVE AIR BAG SENSOR ASSY CENTER

- (a) Disconnect the 3 connectors from the air bag sensor assy center.
- (b) Remove the 3 bolts and air bag sensor assy center.

### 12. INSPECT AIR BAG SENSOR ASSY CENTER

(See page 60-9)

### 13. INSTALL AIR BAG SENSOR ASSY CENTER

- (a) Check that the ignition switch turn OFF.
- (b) Check that the battery negative terminal is disconnected.

**NOTICE:**

**Do not start the operation for 90 seconds after removing the terminal.**

- (c) Temporarily install the air bag sensor assy center with the 3 bolts.
- (d) Tighten the 3 bolts to the specified torque.

**Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)**

- (e) Connect the connector to the air bag sensor assy center.
- (f) Check that no play is identified.
- (g) Check that the water-proof sheet is properly set.

### 14. **INSPECT SRS WARNING LIGHT** (See page 05-758)