


VENTILATION VALVE SUB-ASSY (2AZ-FE)(From July, 2003)

REPLACEMENT

120BQ-05

1. REMOVE VENTILATION VALVE SUB-ASSY

- (a) Disconnect the PCV hose from the PCV valve.
- (b) Remove the PCV valve.

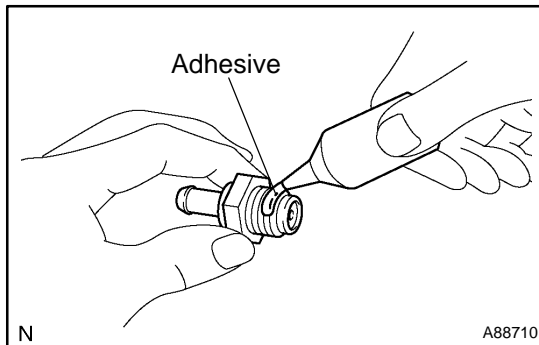

2. INSTALL VENTILATION VALVE SUB-ASSY

- (a) Reinstall the PCV valve.
 - (1) Apply adhesive to 2 or 3 threads.

Adhesive:

Part No. 08833-00070, THREE BOND 1324 or equivalent

- (2) Reinstall the PCV valve.

Torque: 19 N·m (193 kgf·cm, 14 ft·lbf)

- (b) Connect the PCV hose to the PCV valve.