


REPLACEMENT

HINT:

COMPONENTS: (See page 60-62)

1. PRECAUTION (See page 60-1)
2. SEPARATE BATTERY NEGATIVE TERMINAL (See page 60-1)
3. REMOVE REAR SEAT CUSHION ASSY (See page 72-21)
4. REMOVE REAR SIDE SEAT BACK ASSY LH
(See page 72-21)

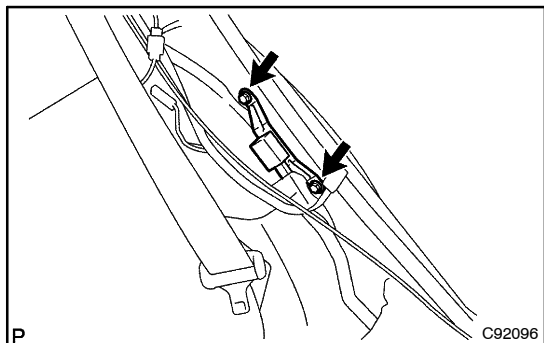

5. REMOVE AIR BAG SENSOR REAR LH

- (a) Disconnect the connector of the airbag sensor rear LH.
- (b) Remove the 2 bolts and the airbag sensor rear LH.

6. INSTALL AIR BAG SENSOR REAR LH

- (a) Select a suitable bolt (See page 60-1).
- (b) Install the airbag sensor rear LH with the 2 bolts.

Torque:

Property class 6T: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

Property class 8T: 20 N·m (200 kgf·cm, 14 ft·lbf)

- (c) Connect the connector of the airbag sensor rear LH.

NOTICE:

- Installation of the connector is done with the sensor assembly installed. Make sure the sensor assembly is installed with the specified torque.
 - If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
 - When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
 - After installation, shake the sensor assembly to check that there is no looseness.
7. INSPECT AIR BAG SENSOR REAR LH
(See page 60-9)
 8. INSTALL REAR SIDE SEAT BACK ASSY LH
(See page 72-21)
 9. INSPECT SRS WARNING LIGHT (See page 05-758)