

TOUCH PANEL SWITCH DOES NOT FUNCTION

INSPECTION PROCEDURE

1 CHECK TOUCH PANEL

- (a) Check for dirt on the display surface.

Standard: The display surface is clean.


NG

REMOVE ANY DIRT FOUND AND RECHECK TOUCH PANEL

OK

2 DISPLAY CHECK MODE (TOUCH SWITCH CHECK)

- (a) Enter the "Display Check" mode (Touch Switch Check) ([see page 05-52](#)).

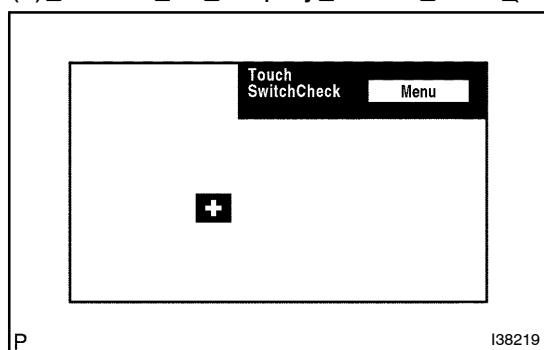

- (b) Touch the display in the area where the abnormal switch occurs.

Standard: A "+" mark appears at the touched position.

OK

REPLACE RADIO AND NAVIGATION ASSY
(SEE PUB. NO. RM915E, PAGE 67-4)

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE
([SEE PAGE 05-46](#))