


LUGGAGE COMPARTMENT DOOR ADJUSTMENT


7509D-03

1. INSPECT LUGGAGE COMPARTMENT DOOR PANEL SUB-ASSY

- (a) Check that the clearance is within the standard value.

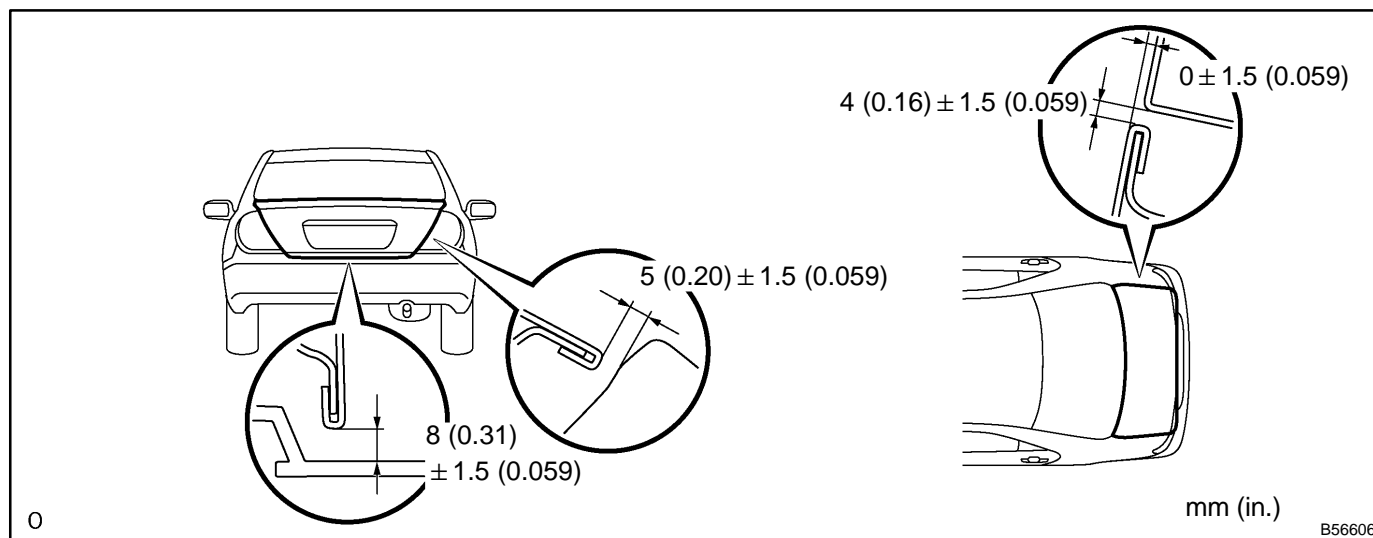


2. REMOVE LUGGAGE COMPARTMENT DOOR COVER(See page 76-9)
3. REMOVE LUGGAGE COMPARTMENT FLOOR MAT(See page 76-8)
4. REMOVE SPARE WHEEL COVER ASSY(See page 76-8)
5. REMOVE LUGGAGE COMPARTMENT SIDE COVER SUB-ASSY RH(See page 76-8)
6. REMOVE LUGGAGE COMPARTMENT TRIM HOOK NO.1(See page 76-8)
7. REMOVE REAR FLOOR FINISH PLATE(See page 76-8)

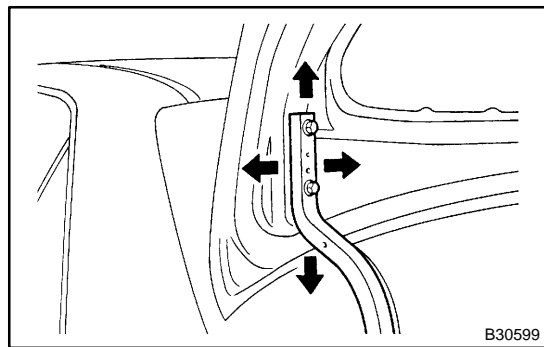

8. ADJUST LUGGAGE COMPARTMENT DOOR PANEL SUB-ASSY

- (a) For forward/rearward and right/left adjustments, loosen the bolts.
- (b) For a vertical adjustment of the door front end, increase or decrease the number of the washers between the hinge and door.
- (c) Tighten the bolts after adjustment.

Torque: 8.0 N·m (82 kgf·cm, 71 ft·lbf)

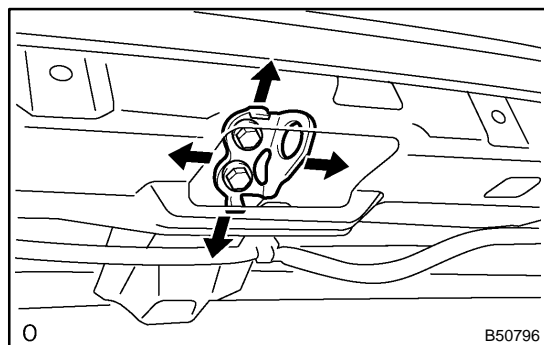

- (d) Using a hammer and a brass bar, tap the striker to adjust it.
- (e) Tighten the bolts after adjustment.

Torque: 5.5 N·m (56 kgf·cm, 49 ft·lbf)