

OIL COOLER ASSY (2AZ-FE)

1705U-01


REPLACEMENT

1. DRAIN COOLANT (See page 16-18)

2. REMOVE ENGINE OIL

3. REMOVE OIL FILTER SUB-ASSY
(See page 17-8)

SST 09228-06501

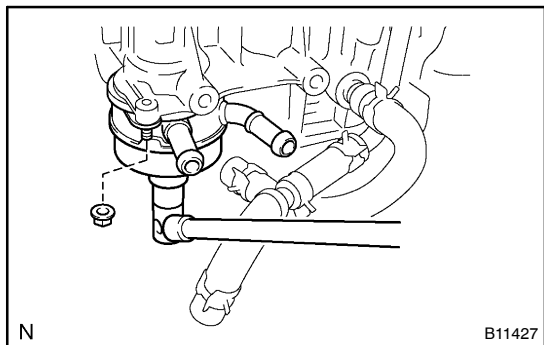

4. REMOVE OIL COOLER ASSY

- (a) Disconnect 2 water by-pass hoses.
- (b) Remove the nut.
- (c) Using socket wrench (30mm), remove the union.
- (d) Remove the oil cooler and O-ring.

5. INSTALL OIL COOLER ASSY

- (a) Install the new O-ring to oil cooler.
- (b) Apply engine oil to the O-ring.
- (c) Using socket wrench (30mm), install the oil cooler with union.

Torque: 79 N·m (800 kgf·cm, 58 ft·lb)

- (d) Install the nut.

Torque: 9.0 N·m (92 kgf·cm, 80 in.·lb)

6. INSPECT OIL LEAK

7. INSPECT/CHECK ENGINE COOLANT LEAK (See page 16-13)