




COMBINATION METER LOCATION

05ME6-01

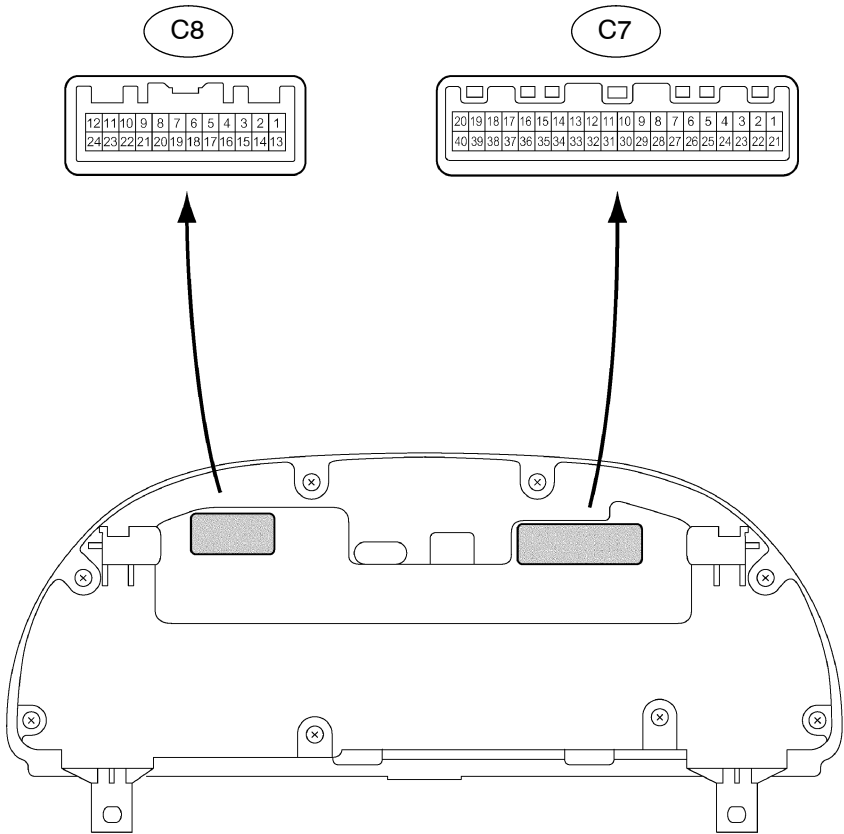

I43820

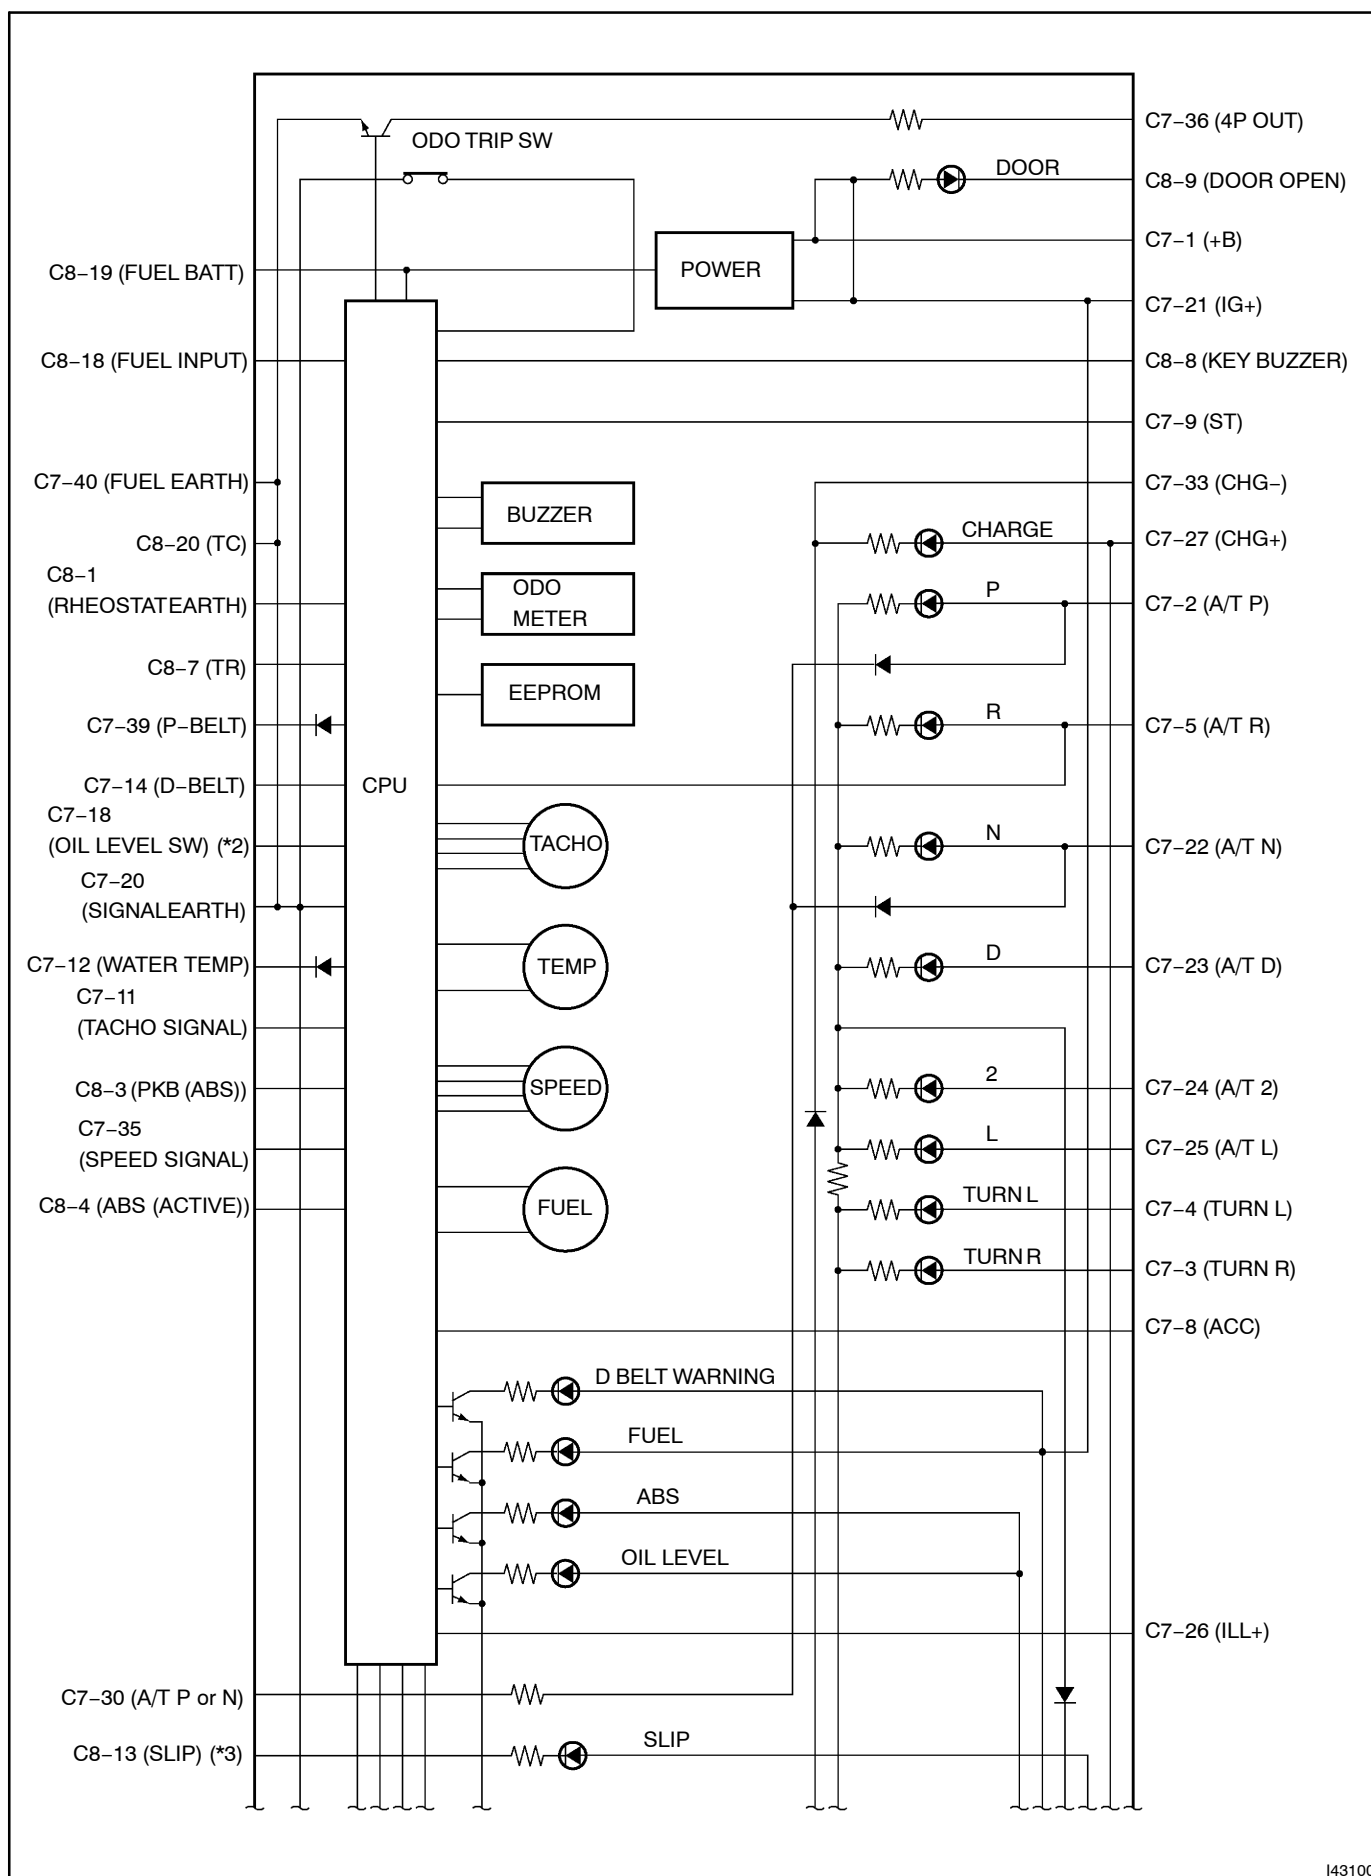

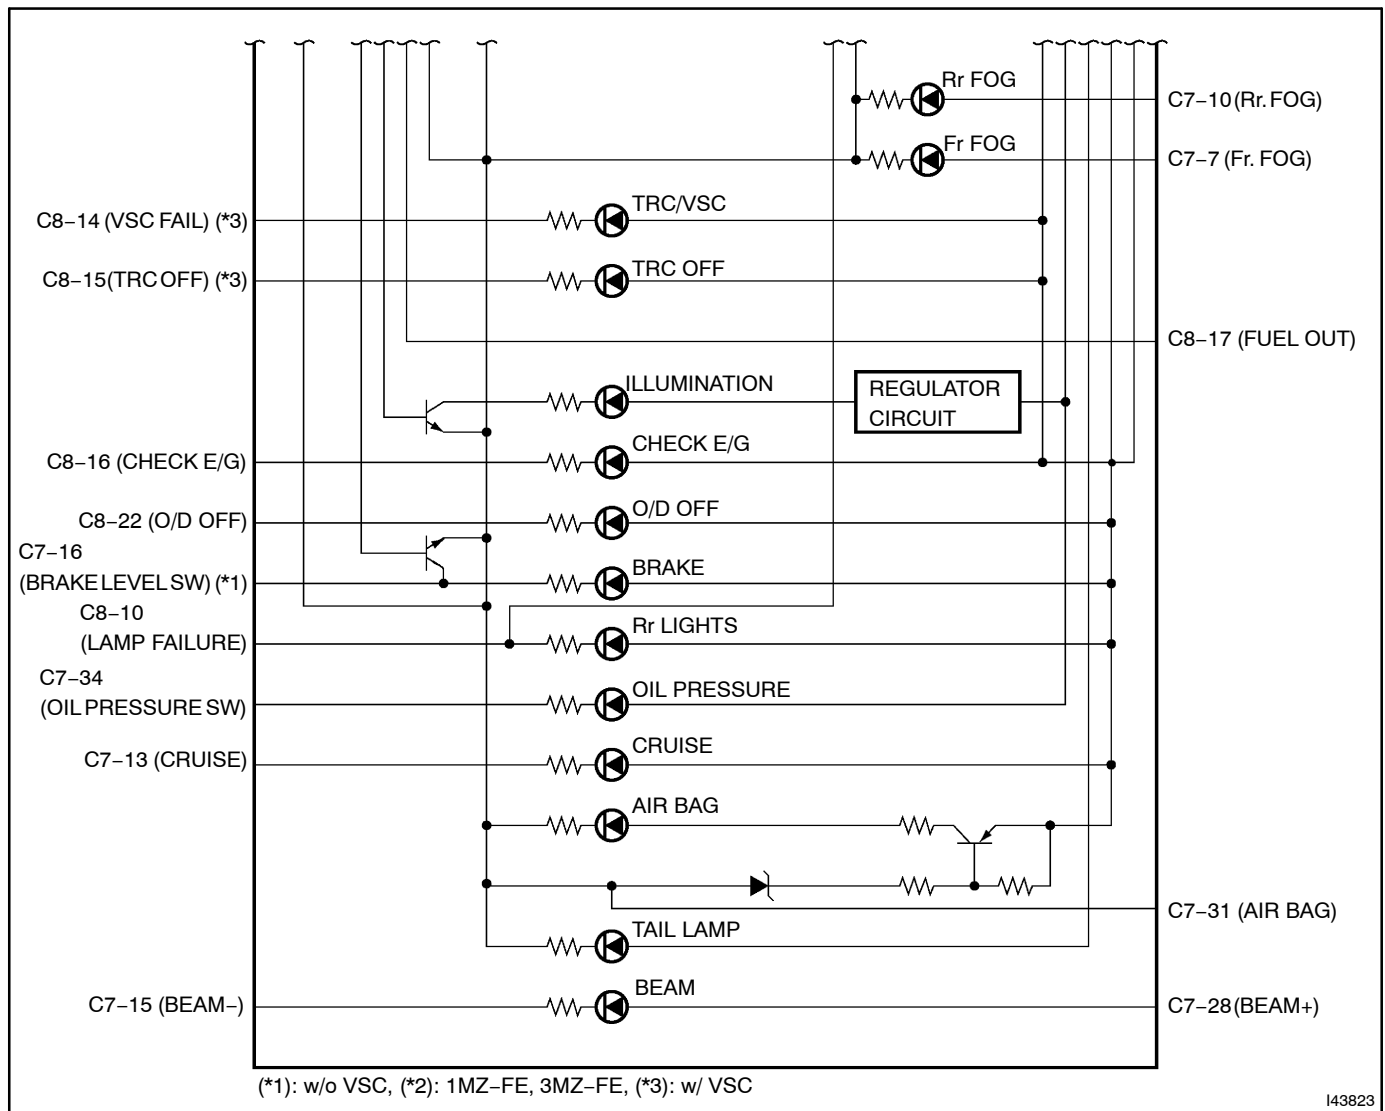

I43823

Terminal No.	Wire harness side
C7	1 ECU-B Fuse
	2 Park/Neutral Position Switch (P)
	3 Turn Signal Flasher (R)
	4 Turn Signal Flasher (L)
	5 Park/Neutral Position Switch (R)
	7 Front Fog Lights
	8 ECU-ACC Fuse
	9 ST Fuse
	10 Rear Fog Lights
	11 ECM (Tacho Signal)
	12 ECM (Water Temp)
	13 ECM (Cruise Control)
	14 Front Seat Inner Belt Assy (Driver Side)
	15 Ground
	16 Brake Fluid Level Warning Switch (*1)
	18 Oil Level Switch (*2)
	20 Ground (Signal Ground)
	21 GAUGE Fuse
	22 Park/Neutral Position Switch (N)
	23 Park/Neutral Position Switch (D)
	24 Park/Neutral Position Switch (2)
	25 Park/Neutral Position Switch (L)
	26 PANEL Fuse
	27 IG2 Fuse
	28 Head Fuse
	30 ECM
	31 Airbag Sensor Assy Center
	33 Generator
	34 Oil Pressure Switch
	35 ECM (Speed Signal)
	36 ECM (4P OUT)
	39 Front Seat Inner Belt Assy (Passenger Side)
	40 Ground (Fuel Ground)
C8	1 Ground (Rheostat Ground)
	3 Brake Actuator Assy (ABS) (*1), ABS & Traction Actuator Assy (VSC) (*3)
	4 Brake Actuator Assy (ABS) (*1), ABS & Traction Actuator Assy (VSC) (*3)
	7 Light Control Rheostat
	8 Body ECU (Key Buzzer)
	9 Body ECU (Door Open)
	10 Lamp Failure Sensor
	13 ABS & Traction Actuator Assy (Slip) (*3)
	14 ABS & Traction Actuator Assy (VSC) (*3)
	15 ABS & Traction Actuator Assy (TRC OFF) (*3)
	16 ECM (Check Engine)
	17 Clock Assy (Fuel Output)
	18 Fuel Sender Gauge Assy (FR)
	19 Fuel Sender Gauge Assy (FV)
	20 Light Control Rheostat
	22 O/D Off Switch

(*1): w/o VSC

(*2): 1MZ-FE, 3MZ-FE

(*3): w/ VSC