


INSPECTION

1. LIGHT CONTROL RHEOSTAT ASSY

- (a) Inspect continuity.
- (1) Check the continuity between the light control rheostat connector terminals when operating the rheostat volume knob.

Standard:

Switch	Terminal No. (Symbol)	Continuity
Turn the knob to maximum	1 (TC) \Leftrightarrow 3 (T)	Continuity
Other conditions of the above	1 (TC) \Leftrightarrow 3 (T)	No continuity

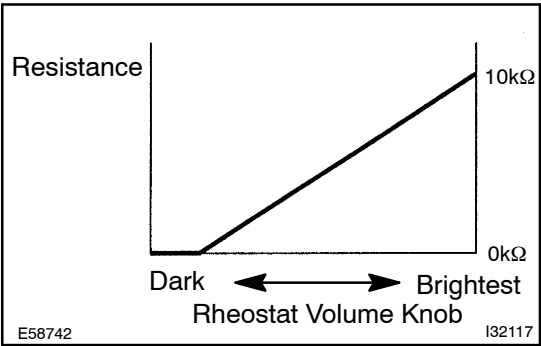

- (b) Check resistance.
- (1) Check the resistance between terminal 4 (RV) and terminal 3 (T) when operating the light control rheostat volume knob. Also, check that the resistance changes continuously.

Standard resistance:

Turn the knob to maximum: Approx. 10 kΩ

Turn the knob to minimum: Approx. 0 kΩ