


ENHANCEMENT OF PRODUCT APPEAL

REAR SEAT

ISO-FIX bar for securing child seats has been provided behind the seat cushion of the rear seat.  
Three CRS anchor brackets for securing a child seat have been provided above the package tray trim.

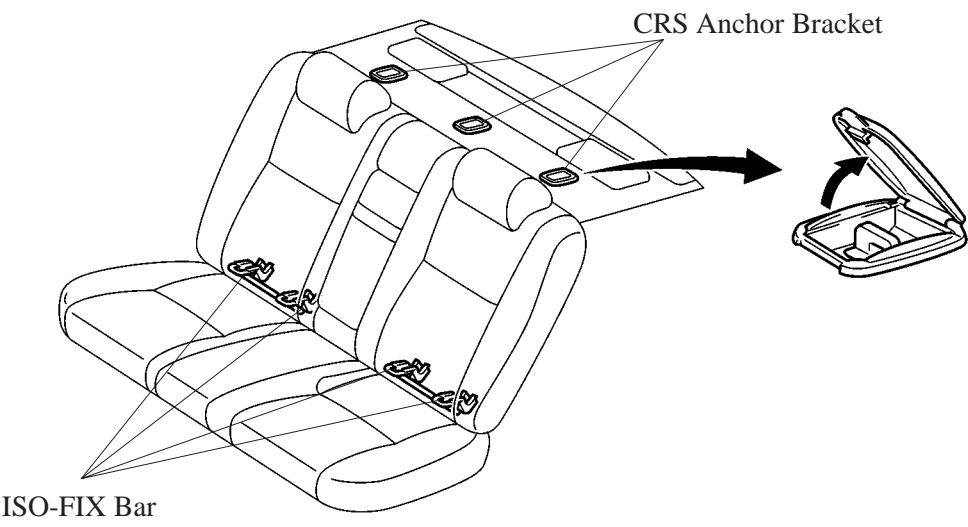

208BO18

SEAT BELT

1. General


- The following types of seat belts are provided:

Seat	Seat Belt Type	Remarks
Front Passenger	3-point ELR (Emergency Locking Retractor)	Electrical sensing type Pretensioner & Force Limiter
Rear Passenger (LH, RH, and Center)	3-point ELR & ALR (Automatic Locking Retractor)	—

- Seat belt comfort guide for children or small children are provided on the both sides of rear seats.

2. Seat Belt Comfort Guide

This comfort guide can be stored in the pocket on both sides of the rear seats.

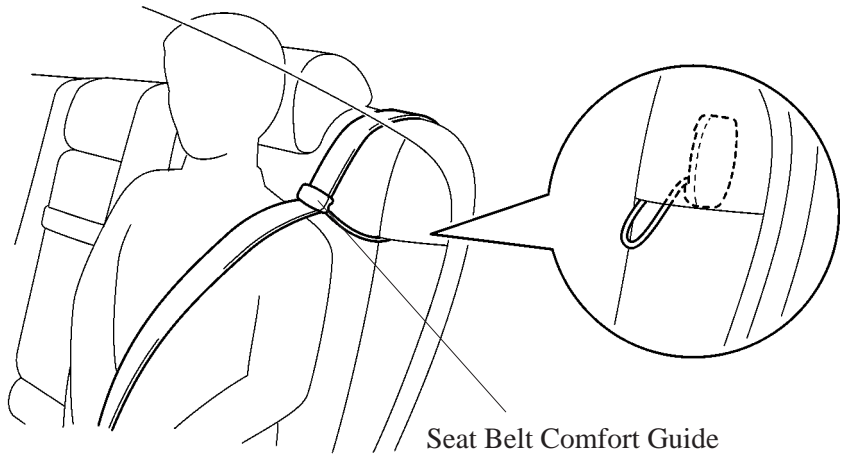

208BO19


3. Pretensioner and Force Limiter

In accordance with the ignition signal from the airbag sensor assembly, the seat belt pretensioner activates simultaneously with the deployment of SRS airbag for the driver and front passenger.

In the beginning of the collision, the seat belt pretensioner instantly pulls up the seat belt thus providing the excellent belt's effectiveness in restraining the occupant.

When the impact of a collision causes the tension of the seat belt applied to the occupant to reach a predetermined level, the force limiter activates to control the force.

BO

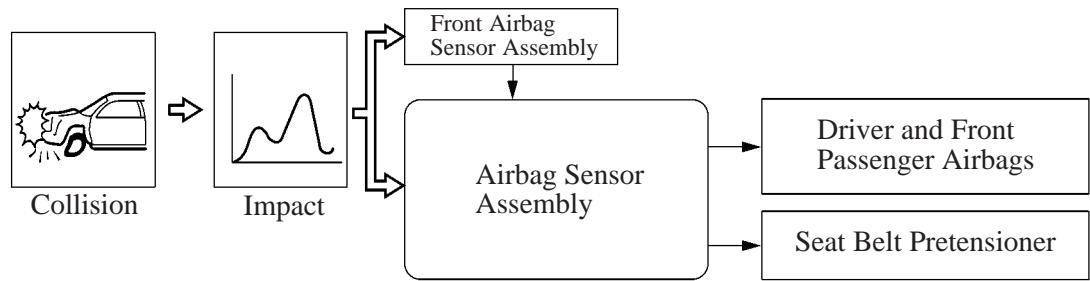

196BO21