


BRAKE WARNING LIGHT CIRCUIT

CIRCUIT DESCRIPTION

The brake warning light lights up when the brake fluid is insufficient, the EBD is abnormal, or the parking brake is applied.

WIRING DIAGRAM

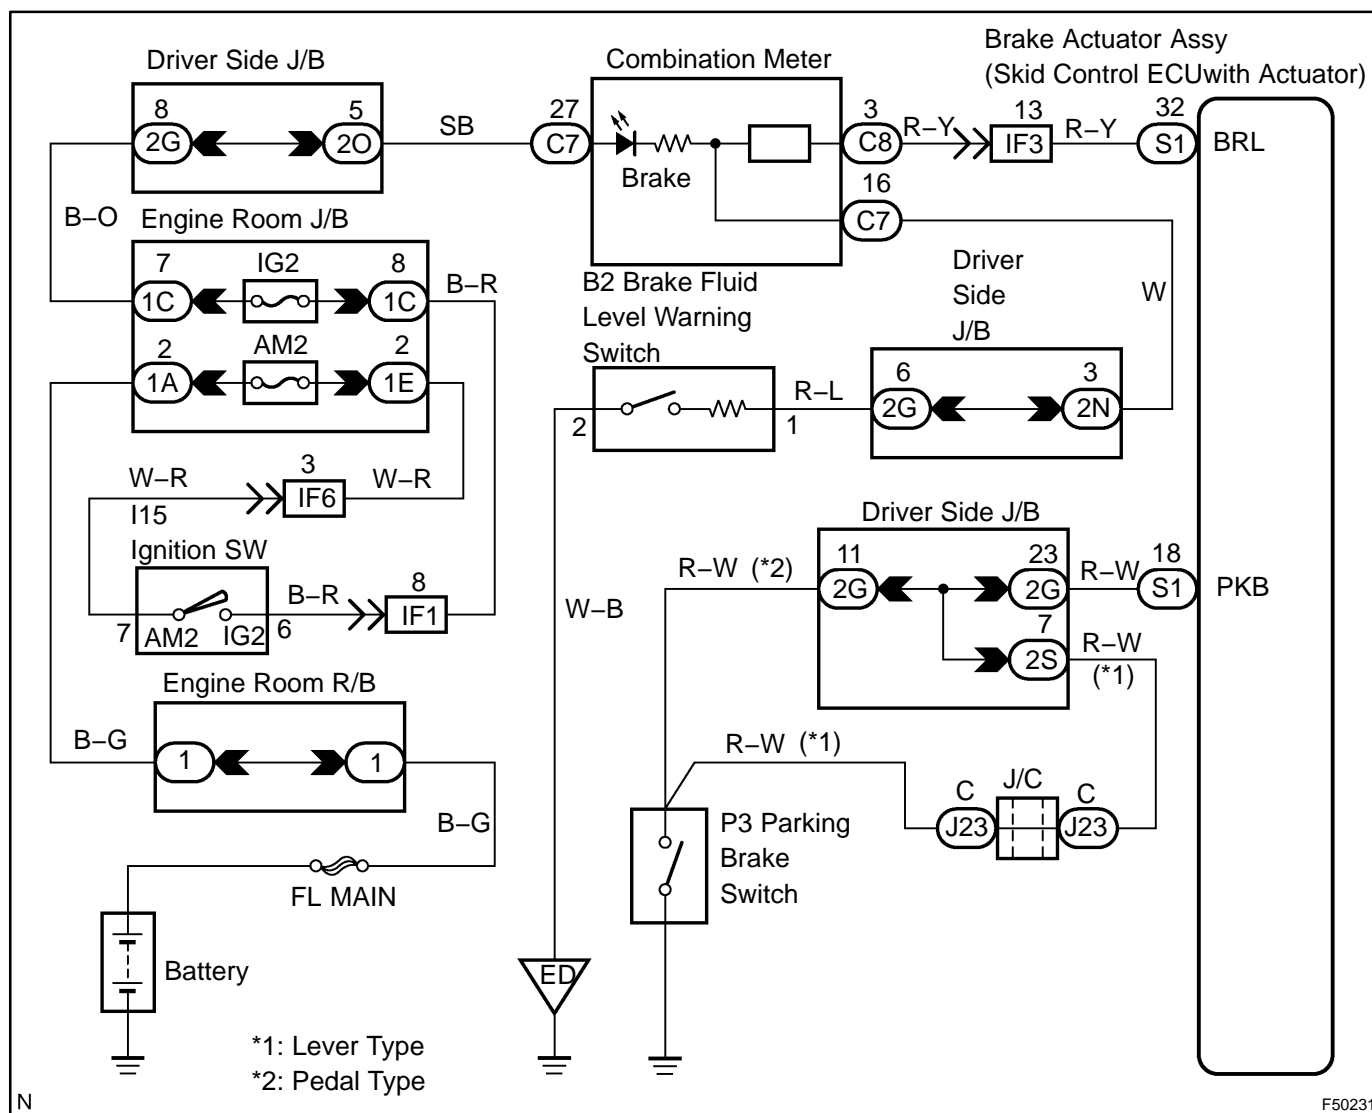

INSPECTION PROCEDURE**1 CHECK PARKING BRAKE SWITCH CIRCUIT(PKB CIRCUIT)****NG****REPAIR OR REPLACE PARKING BRAKE SWITCH CIRCUIT****OK****2 CHECK BRAKE FLUID LEVEL WARNING SWITCH CIRCUIT**

- (a) Check the harness and connector between the brake fluid level warning switch and skid control ECU.

NG**REPAIR OR REPLACE BRAKE FLUID LEVEL WARNING SWITCH CIRCUIT****OK****3 RECONFIRM DTC (SEE PAGE 05-938)**

A	Normal Code
B	Malfunction Code

B**REPAIR CIRCUIT INDICATED BY OUTPUT DTC (SEE PAGE 05-945)****A****4 INSPECT COMBINATION METER ASSY(BRAKE WARNING LIGHT CIRCUIT)**

- (a) Check the combination meter assy (see page 71-1).

NG**REPAIR OR REPLACE COMBINATION METER ASSY (SEE PAGE 05-1999)****OK****5 CHECK HARNESS AND CONNECTOR(SKID CONTROL ECU – COMBINATION METER) (SEE PAGE 01-32)**

- (a) Check the harness and connector between the skid control ECU and combination meter.

NG**REPAIR OR REPLACE HARNESS OR CONNECTOR****OK****CHECK AND REPLACE BRAKE ACTUATOR ASSY (SEE PAGE 32-58)**