


AUDIO SYSTEM

Steering Pad Switch

The audio control switches with high frequency use have been located on the steering wheel in the form of steering pad switch to improve the ease of use.

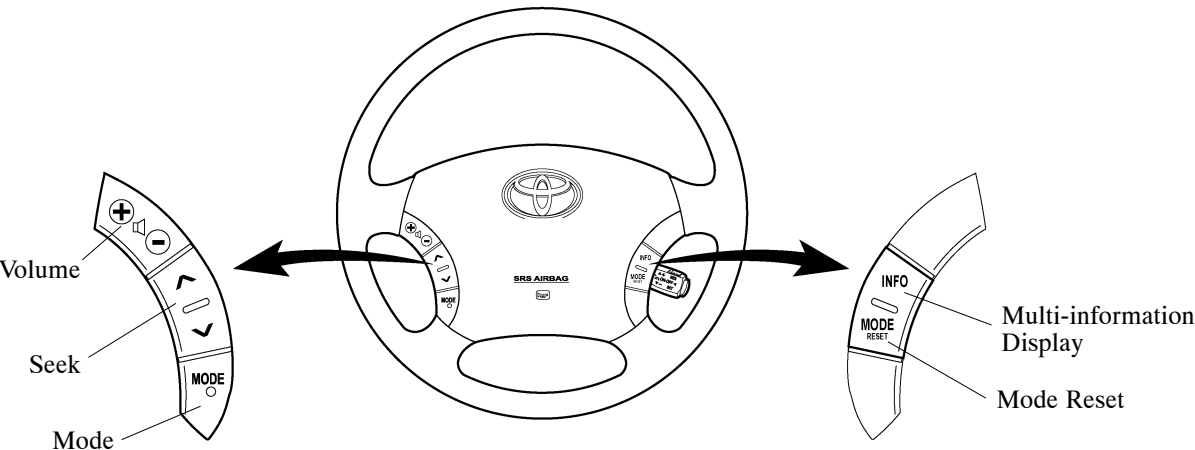

276CA18

Switch Function

Function			Push	Push and Hold
Audio	VOL		Audio Volume Up, Down	Continuous Increase or Decrease
	SEEK	AM/FM	Channel Up, Down	Seek Up, Down
		TAPE	Search FF, REW	FF, REW
		CD	Track Up, Down	Disc Up, Down
	MODE		Audio AM/FM, TAPE, CD Selection	Power OFF
Multi-Information display	INFO		Switching Multi-information display	—
	MODE RESET		—	Reset