


OVERHAUL

HINT:


COMPONENTS: See page 55-50

1. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY (See page 71-9)
2. REMOVE HEATER TO FOOT DUCT NO.1 (See page 71-9)
3. REMOVE BLOWER ASSY (See page 55-34)
4. REMOVE CLEAN AIR FILTER

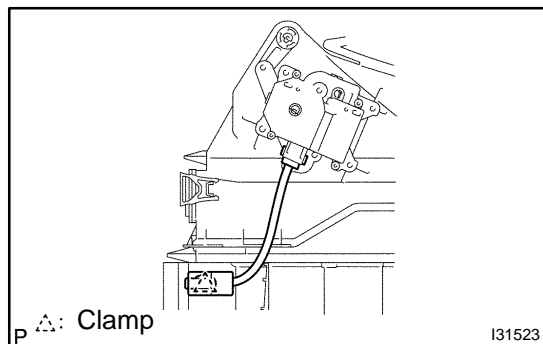


5. REMOVE COWL WIRE NO.2

- (a) Remove the clamp and cowl wire No. 2.

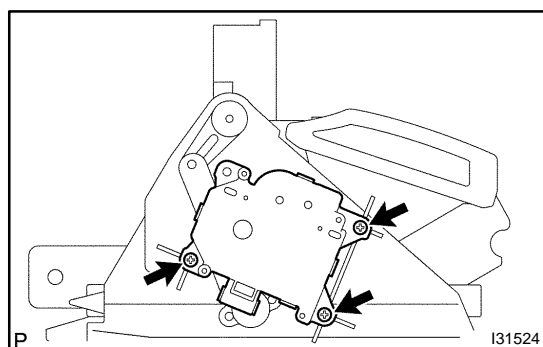


6. REMOVE RECIRCULATION DAMPER SERVO SUB-ASSY

- (a) Remove the 3 screws and recirculation damper servo sub-assy.

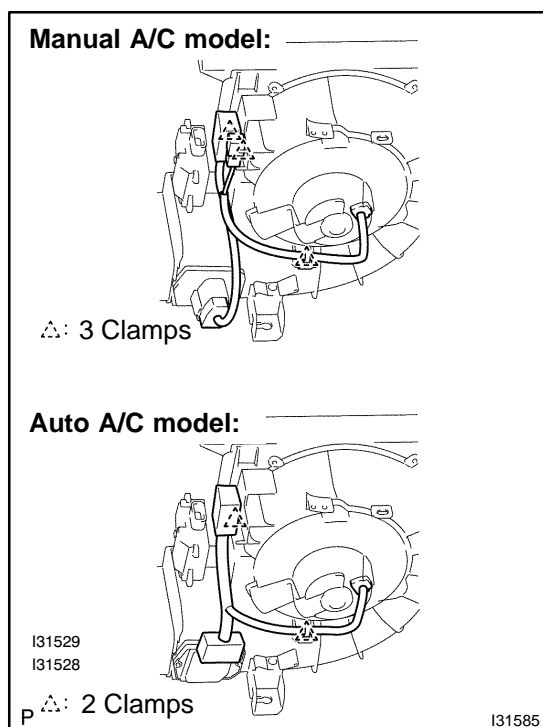


7. REMOVE INSTRUMENT PANEL WIRE NO.3


- (a) Manual A/C model:
Disconnect the connectors, remove the 3 clamps and instrument panel wire No. 3.
- (b) Auto A/C model:
Disconnect the connectors, remove the 2 clamps and instrument panel wire No. 3.

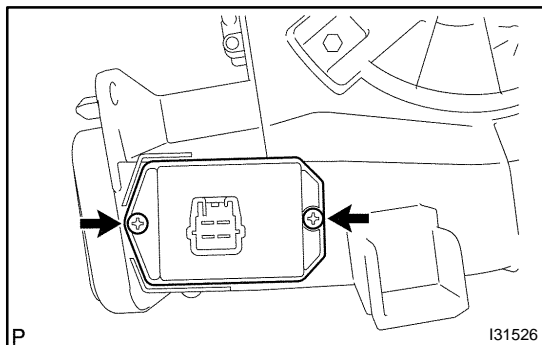**8. REMOVE BLOWER RESISTOR (MANUAL AIR CONDITIONING)**

- (a) Remove the 2 screws and blower resistor.

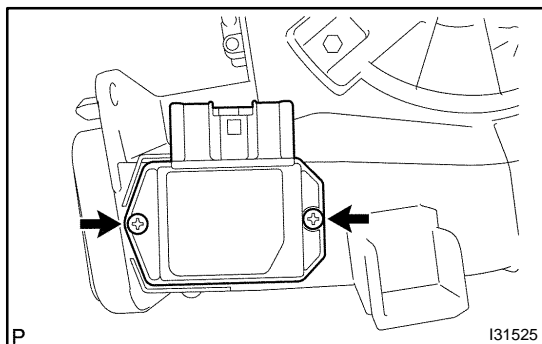**9. REMOVE BLOWER MOTOR CONTROL (AUTO AIR CONDITIONING)**

- (a) Remove the 2 screws and blower motor control.

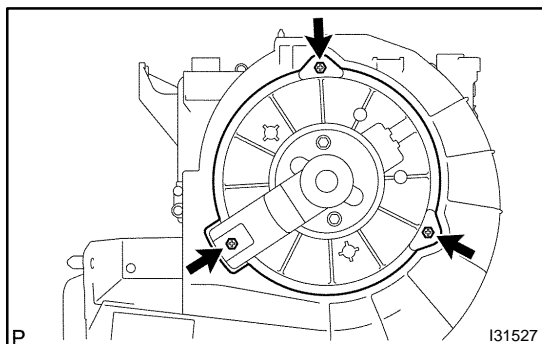**10. REMOVE BLOWER W/FAN MOTOR SUB-ASSY**

- (a) Remove the 3 screws and blower w/fan motor sub-assy.

11. INSTALL BLOWER ASSY (See page [55-34](#))**12. INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY (See page [71-9](#))**