


## OVERHAUL

HINT:


COMPONENTS: [See page 55-38](#)

1. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY  
([See page 71-10](#))
2. REMOVE HEATER TO FOOT DUCT NO.1 (LHD STEERING POSITION TYPE)  
([See page 55-21](#))
3. REMOVE AIR DUCT SUB-ASSY NO.2 (RHD STEERING POSITION TYPE)  
([See page 55-21](#))
4. REMOVE BLOWER ASSY  
([See page 55-21](#))
5. REMOVE AIR REFINER ELEMENT

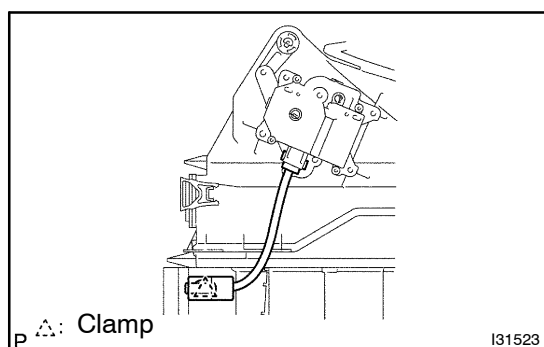


### 6. REMOVE COWL WIRE NO.2

- (a) Remove the clamp and cowl wire No. 2.

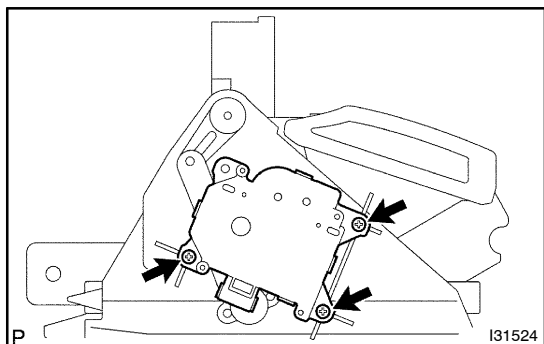


### 7. REMOVE RECIRCULATION DAMPER SERVO SUB-ASSY

- (a) Remove the 3 screws and recirculation damper servo sub-assy.

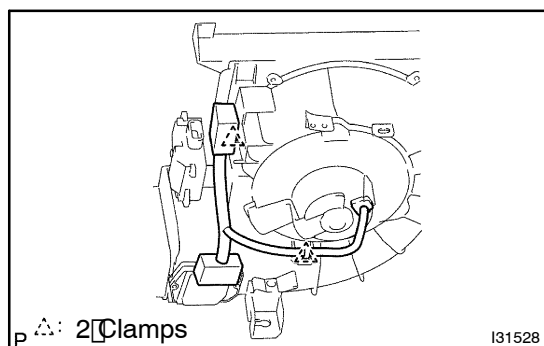


### 8. REMOVE INSTRUMENT PANEL WIRE NO.3

- (a) Disconnect the connectors, remove the 2 clamps and instrument panel wire No. 3.

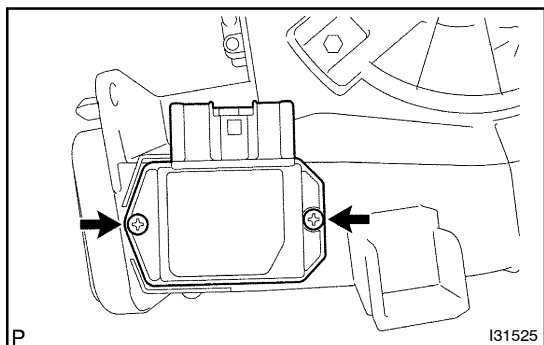**9. REMOVE BLOWER MOTOR CONTROL**

- (a) Remove the 2 screws and blower motor control.

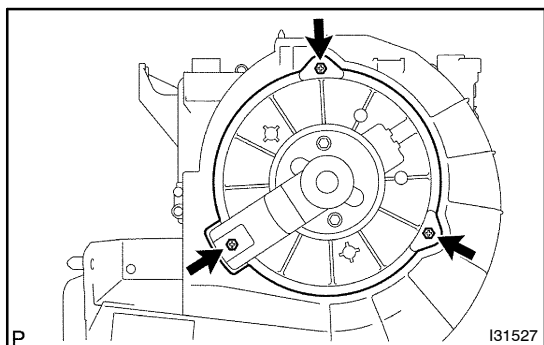**10. REMOVE BLOWER W/FAN MOTOR SUB-ASSY**

- (a) Remove the 3 screws and blower w/fan motor sub-assy.

**11. INSTALL BLOWER ASSY**

(See page 55-21)

**12. INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY**

(See page 71-10)