


# FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT REPLACEMENT

4104V-05

1. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY (SEE PAGE 71-16)
2. REMOVE AIR CONDITIONING RADIATOR ASSY (SEE PAGE 55-34)
3. REMOVE AIR BAG SENSOR ASSY CENTER (SEE PAGE 60-59)

## 4. REMOVE FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT

- (a) Remove the clip and washer and separate the top of the shift cable from the transaxle.
- (b) Remove the clip and shift cable from the control cable bracket.
- (c) Turn the lock and separate the shift cable from the shift lever retainer.
- (d) Separate the top of the shift cable from the shift lever assy.
- (e) Remove the 2 retainer set bolts from the floor.
- (f) Separate the retainer from the grommet.
- (g) Remove the select cable from the grommet.
- (h) Remove the shift cable through the floor hole and retainer.

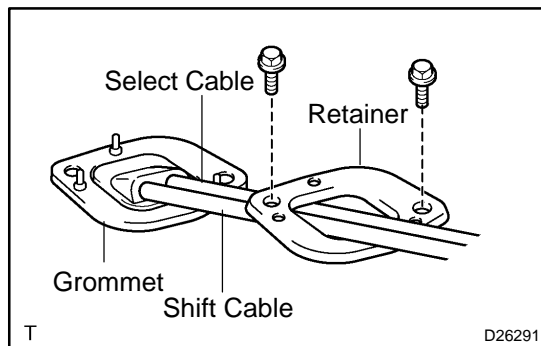

## 5. INSTALL FLOOR SHIFT CABLE TRANSMISSION CONTROL SHIFT


- (a) Put the shift cable through the floor hole and retainer.
- (b) Install the select cable to the grommet.
- (c) Install the retainer to the grommet.


### NOTICE:

**Fit 3 projections of the grommet into 3 holes of the retainer.**

- (d) Install the 2 retainer set bolts.

**Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)**

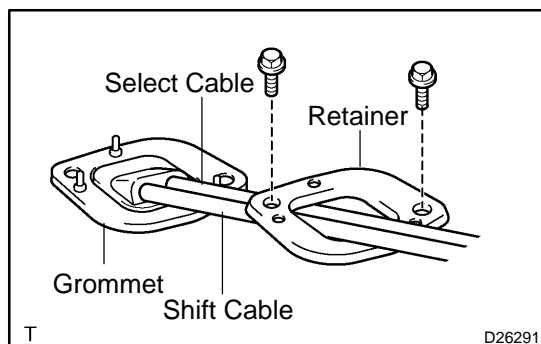

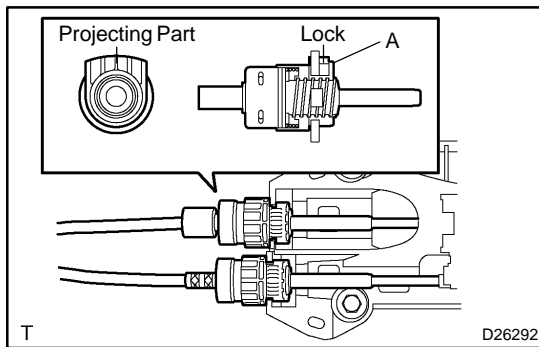

- (e) Connect the shift cable to the shift lever retainer.

**NOTICE:**

- The projecting part of the cable outer should face upward when the shift cable is installed.
- Make sure that after installation the cable outer lock is projecting from A shown in the illustration.

- (f) Install the top of the shift cable to the shift lever assy.  
(g) Connect the shift cable to the control cable bracket and install a new clip.  
(h) Connect the shift cable to the transaxle and install the washer and clip.

6. INSTALL AIR BAG SENSOR ASSY CENTER (SEE PAGE 60-59)
7. INSTALL AIR CONDITIONING RADIATOR ASSY (SEE PAGE 55-34)
8. INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY (SEE PAGE 71-16)
9. INSPECT SRS WARNING LIGHT (SEE PAGE 05-1452)