


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 2AZ-FE, 1AZ-FE]

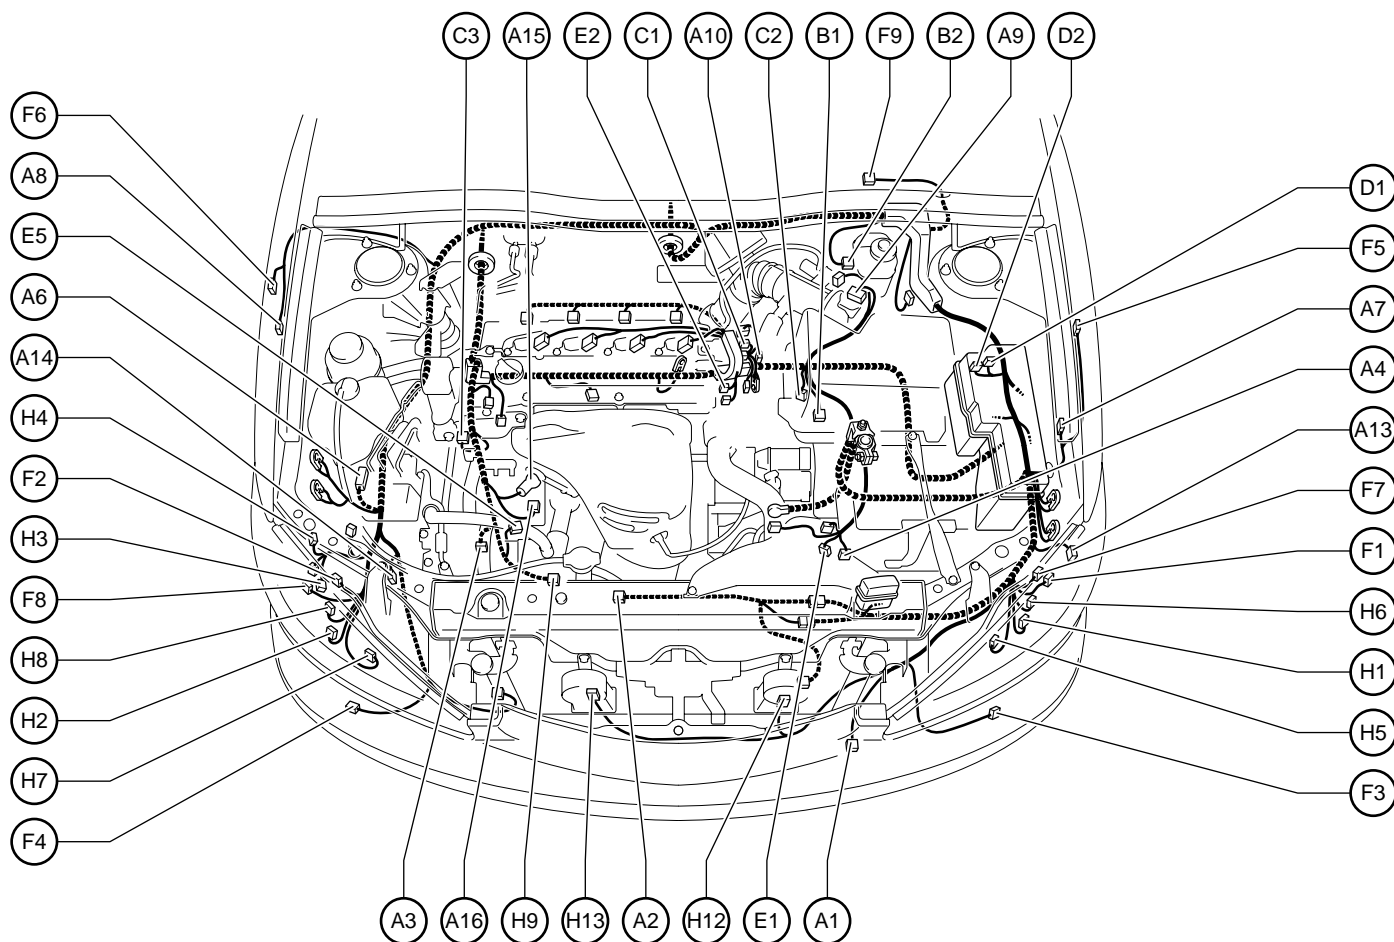

A 1 A/C Ambient Temp. Sensor

A 2 A/C Condenser Fan Motor

A 3 A/C Lock Sensor
A/C Magnetic Clutch

A 4 A/T Indicator Light SW
Back-Up Light SW
Neutral Start SW

A 6 ABS Actuator

A 7 ABS Speed Sensor Front LH

A 8 ABS Speed Sensor Front RH

A 9 Air Flow Meter

A10 Air Fuel Ratio Sensor

A13 Airbag Sensor Front LH

A14 Airbag Sensor Front RH

A15 Alternator

A16 Alternator

B 1 Back-Up Light SW

B 2 Brake Fluid Level Warning SW

C 1 Camshaft Position Sensor

C 2 Counter Gear Speed Sensor

C 3 Crankshaft Position Sensor

D 1 Diode (A/C No.1)

D 2 Diode (A/C No.2)

E 1 ECT Solenoid

E 2 EFI Water Temp. Sensor

E 5 Engine Oil Level Sensor

F 1 Front Clearance Light LH

F 2 Front Clearance Light RH

F 3 Front Fog Light LH

F 4 Front Fog Light RH

F 5 Front Side Turn Signal Light LH

F 6 Front Side Turn Signal Light RH

F 7 Front Turn Signal Light LH

F 8 Front Turn Signal Light RH

F 9 Front Wiper Motor

H 1 Headlight Beam Level Control Actuator LH

H 2 Headlight Beam Level Control Actuator RH

H 3 Headlight Cleaner Motor

H 4 Headlight Cleaner Relay

H 5 Headlight LH (High)

H 6 Headlight LH (Low)

H 7 Headlight RH (High)

H 8 Headlight RH (Low)

H 9 Heated Oxygen Sensor

H12 Horn (High)

H13 Horn (Low)