


SLIP INDICATOR LIGHT CIRCUIT

CIRCUIT DESCRIPTION

The SLIP indicator blinks during TRAC & VSC operation.

WIRING DIAGRAM

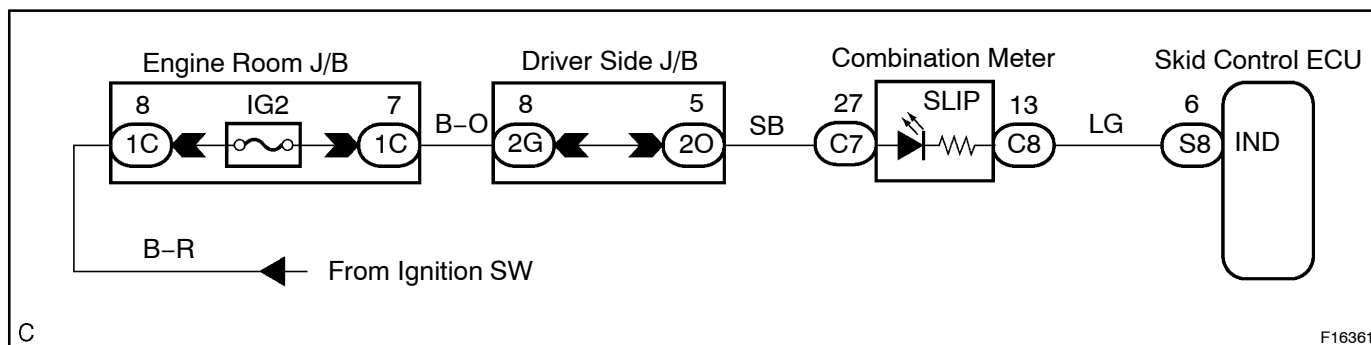

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the hand-held tester and start from step 2 in case of not using the hand-held tester.

1 PERFORM ACTIVE TEST BY HAND-HELD TESTER(SLIP INDICATOR LIGHT OPERATION)

- Select the item "SLIP INDI LIGHT" in the ACTIVE TEST and operate the SLIP indicator light on the hand-held tester.
- Check that "ON" and "OFF" of the SLIP indicator light can be shown on the combination meter by the hand-held tester.

OK

Go to step 4

NG

2 CHECK SLIP INDICATOR LIGHT

- Check that the SLIP indicator light is on for 3 seconds soon after ignition switch ON.

OK

END

NG

3 INSPECT COMBINATION METER ASSY (SLIP INDICATOR LIGHT CIRCUIT)**NG****REPAIR OR REPLACE COMBINATION METER ASSY****OK****4 CHECK HARNESS AND CONNECTOR (COMBINATION METER - SKID CONTROL ECU ASSY) ([See page 01-31](#))****NG****REPAIR OR REPLACE HARNESS OR CONNECTOR****OK****CHECK AND REPLACE SKID CONTROL ECU ASSY**