


E ELECTRICAL WIRING ROUTING

Position of Parts in Seat

[RHD : w/ Power Seat]

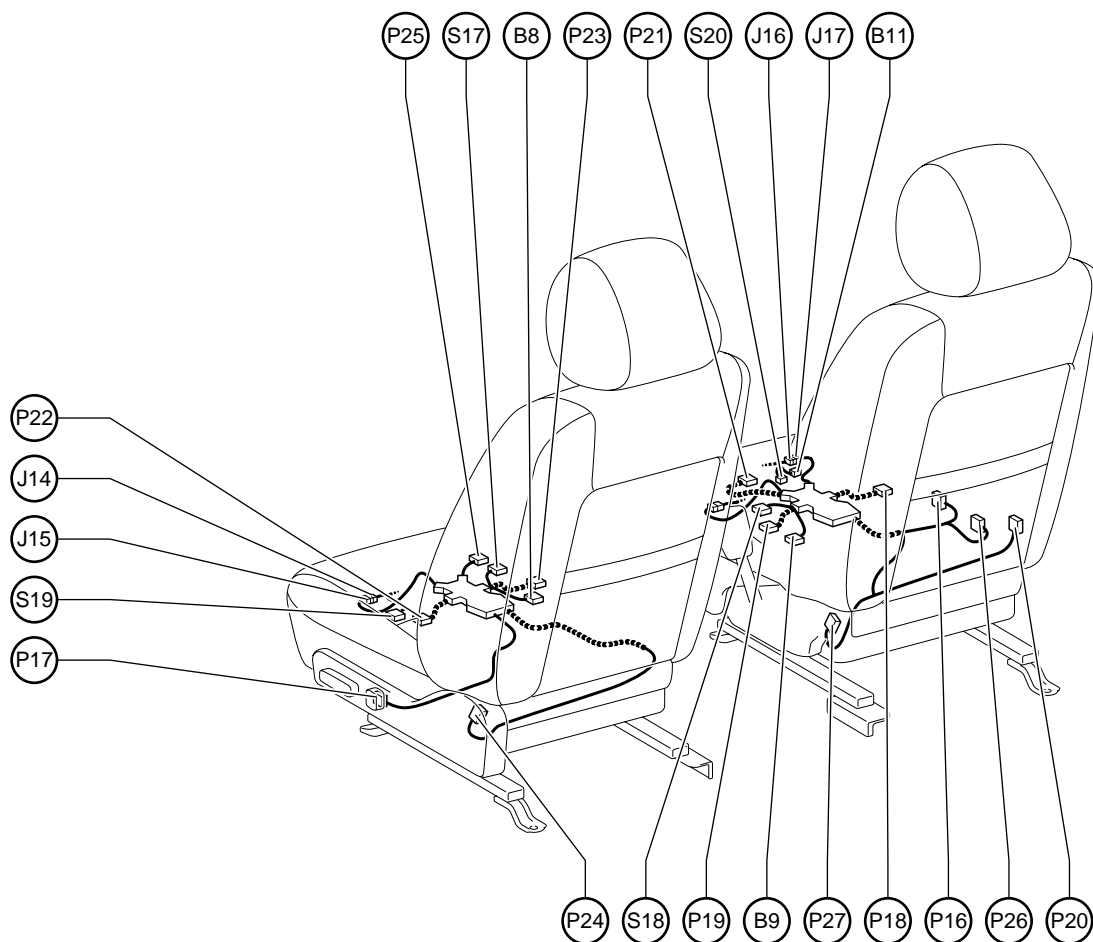

B 8 Buckle SW LH
Occupant Detection Sensor
B 9 Buckle SW RH
B 11 Buckle SW RH
Seat Position Airbag Sensor

S 17 Seat Heater LH
S 18 Seat Heater RH
S 19 Side Airbag Squib LH
S 20 Side Airbag Squib RH

J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 17 Junction Connector

P 16 Power Seat Control SW (Driver's Seat)
P 17 Power Seat Control SW (Front Passenger's Seat)
P 18 Power Seat Motor (Driver's Seat Front Vertical Control)
P 19 Power Seat Motor (Driver's Seat Lifter Control)
P 20 Power Seat Motor (Driver's Seat Reclining Control)
P 21 Power Seat Motor (Driver's Seat Slide Control)
P 22 Power Seat Motor
(Front Passenger's Seat Front Vertical Control)
P 23 Power Seat Motor
(Front Passenger's Seat Lifter Control)
P 24 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P 25 Power Seat Motor
(Front Passenger's Seat Slide Control)
P 26 Power Seat Control SW
(Driver's Seat Lumbar Support Control)
P 27 Power Seat Motor
(Driver's Seat Lumbar Support Control)