


FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT REPLACEMENT

4105C-01

1. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY
(See page 71-10)
2. REMOVE AIR CONDITIONING RADIATOR ASSY
(See page 55-21)
3. REMOVE AIR BAG SENSOR ASSY CENTER
(See page 60-54)
4. REMOVE FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT
 - (a) Remove the clip and washer and separate the top of the select cable from the transaxle.
 - (b) Remove the clip and select cable from the control cable bracket.
 - (c) Turn the lock and separate the select cable from the shift lever retainer.
 - (d) Remove the clip and separate the top of the select cable from the shift lever assy.

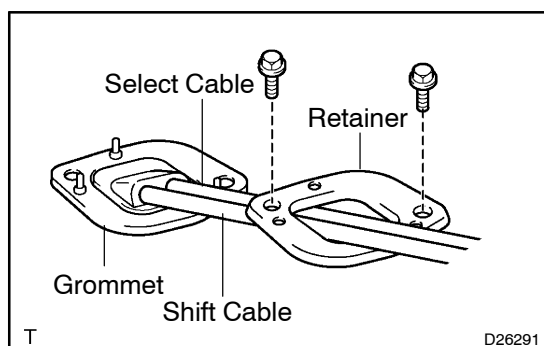

- (e) Remove the 2 retainer set bolts from the floor.
- (f) Separate the retainer from the grommet.
- (g) Remove the select cable from the grommet.
- (h) Remove the select cable through the floor hole and retainer.

5. INSTALL FLOOR SHIFT CABLE TRANSMISSION CONTROL SELECT


- (a) Put the select cable through the floor hole and retainer.
- (b) Install the select cable to the grommet.
- (c) Install the retainer to the grommet.


NOTICE:

Fit 3 projections of the grommet into 3 holes of the retainer.

- (d) Install the 2 retainer set bolts.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

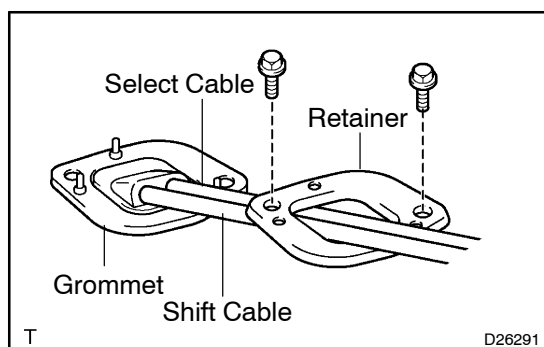


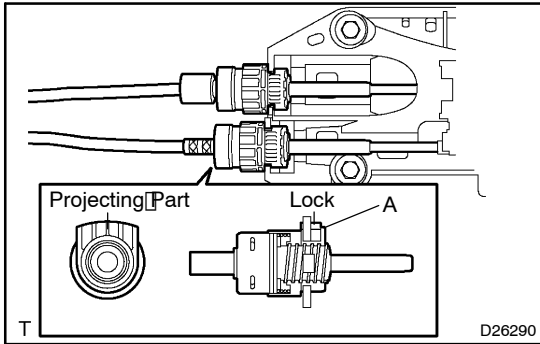

(e) Connect the select cable to the shift lever retainer.

NOTICE:

- The projecting part of the cable outer should face upward when the select cable is installed.
- Make sure that after installation the cable outer lock is projecting from A shown in the illustration.

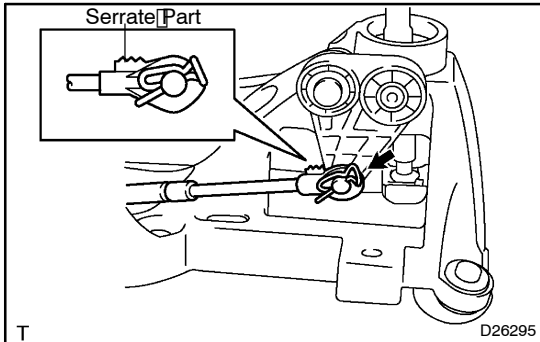

(f) Connect the top of the select cable to the shift lever assy and install the clip.

NOTICE:

- The serrate part of the select cable point should face upward when the select cable point is connected.
- the clip should be inserted to the direction shown in the illustration.

(g) Connect the top of the select cable to the shift lever assy and install the clip.

(h) Connect the select cable to the control cable bracket and install a new clip.

(i) Connect the select cable to the transaxle and install the washer and clip.

6. INSTALL AIR BAG SENSOR ASSY CENTER

(See page 60-54)

7. INSTALL AIR CONDITIONING RADIATOR ASSY

(See page 55-21)

8. INSTALL INSTRUMENT PANEL SAFETY PAD SUB-ASSY

(See page 71-10)

9. INSPECT SRS WARNING LIGHT (See page 05-758)