


TRANSMISSION REVOLUTION SENSOR REPLACEMENT


400G6-01

1. REMOVE BATTERY
2. REMOVE ENGINE COVER SUB-ASSY NO.1
3. REMOVE AIR CLEANER ASSY
4. REMOVE AIR CLEANER HOSE NO.1

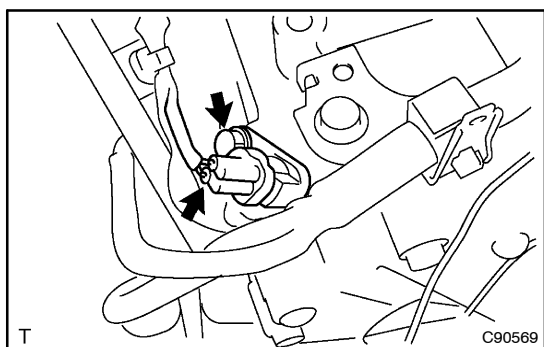


5. REMOVE TRANSMISSION REVOLUTION SENSOR(NT SENSOR)

- (a) Disconnect the transmission revolution sensor connector.
- (b) Remove the bolt and transmission revolution sensor.

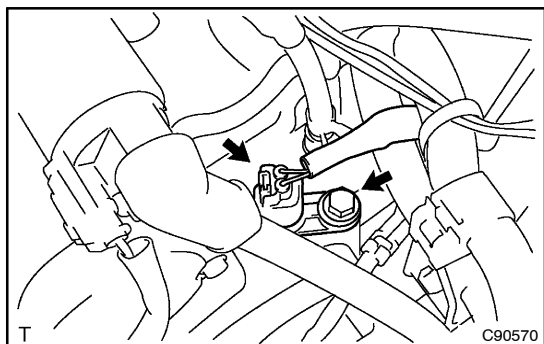

6. REMOVE TRANSMISSION REVOLUTION SENSOR(NC SENSOR)

- (a) Disconnect the transmission revolution sensor connector.
- (b) Remove the bolt and transmission revolution sensor.

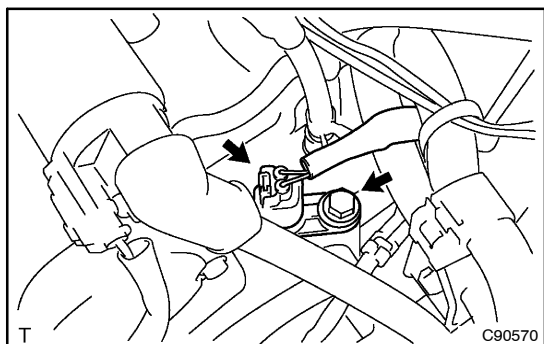


7. INSTALL TRANSMISSION REVOLUTION SENSOR(NC SENSOR)

- (a) Coat an O-ring with ATF.
- (b) Install the transmission revolution sensor with the bolt.
Torque: 11.3 N·m (115 kgf·cm, 8 ft·lbf)

HINT:

Make sure of the manufacturer's name.

- (c) Connect the transmission revolution sensor connector.

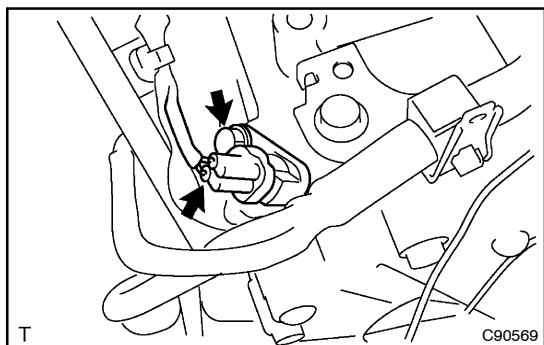**8. INSTALL TRANSMISSION REVOLUTION SENSOR(NT SENSOR)**

- (a) Coat an O-ring with ATF.
- (b) Install the transmission revolution sensor with the bolt.

Torque: 11.3 N·m (115 kgf·cm, 8 ft·lbf)

HINT:

Make sure of the manufacturer's name.

- (c) Connect the transmission revolution sensor connector.

9. INSTALL AIR CLEANER HOSE NO.1**10. INSTALL AIR CLEANER ASSY**

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

11. INSTALL ENGINE COVER SUB-ASSY NO.1